



ASUS GL752VW-DH74 Screen Replacement

This guide demonstrates the removal of the Asus...

Written By: Maxwell Seibert



INTRODUCTION

This guide demonstrates the removal of the Asus GL752VW-DH74 display. Make sure that the laptop is unplugged before utilizing this guide.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tool](#) (1)
- [Metal Spudger Set](#) (1)



PARTS:

- [Asus GL752VW-DH74 Screen](#) (1)

Step 1 — Battery



- Remove the 3 small screws located underneath the disk drive.

Step 2



- Unscrew the nine remaining 8 mm Phillips-head screws on the back of the device.

Step 3




- Use the opening tool to pry the back of the laptop case from the top

Step 4




- Disconnect the 3 cables connecting the motherboard to the keyboard.

Step 5

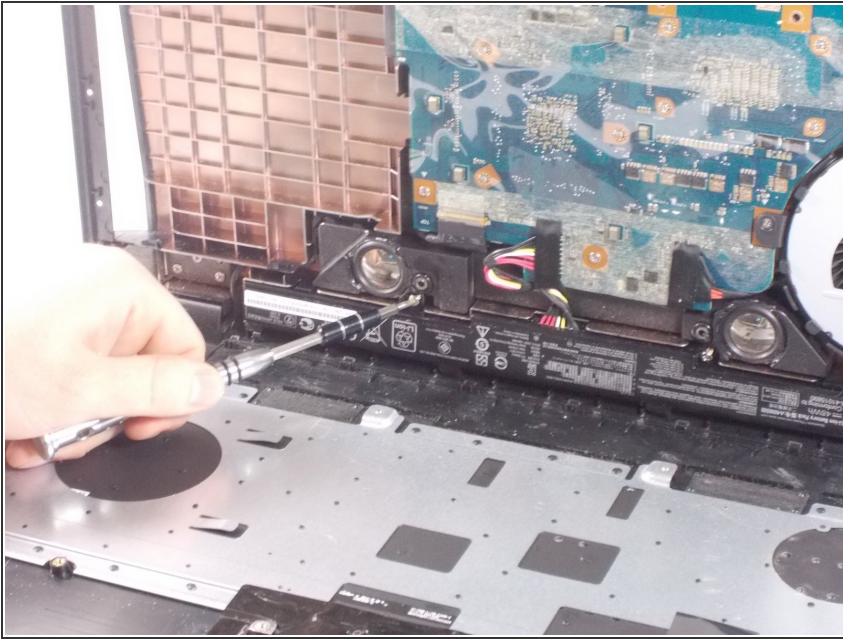


- Unscrew the two 8mm screws attached to the battery

Step 6

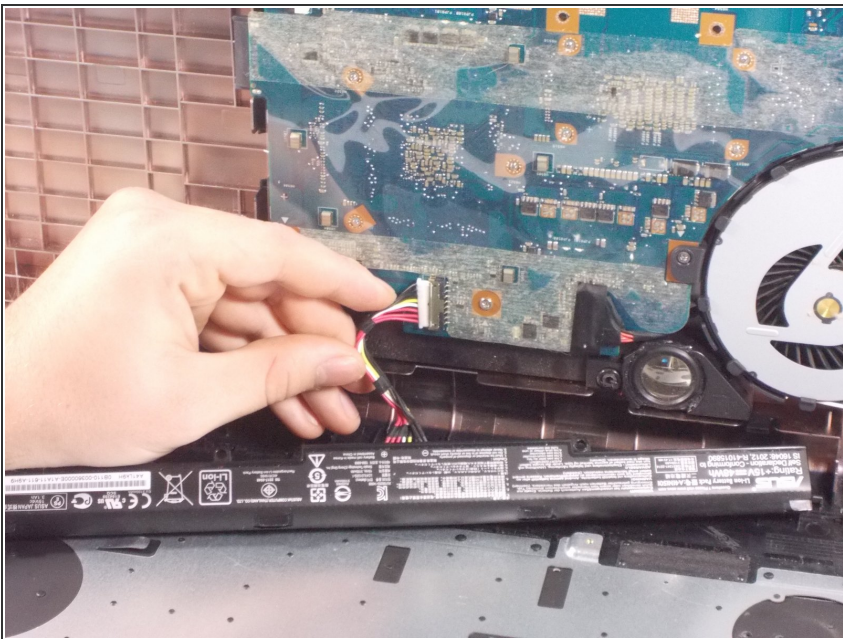

- Disconnect the bundled cable connector and remove the battery.

Step 7 — Screen

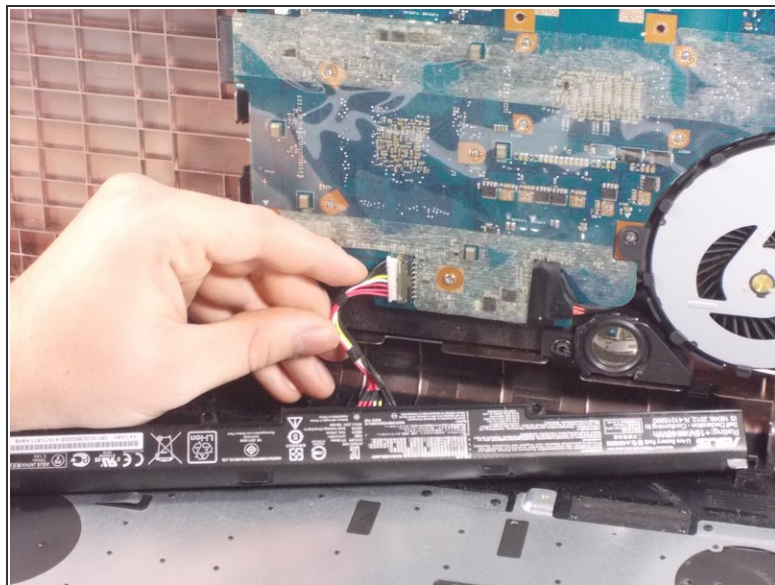



- Follow the Battery Replacement Guide and remove the battery.

Step 8



- Unhinge the two hinge covers on the back with a unhooking tool.
- i* This is done to ensure the plastic hinge covers are not damaged.

Step 9

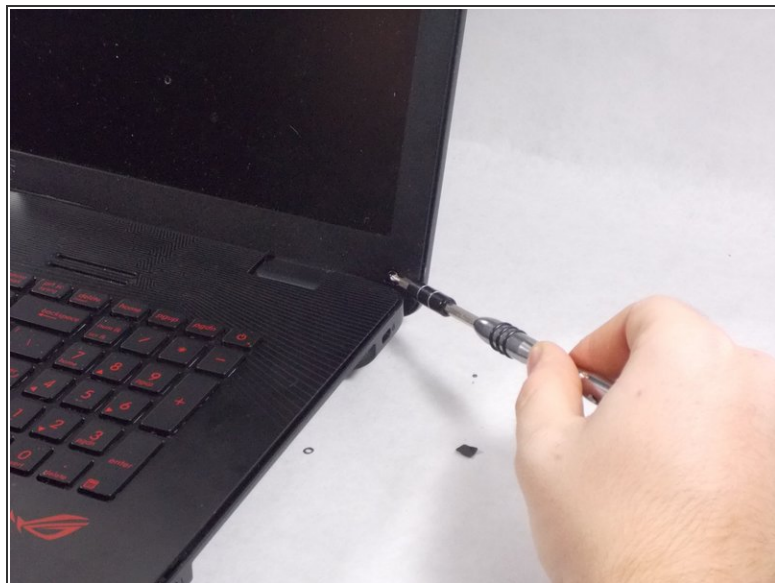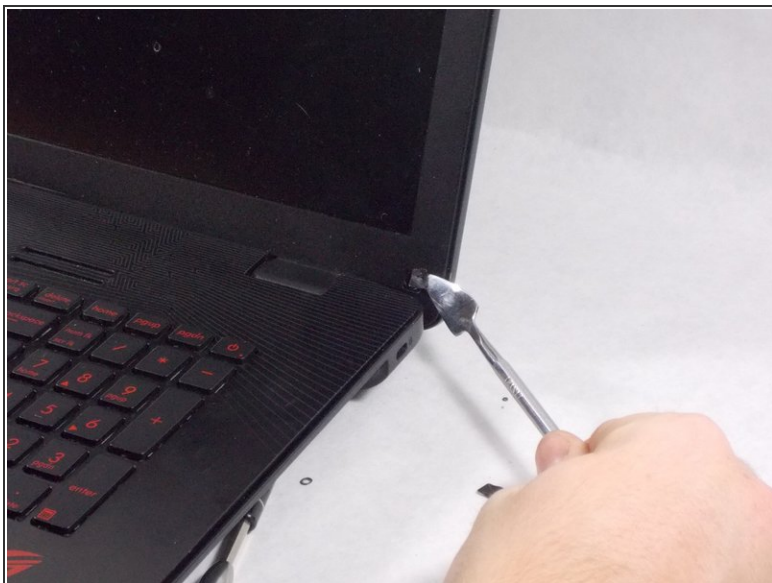


- Remove the two tape covers and screws on the screen bezel.

Step 10





- Use the metal spudger tool to pop out the screen bezel from all four sides.

Step 11

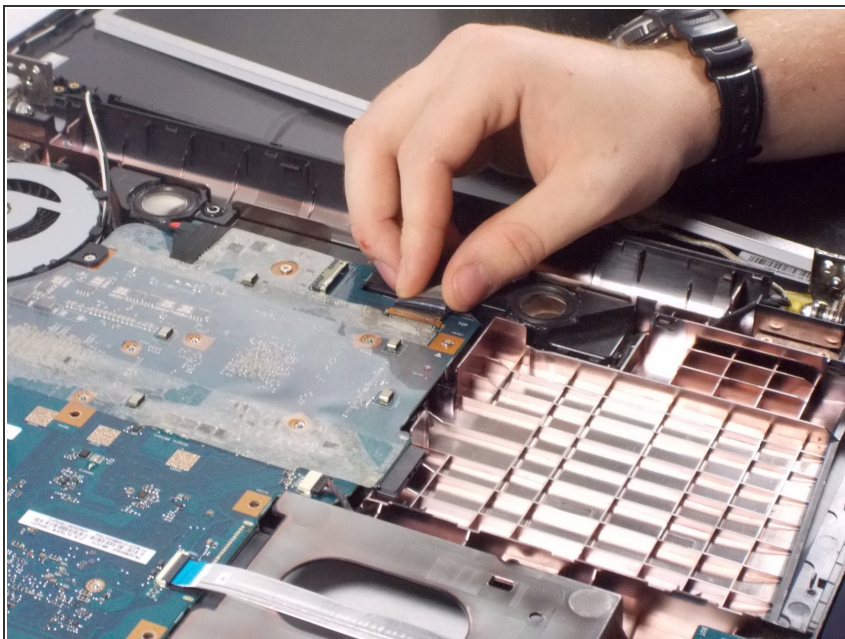

- Remove the SATA cable attached to the screen.

Step 12

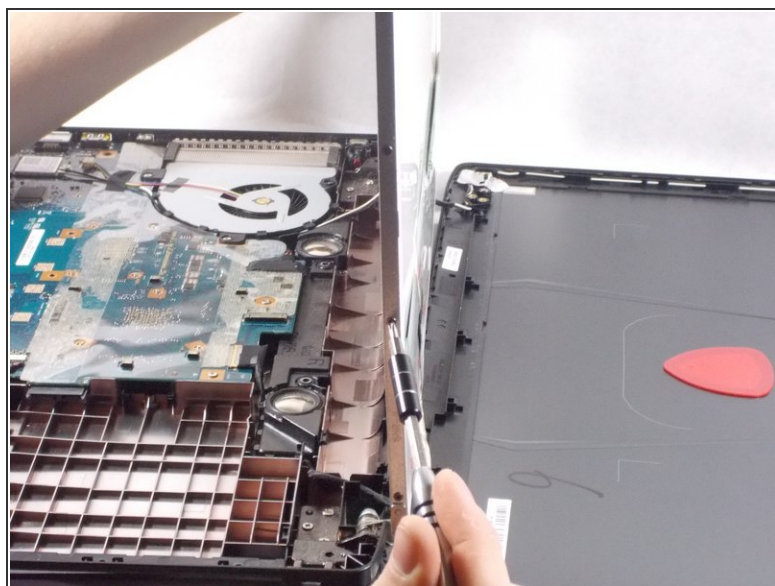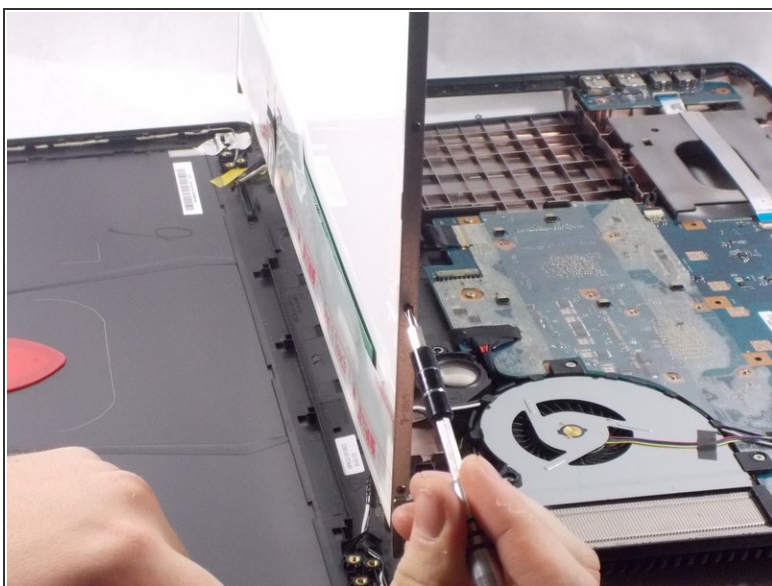

- Unscrew the following screws and remove the screen from the casing.

To reassemble your device, follow these instructions in reverse order.