

Apple iPod Hi-Fi Batteries Replacement

How to remove and replace the batteries of the Apple iPod Hi-Fi.

Written By: Timothy Scheuermann



INTRODUCTION

This guide details how to replace the batteries in the Apple iPod Hi-Fi speaker system.



TOOLS:

- Coin (1)
- Spudger (1)

Step 1 — Batteries



- Put your coin in the battery lock on the back of the the Hi-Fi. Turn the coin to the left to release the battery panel.
- Remove the battery panel with your hands.
- You can also use a metal spudger or flathead screwdriver to open the battery lock instead of a coin.

Step 2



Remove the six D batteries from the device.

To reassemble your device, follow these instructions in reverse order.