



JVC MP-XP7210D RAM Replacement

Written By: Alex Barblexi



Step 1 — RAM



- Remove the screws of the backplate.

⚠ See part 2

- Remove the battery after the screws are removed.

Step 2



- Push and slide to the right.

⚠ There are 2 locking lugs.

Step 3 — Remove DIMM



- Push both locking lugs to the sides.
- Pull it out.
- 128 MB (max. 256MB) PC133

To reassemble your device, follow these instructions in reverse order.