



# HP EliteBook 1040 G4 Battery Replacement

Use this guide to replace the battery on the HP...

Written By: Hannah DiMartino



# INTRODUCTION

Use this guide to replace the battery on the HP Elitebook 1040 G4. The battery is essential for providing power to the laptop. A faulty battery can cause many adverse effects on your laptop experience: from overheating to computer crashes, or even just simple difficulties with charging or holding a charge. Although the battery in this computer is rechargeable, the battery itself may need to be replaced after long and repeated use.

To complete this guide, you will need a T5 Torx head screwdriver and a Phillips #00 screwdriver.

Before beginning, be sure to unplug and completely power off your computer.

---

## TOOLS:

[T5 Torx Screwdriver](#) (1)


[Phillips #00 Screwdriver](#) (1)

## PARTS:

[HP EliteBook 1040 G4 Battery](#) (1)

---

## Step 1 — Back Cover

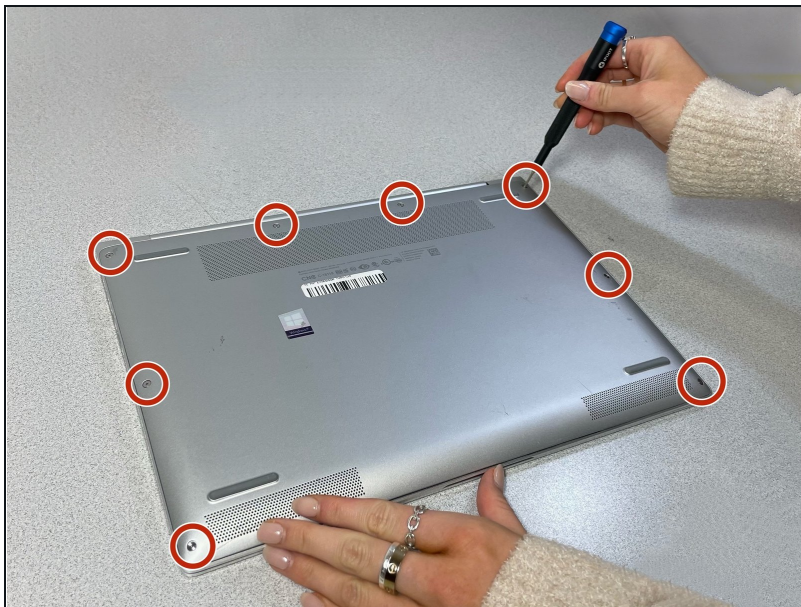

- Use a T5 Torx screwdriver to remove the eight 5 mm screws securing the back cover to the chassis.




## Step 2



- Lift the back cover up and off the device.


## Step 3 — Battery

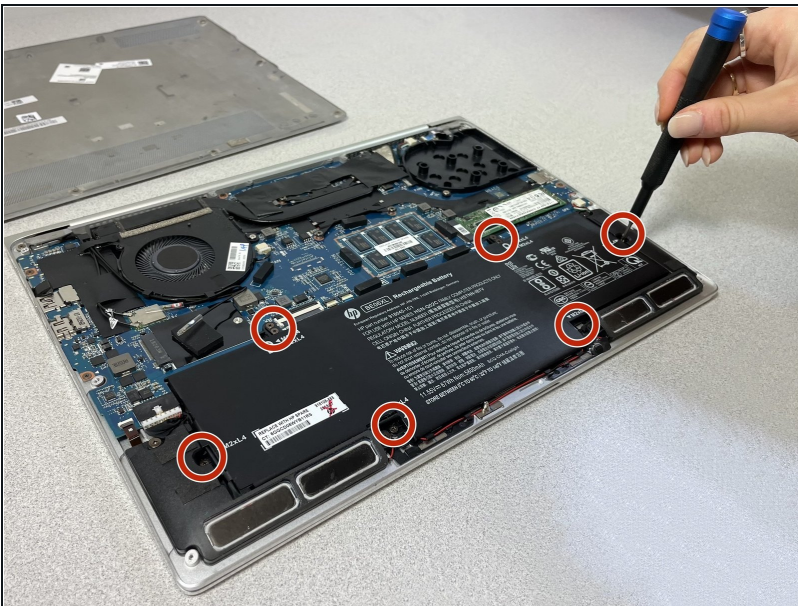

- Use a Phillips #00 screwdriver to remove the eight 4 mm screws securing the battery to the motherboard.




## Step 4

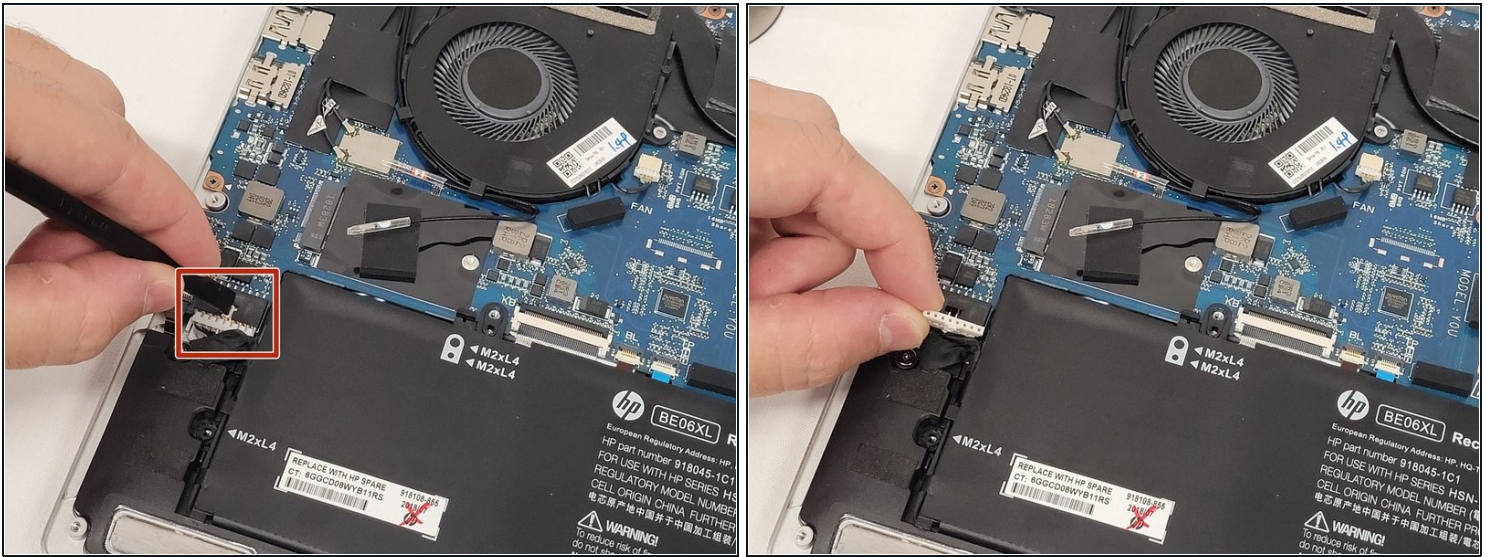

- Use a plastic spudger to carefully disconnect the battery pin connector from its port, slowly lifting the pin connector from each side until it releases.

## Step 5

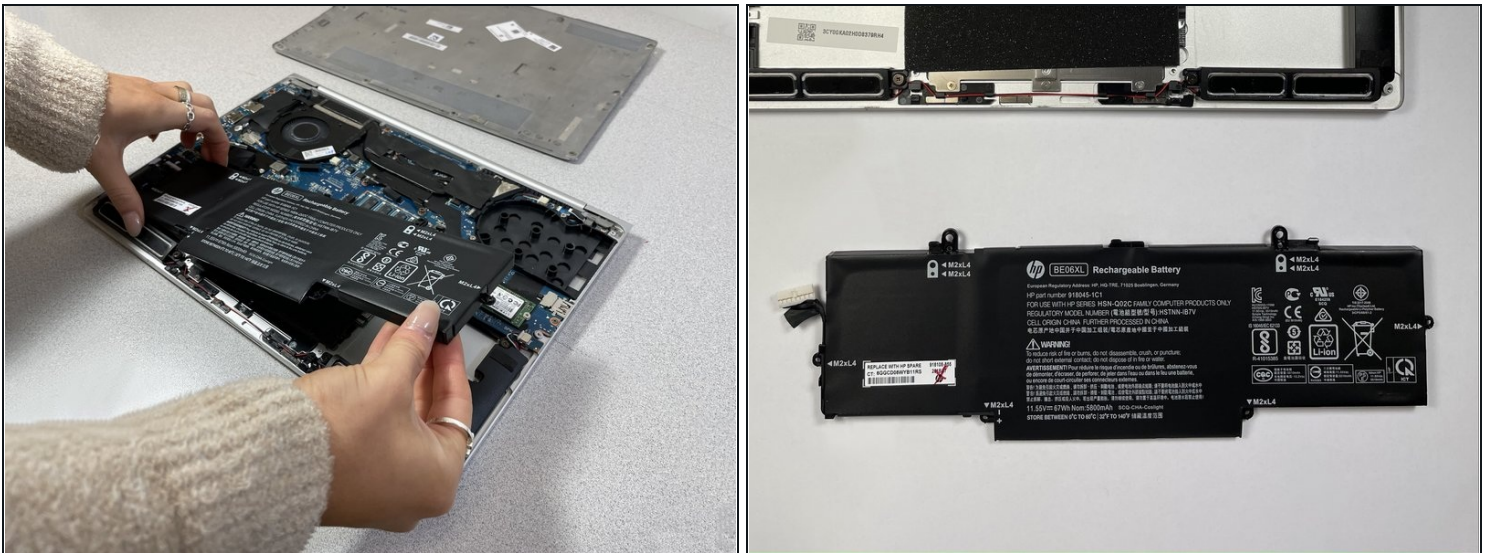

- Lift and remove the battery from the device.

---

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).