



# HP Elitebook 6930p Battery Removal

How to remove the battery in the HP Elitebook 6930p, 6735b, 6730b, or 6530b.

Written By: Richdave



---

## INTRODUCTION

You will learn how to replace the battery.

---



### PARTS:

- [HP EliteBook 6930p, 6735b, 6730b, 6530b Replacement Laptop Battery](#) (1)
-

## Step 1 — Battery Removal



- Flip laptop over and locate the battery release button
- Push release button to the left to release battery and gently pull battery from the laptop

To reassemble your device, follow these instructions in reverse order.