



HP EliteBook 1040 G4 Display Replacement

Use this guide to replace the front display on...

Written By: SW Reeves



INTRODUCTION

Use this guide to replace the front display on the HP Elitebook 1040 G4. The front display is essential to provide the best quality experience and picture for the user. If you are experiencing problems with the front display, whether a crack or a pixelation problem, you most likely need to repair or replace your front display.

To complete this guide, you will need a #T5 Torx head screwdriver and a Phillips #00 screwdriver. Additionally, a iFixit opening tool will be needed.

Before beginning, be sure to completely power off and unplug your computer.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Display




- Wedge an opening tool between the display and the chassis, gently prying around the perimeter until the display completely releases.

Step 2

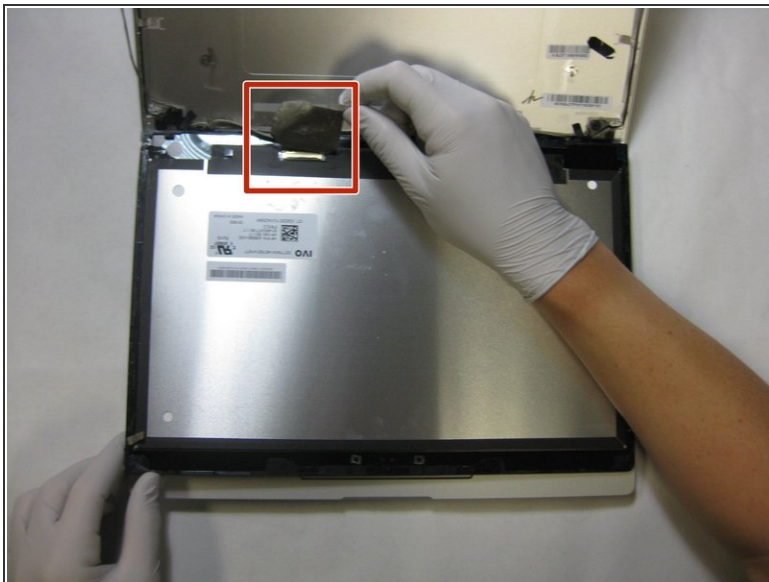

- Lift the metal arm, then pull the display ribbon cable directly out of its port.

Step 3

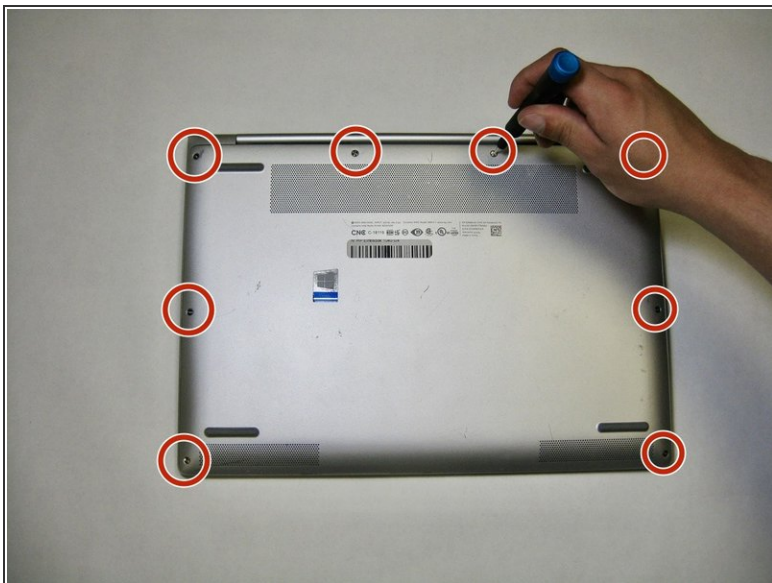


- Use a T5 Torx screwdriver to remove the eight 5 mm screws securing the back cover to the chassis.

Step 4




- Remove the hinge cover.

Step 5

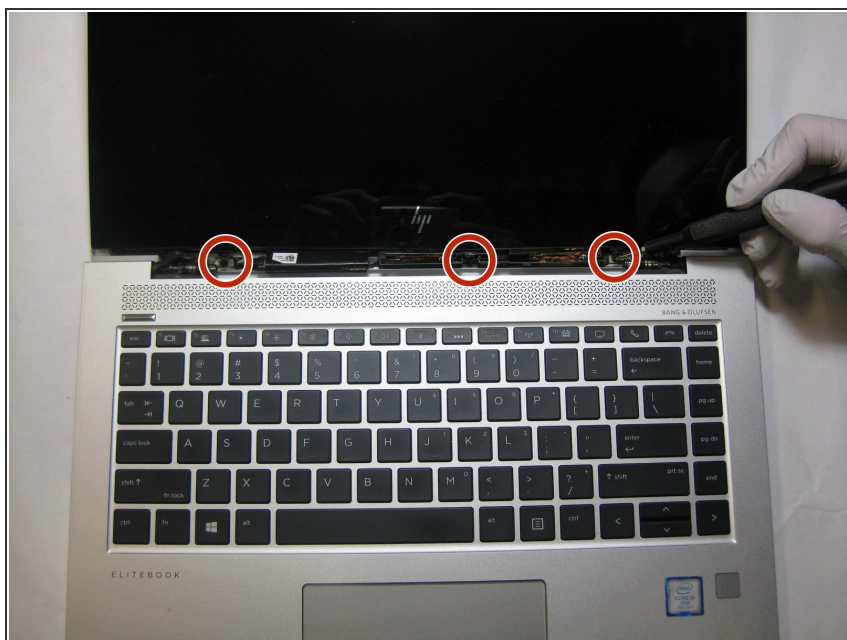

- Use a Phillips #00 screwdriver to remove the three 5 mm black screws that securing the display.

Step 6

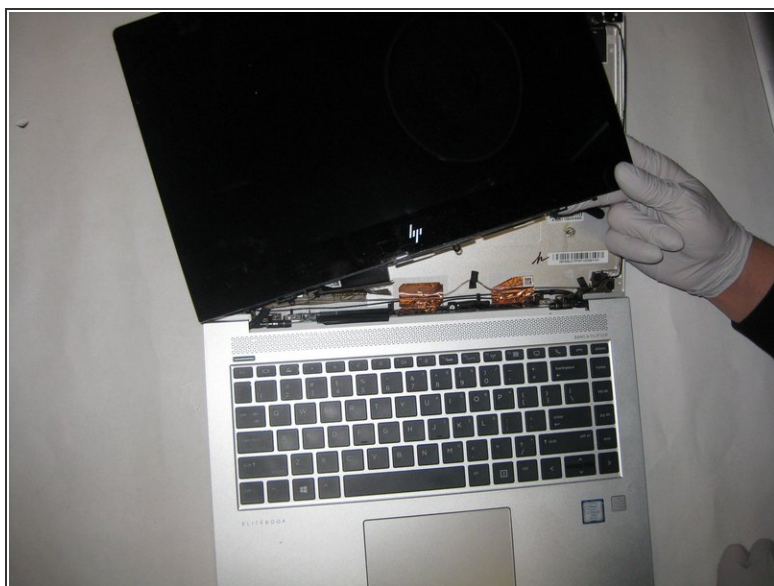

- Lift the display up and out of its housing.

To reassemble your device, follow these instructions in reverse order.