



Craftsman Model 315.10721 Table Guard Replacement

This guide will show the proper steps for replacing the table guard on the saw.

Written By: Riley Hilliker



INTRODUCTION

The table guard is essential in making sure the Craftsman Model 315.10721 makes the desired cuts. Keep in mind when performing the replacement that disassembling the table guard is time consuming.

TOOLS:

- [Flathead Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Table Guard



- Using a flathead screwdriver, remove the 1/2" flathead screw to allow the table guard to pivot.

Step 2




- Pivot the table guard from its upright position to an angle.
- Using a Phillips #1 screwdriver, remove the 1" Phillips screw and the nut on the opposite side.

Step 3



- Using the Phillips #1 screwdriver, remove eight 1" Phillips screws from the main case.
- Carefully remove the main case to expose the inside of the saw.

Step 4

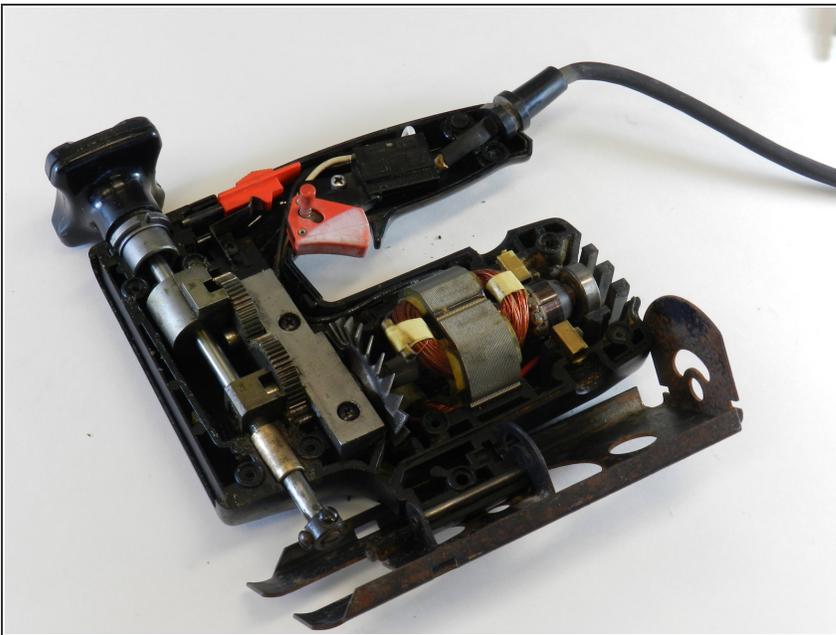

- Remove the old table guard by gently lifting it away from the main case.
- ★ Replace the old table guard with the new one by placing it in the same orientation as the one removed.

To reassemble your device, follow these instructions in reverse order.