



Mac Mini Mid 2010 Fan Replacement

Removing the Mac mini's single fan.

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace a noisy worn-out fan.



TOOLS:

- [T6 Torx Screwdriver](#) (1)



PARTS:

- [Intel Mac Mini \(Mid 2010\) Fan](#) (1)

Step 1 — Bottom Cover



- Place your thumbs in the depressions cut into the bottom cover.
- Rotate the bottom cover counter-clockwise until the white dot painted on the bottom cover is aligned with the ring inscribed on the outer case.

Step 2



- Tilt the mini enough to allow the bottom cover to fall away from the outer case.
- Remove the bottom cover and set it aside.

Step 3 — Fan



- Remove the two 11.3 mm T6 Torx screws securing the fan to the logic board near the antenna plate.

Step 4



- Lift the ear of the fan nearest the RAM up off the standoff secured to the outer case.
- ⓘ If the fan doesn't separate from the standoff screw with a moderate amount of force, you can use a T6 Torx driver to simply remove this screw.

Step 5



- Lift the fan out of the mini for enough clearance to access its connector.
- Carefully pull the fan cables upward to lift the fan connector up out of its socket on the logic board.
- Remove the fan.

To reassemble your device, follow these instructions in reverse order.