




Samsung Galaxy Media Player 5 Earpiece Speaker Replacement

Written By: China Ayala

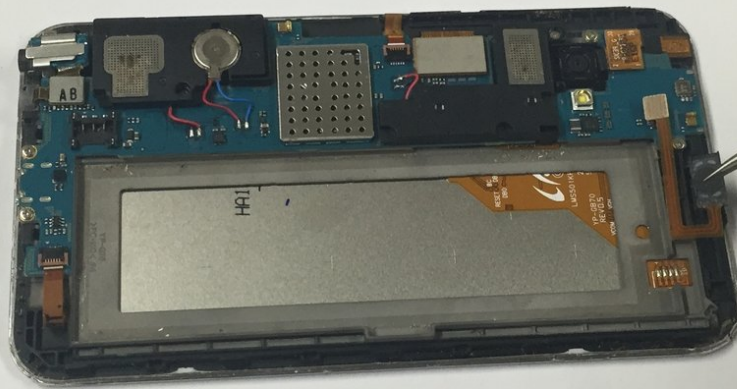

INTRODUCTION

This guide will show you the steps to removing and replacing the earpiece speaker inside the Samsung Galaxy Media Player 5 device.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



PARTS:

- [Galaxy Player 5.0 Small Speaker](#) (1)

Step 1 — Earpiece Speaker



⚠ Remove the SD Memory Card before working on the device.


- Use a Phillips screwdriver to remove the 10 mm screw near the SD Memory Card port.

Step 2




- White caps cover screws on both sides of the charging port. Use the angled tweezers to remove them.
- ⓘ Use a blow dryer on low heat if necessary to loosen the adhesive.

Step 3

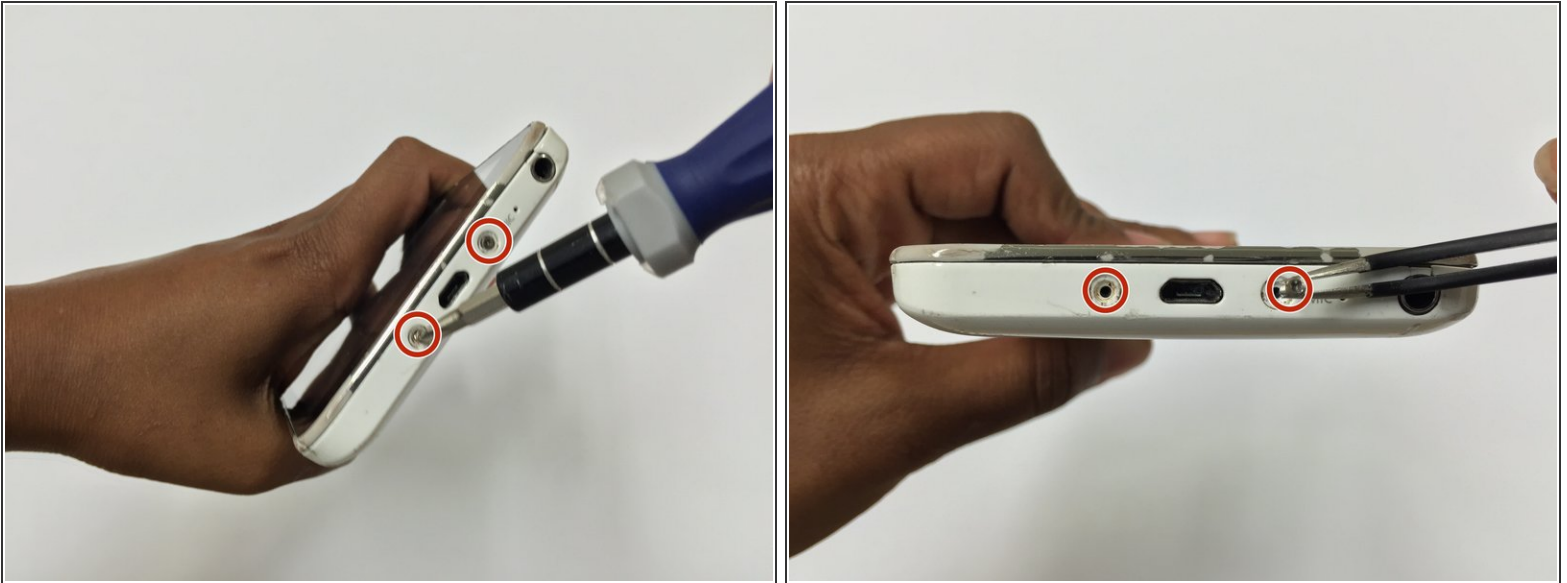



- Using a Phillips head screwdriver, unscrew the two 10 mm screws located on either side of the charging port.

Step 4

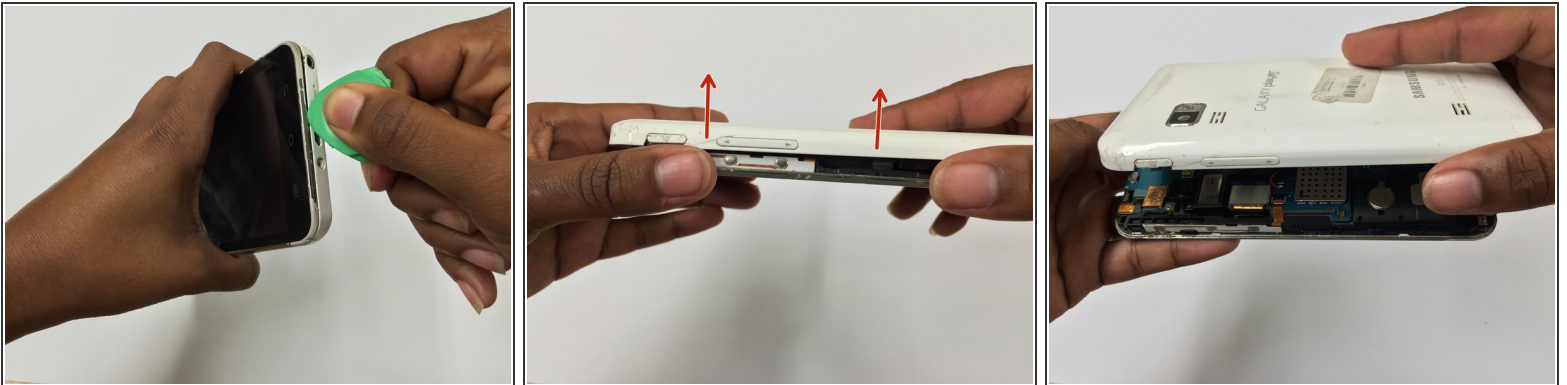




- Using the opening pick, pry at the bottom and work around each edge of the device until the front cover and back cover housing is separated.
- ❗ You will hear a popping sound to indicate the separation.

Step 5

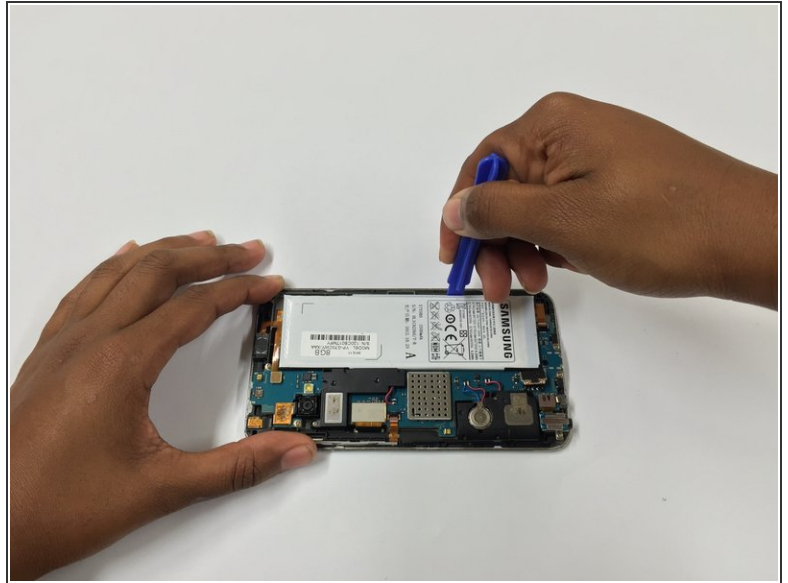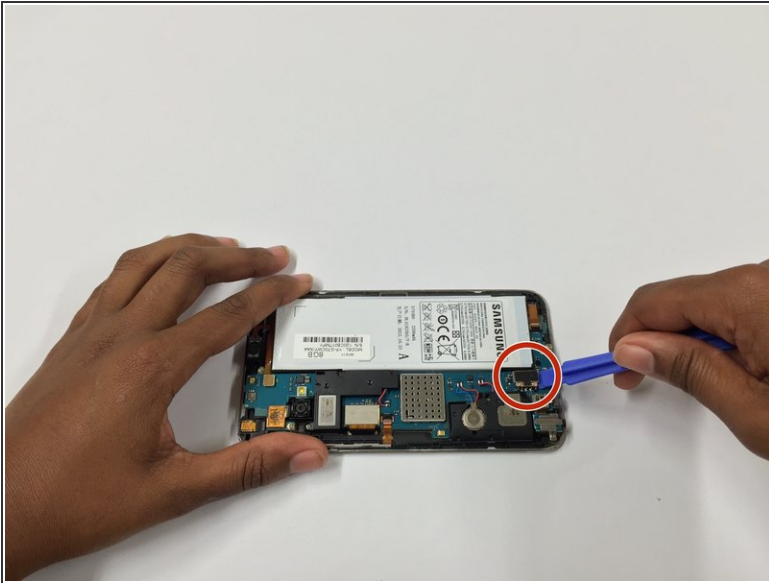

- Using the plastic opening tool, apply an upward force to detach the battery and the tab attached to it.

Step 6

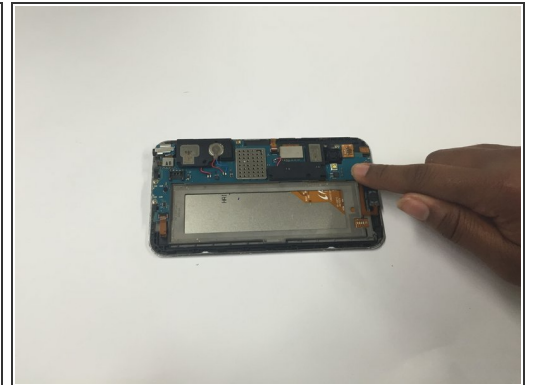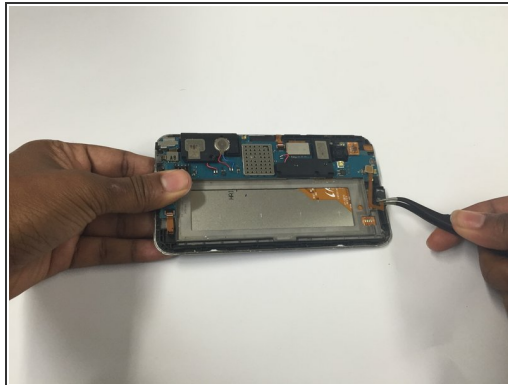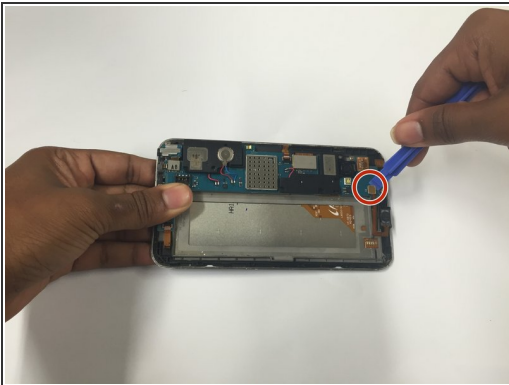

- Using the plastic opening tool, apply an upward force to detach the speaker earpiece.
- Use the tweezers to attach the new earpiece speaker in place of the original.
- ⓘ Use a blow dryer, on low heat settings, to loosen the adhesive on the speaker earpiece.

To reassemble your device, follow these instructions in reverse order.