




Desktop PC Front Fan Replacement

This guide will show the steps to properly remove and replace a fan in a desktop computer.

Written By: David Lennon

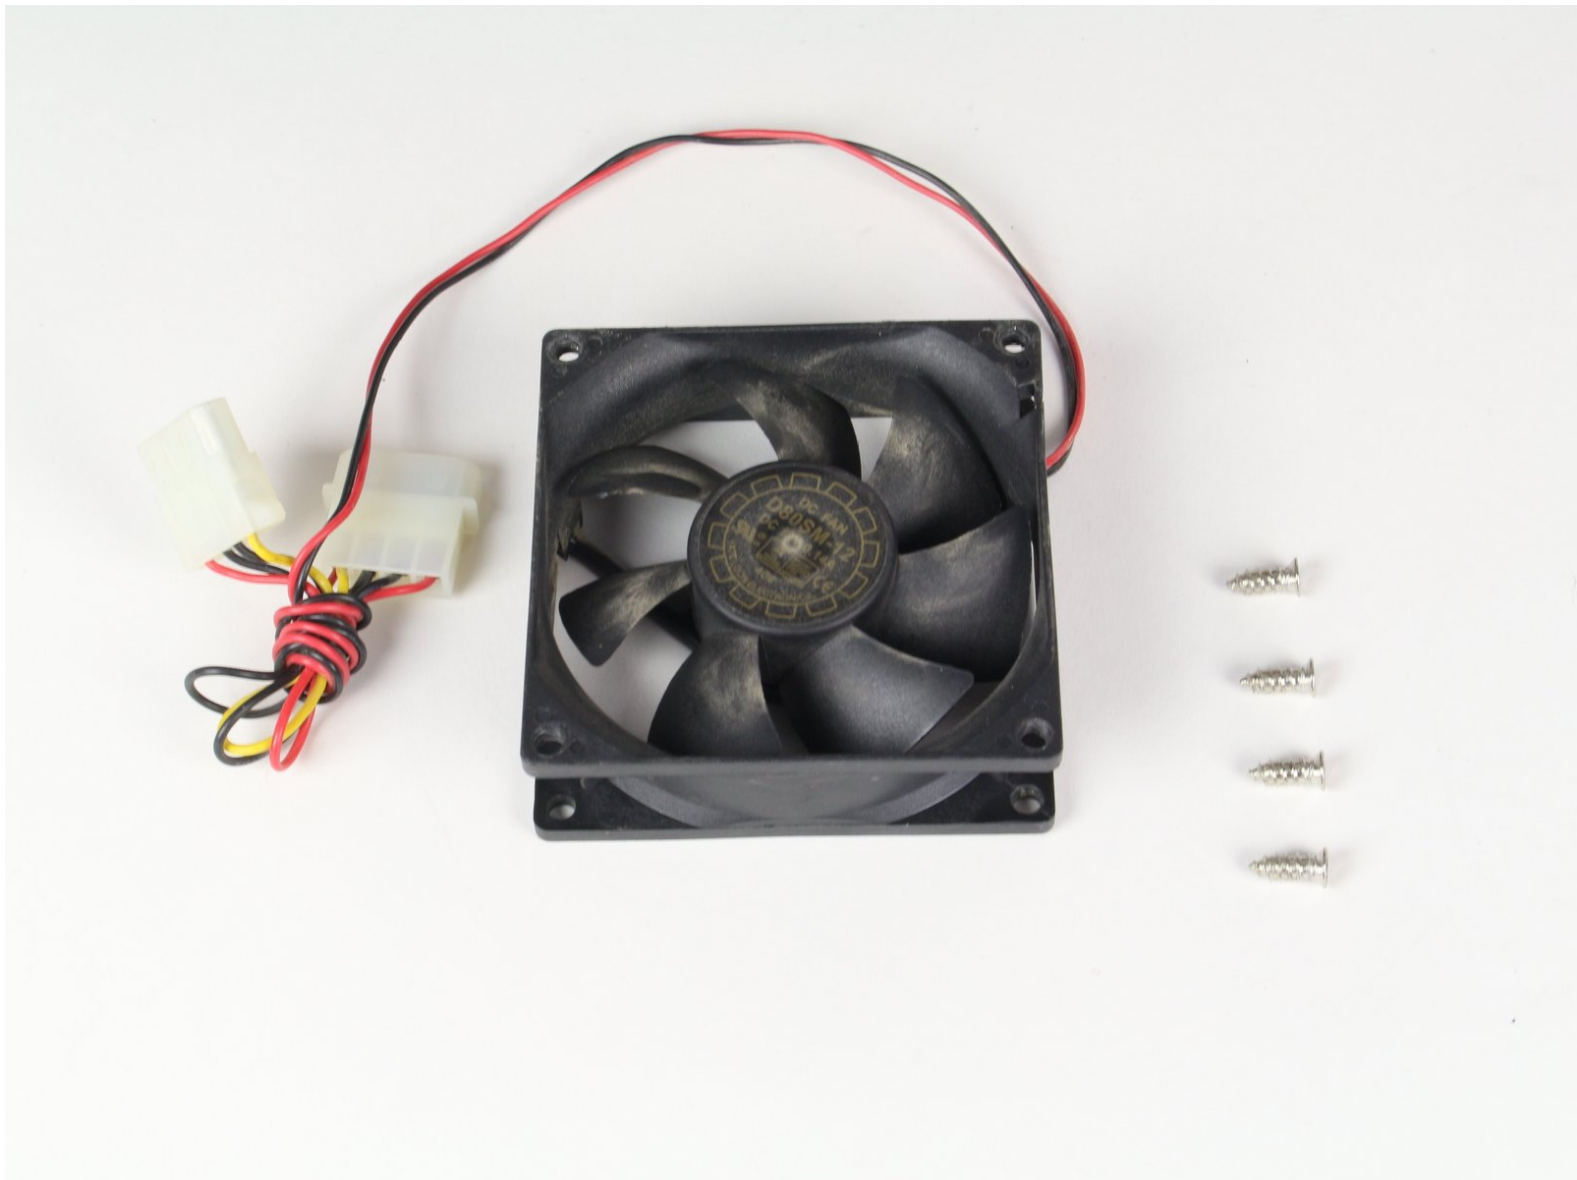

INTRODUCTION


Internal fans keep a computer at a stable temperature while operating. A faulty fan can cause a computer to overheat. It is important that all fans are in working order. Replacing a fan is an important skill for desktop PC users.

TOOLS:


- [Small Phillips Head Screwdriver](#) (1)
-


Step 1 — Left Panel



 Unplug the computer from the power supply before any maintenance or disassembly.

- Remove the two Phillips #2 head 5mm screws from the back side of the computer case. You only need to remove the screws that hold down the panel.

 These screws can usually be removed by hand.

 Be sure to wear an anti-static bracelet or use an anti-static mat to ensure important components are not damaged by static electricity.


Step 2



- Next, remove the side panel of the computer case to allow access into the computer. Slide the panel towards the back of the computer and lift it up to remove.

⚠ If there is a fan mounted on the side panel, make sure to unplug the cable before fully removing the panel.

Step 3 — Front Fan

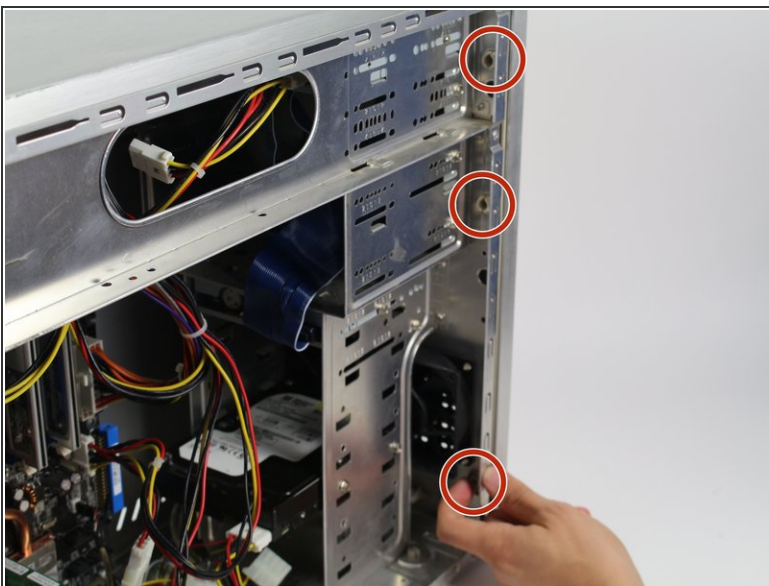


- Push to unlatch three grey connectors on the front panel.

Step 4




- Disconnect the front panel from the computer face.

Step 5

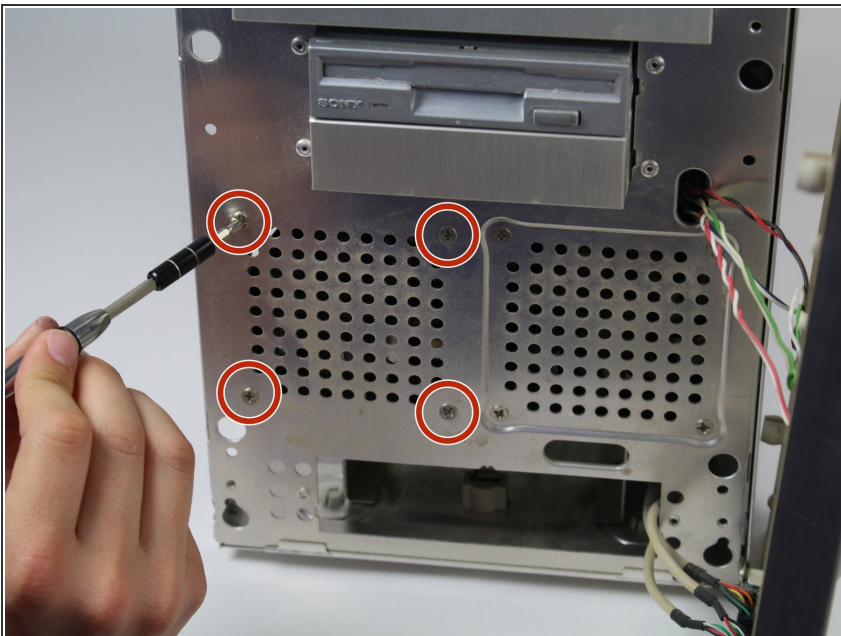

- Remove four Phillips #2 head, 5mm screws holding in the fan.

Step 6

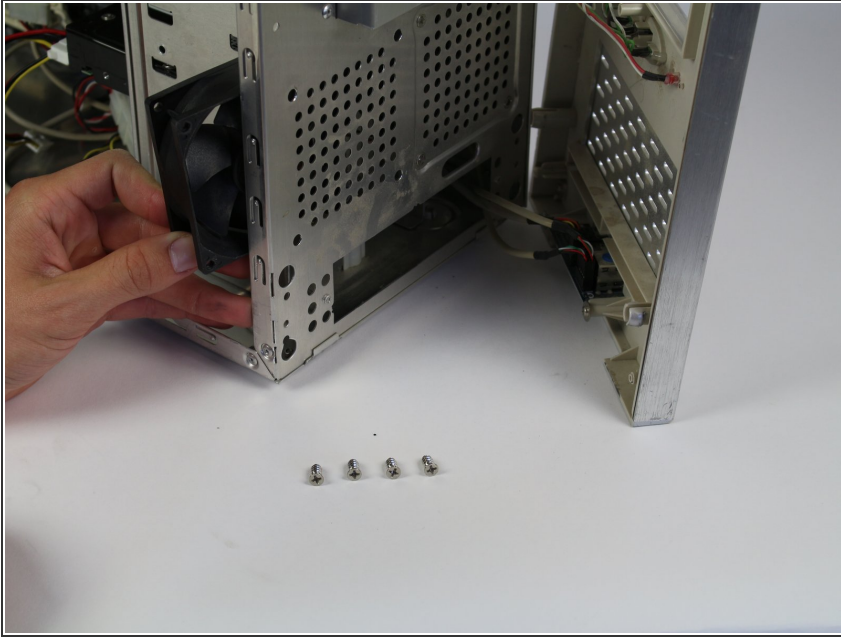

- Slide the fan out from the side of the casing.

Step 7



- Disconnect the power cable from the fan.

To reassemble your device, follow these instructions in reverse order.