




Canon PowerShot SX50 HS Function Dial Replacement

This guide will show you how to remove and replace the func. set turn dial.

Written By: Remington Goodwin

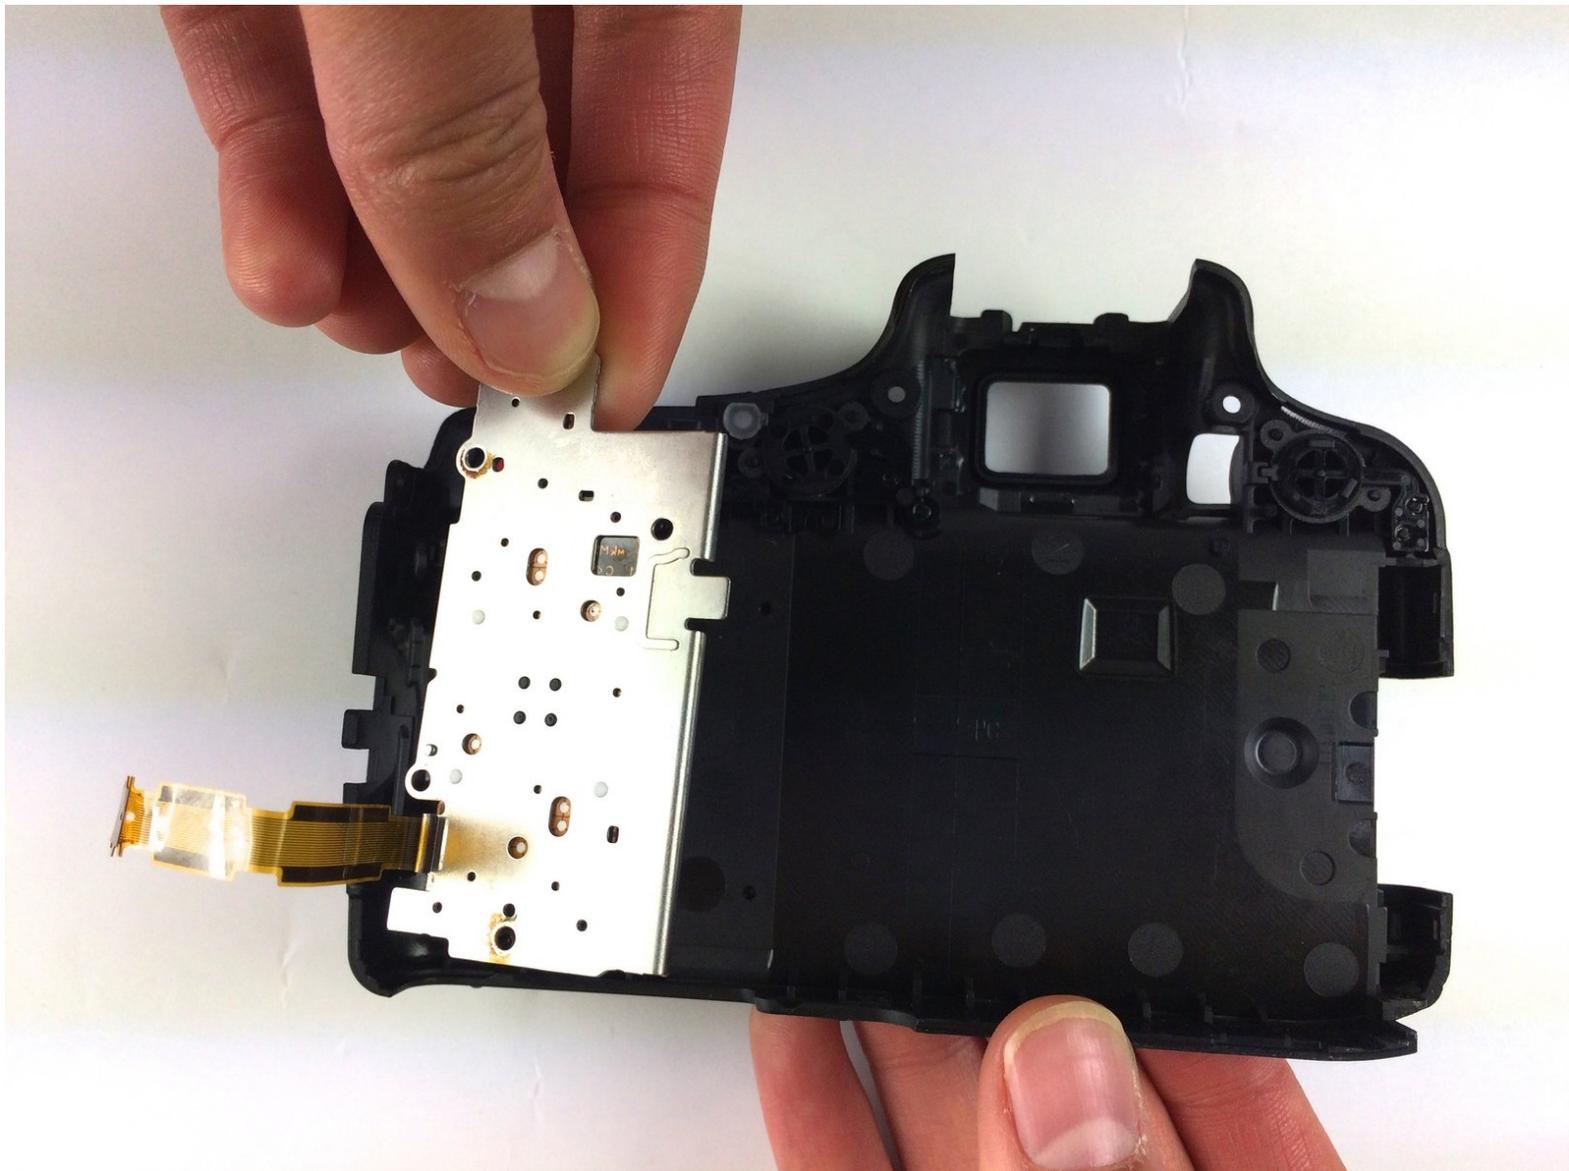

INTRODUCTION

Replace the func. set turn dial of the Canon PowerShot SX50 HS.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Locate the battery compartment on the bottom of the camera.
- Push the latch on the outside of the battery door to the right to get to the battery pack inside.

Step 2



- Pull the brown latch on the inside of the battery door towards your palm (to the left). The battery pack should pop out (battery not pictured).
- Now remove the battery pack from the camera with your fingers.

Step 3 — Rear Case



- Remove the two Phillips #000 screws, length 5 mm, on either side of the viewfinder.
- Remove the one Phillips #000 screw, length 4 mm, on the bottom, closer to the back side of the camera.

Step 4



- Remove the two Phillips #000 screws, length 3 mm, on the left side of camera.
- Remove the Phillips #000 screw, length 4 mm, located between the two 3 mm screws.
- Remove the two Phillips #000 screws, length 4 mm, on the bottom left corner of the camera.

Step 5



- Find the "A/V Out Digital" charging station and lift up the flap.
- Remove the two Phillips #000 screws, length 5 mm, that are under the "A/V Out Digital" flap.
- Remove the one Phillips #000 screw, length 5 mm, that is outside the "A/V Out Digital" flap.

Step 6



- Use the plastic opening tool to carefully start lifting up the camera's left-side panel. Then use your fingers to pry off the rest.

Step 7



- Make sure the LCD screen panel, the battery compartment door, and the "A/V Out Digital" flap are all open.
- Using your fingers, carefully pry off the back encasement (you may need to use a plastic opening tool to help you).

⚠ Do not remove the back casing too far or too quickly. There is a wire ribbon attaching the back encasement to the motherboard that is very delicate.


Step 8



- Find the orange wire ribbon attaching the back encasement to the I/O board in the lower right-hand corner of the camera (lens facing away).
- Carefully lift up the brown clip holding the wire ribbon in place and pull the ribbon out of the clasp with your fingers or tweezers.


⚠ Be cautious when the removing the wire ribbon; it is very delicate.

Step 9

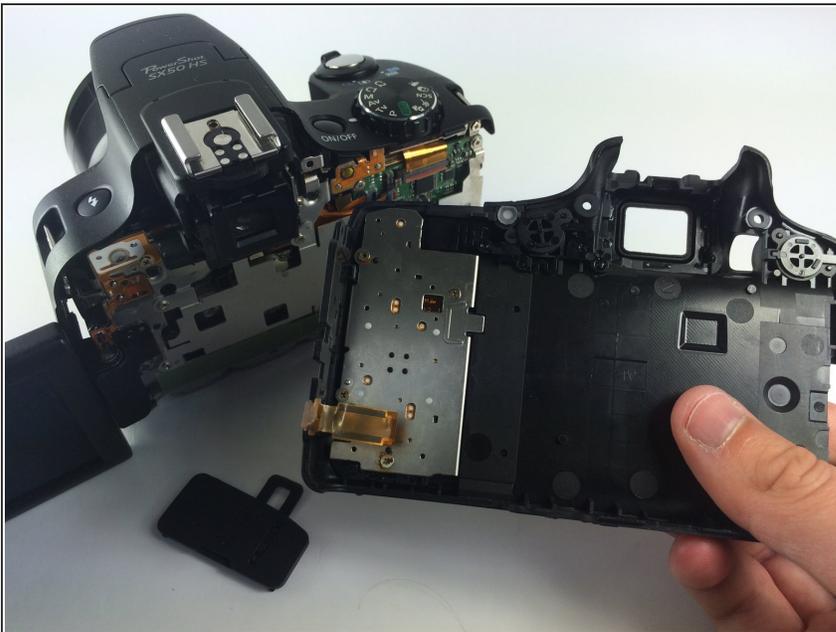



- Now you can completely separate the back encasement from the rest of the camera.

Step 10 — Function Dial

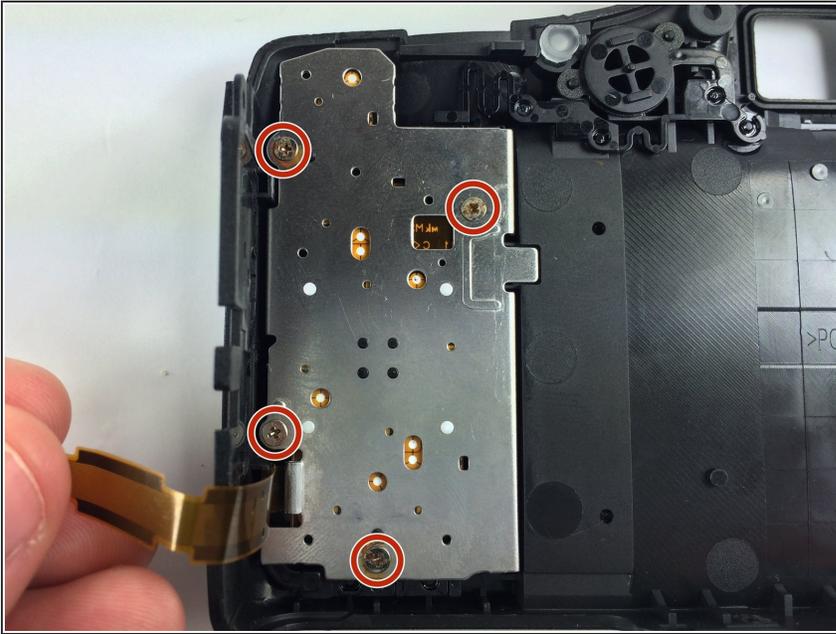

- Remove the four Phillips #000 screws, length 3 mm, attaching the metal panel to the inside of the back encasement.

Step 11

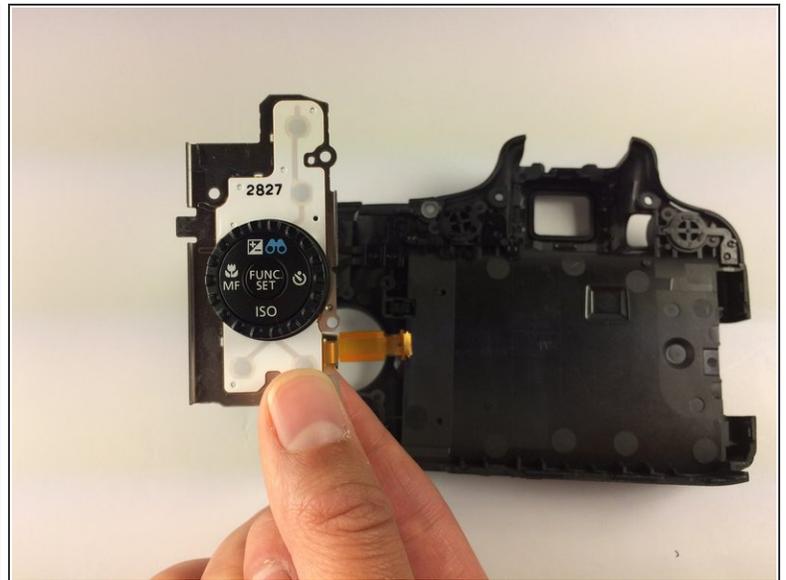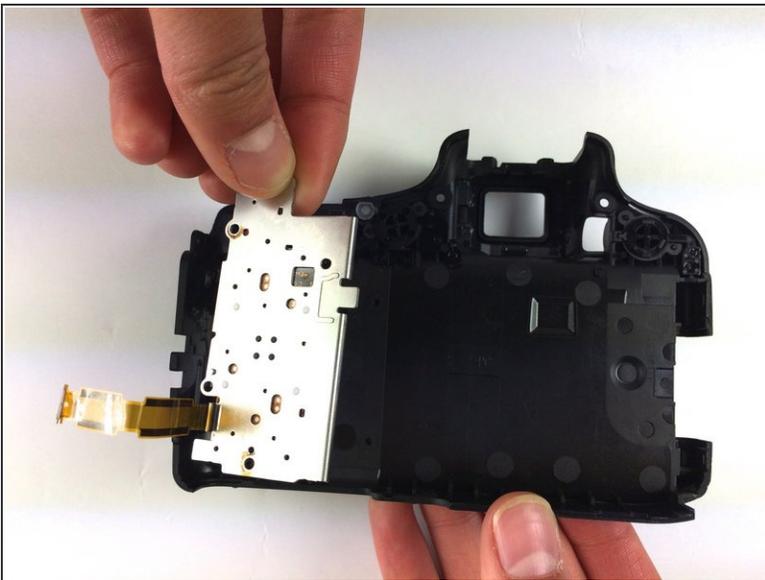

- Take off the metal plate with your fingers.

To reassemble your device, follow these instructions in reverse order.