



HTC Windows Phone 8S Display Assembly Replacement

HTC Windows Phone 8S Display Assembly Replacement

Written By: ZFix



INTRODUCTION

How to disassemble / take apart the device and change broken, smashed touch screen glass and LCD display.

[video: <https://www.youtube.com/watch?v=emuga3EO4hg>]

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Heat Gun](#) (1)
-

Step 1 — Loudspeaker





- Switch off the phone.
- Remove the SIM / memory card cover.
- Remove any SIM and memory cards.
- Use screwdriver torx T5 and unscrew the two screws at the bottom of the battery / back cover.

Step 2






- Use a plastic tool and slowly separate the back cover.
- The loudspeaker is inside on the back cover.

Step 3 — Battery

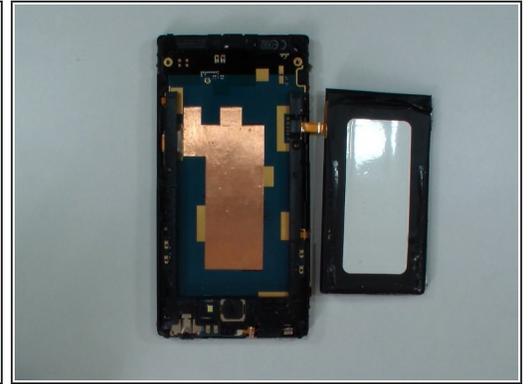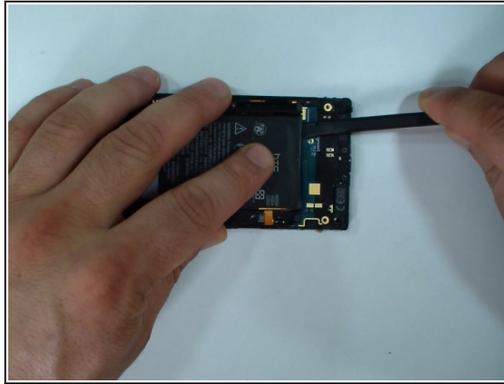



- Use a Phillips #0 screwdriver and remove the 4x silver screws.
- With a plastic tool carefully separate the battery from the logic board.

Step 4

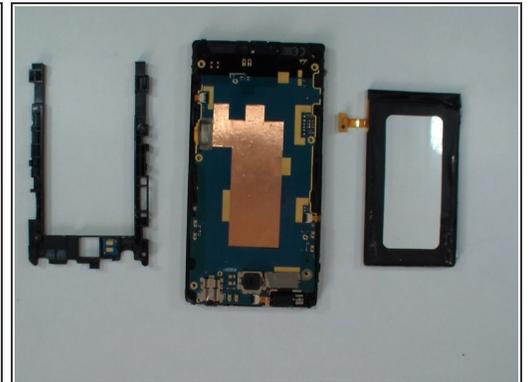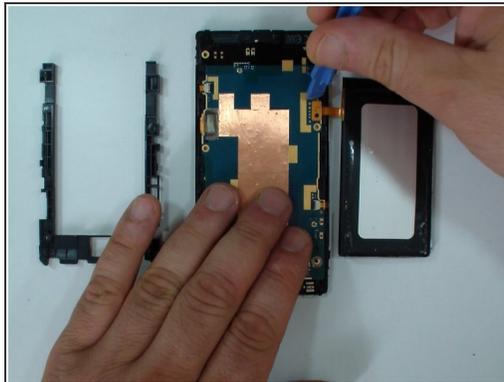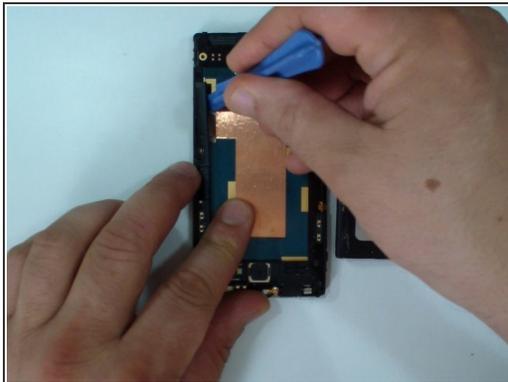

- The battery connector is under the middle frame. Remove it and disconnect the battery.
- Model: BM59100 / 3,8VDC / 1700mAh

Step 5 — Flex Cables

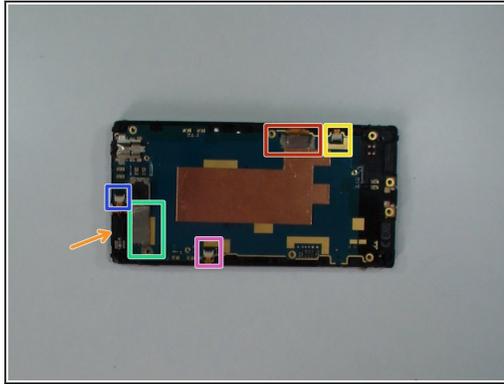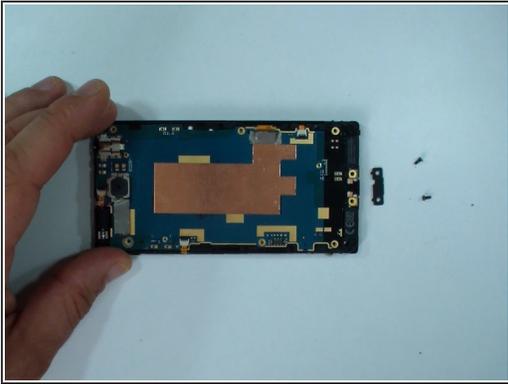


- Remove the USB dock connector metal plate.
- Open flex cable connectors:
 - LCD display flex cable
 - Menu buttons flex cable
 - Volume buttons flex cable
 - Touch screen flex cable
 - Power button flex cable
- Pick up the vibrating motor and take out all flex cables except the LCD display flex cable.

Step 6 — Logic Board Removal





- The logic board is secured to the display frame by two locking clips.
- Use a plastic tool to release it.
- Now remove the LCD display flex cable from its connector.

Step 7 — Logic Board / Main Board

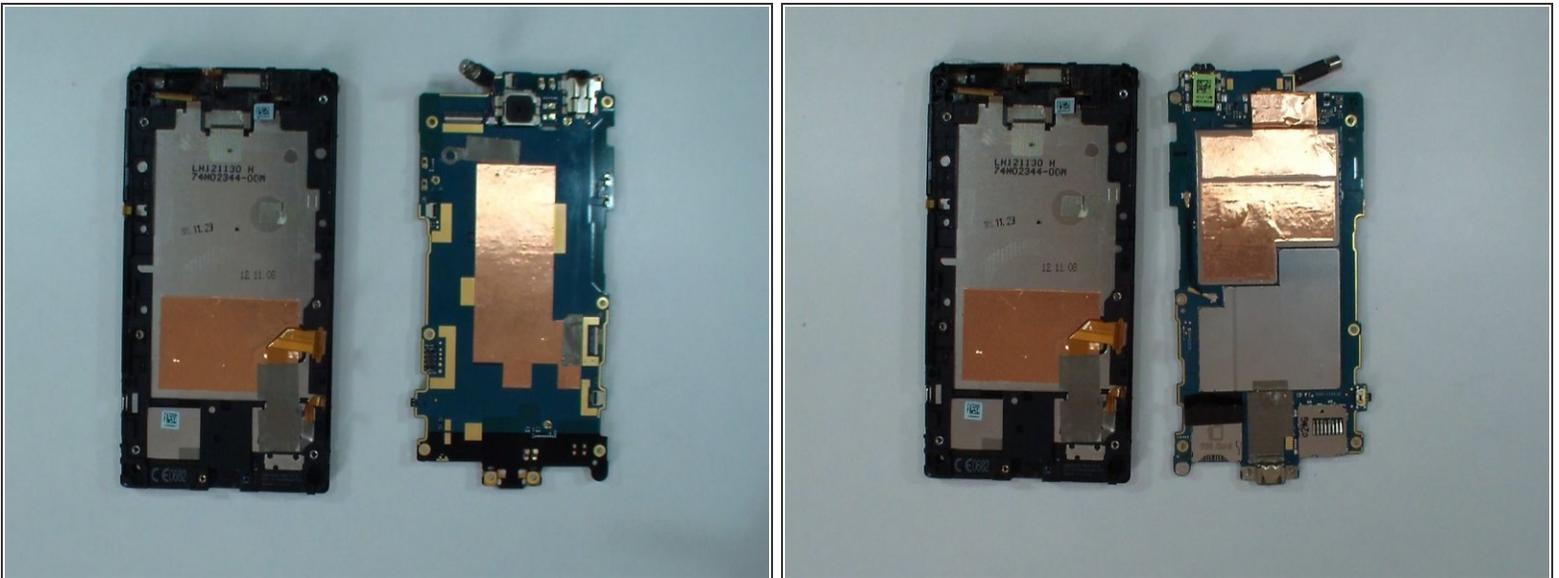



- HTC Windows Phone 8S Logic Board.

Step 8 — Display Assembly

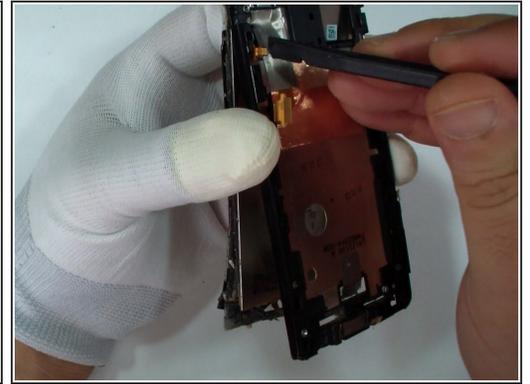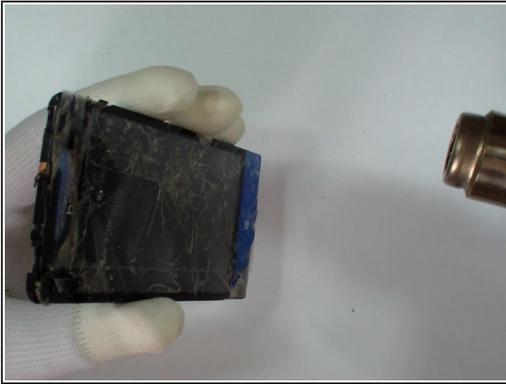


- Insert wisdom here.

Step 9

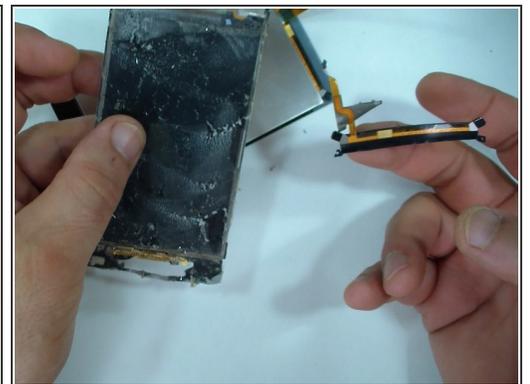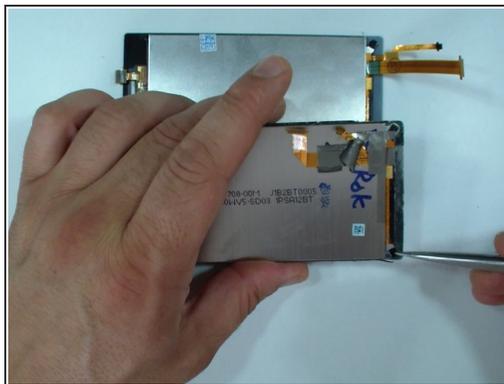


- Check your spare part for the menu buttons flex cable.
- Remove the flex cable from the old touch screen if you need.

Step 10

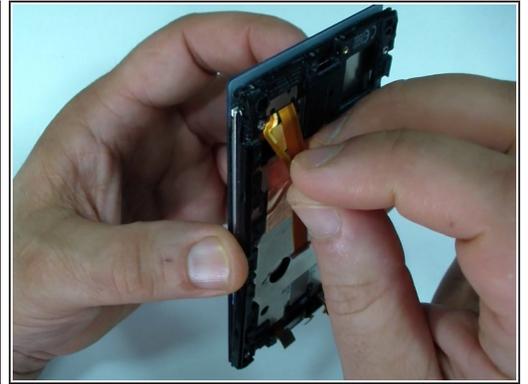

- Clean the frame from the old adhesive tape.
- Install new adhesive tape.
- ⓘ It would be better if you use adhesive sticker ready for the model.
- Install the display assembly.

Step 11

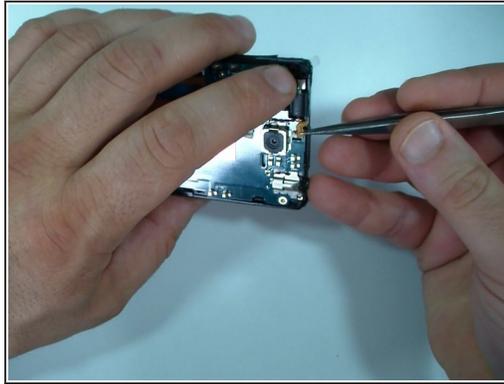

- Prepare the menu buttons and LCD display flex cables.
- Start with reassembling.
- .
- .
- .
- .
- **Did you do it successfully?**

To reassemble your device, follow these instructions in reverse order.