




HP Elitebook 840 G1 RAM Replacement

Blue screen, computer randomly restarts with no...

Written By: Ashley Williams

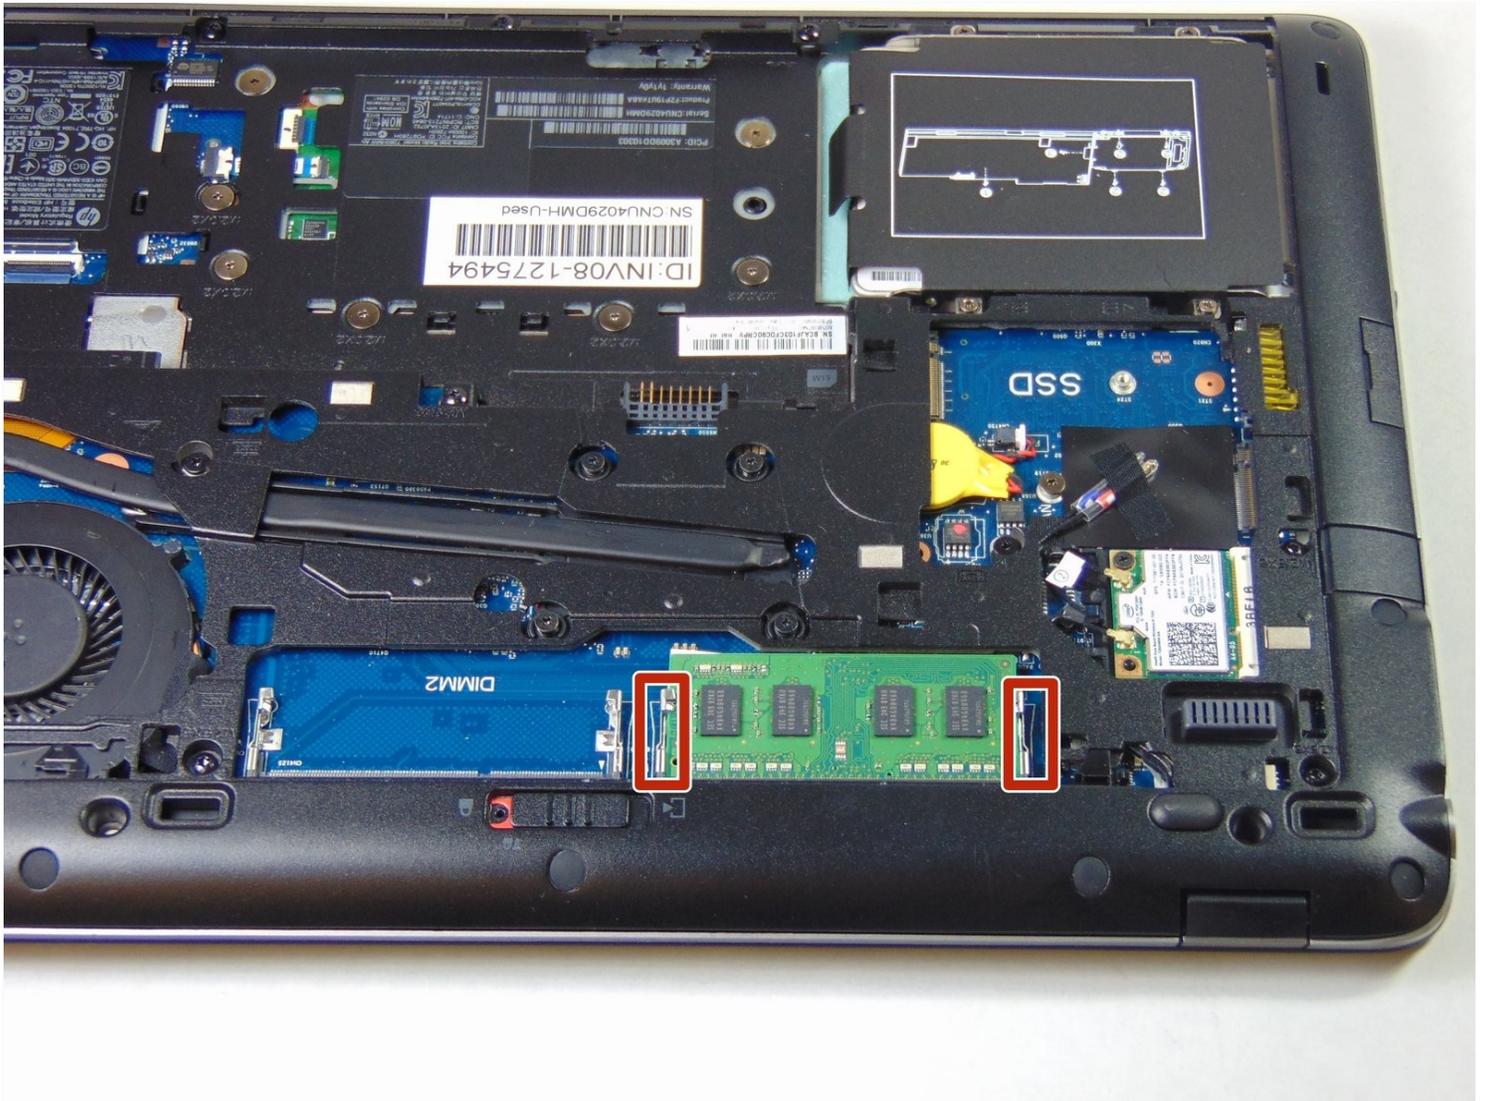

INTRODUCTION

Blue screen, computer randomly restarts with no warning, or you wish to increase your memory than replace the RAM in your HP EliteBook 840 G1.

TOOLS:

Anti-Static Wrist Strap (1)


Step 1 — Battery



 Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.


- Slide the latch, to the right, away from the lock symbol.
- Slide the cover away from the latch to remove it.

Step 2

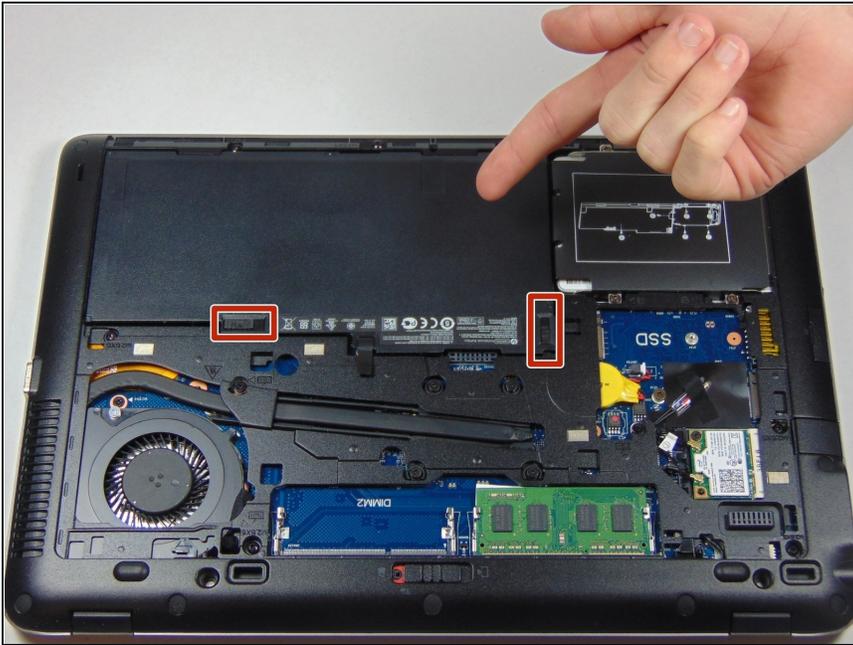


- Once the cover is removed you will be able to see the battery and the two latches that hold it in place.
- The two latches should be pulled back, one of which is spring loaded and must be held in place in order to remove the battery.

Step 3

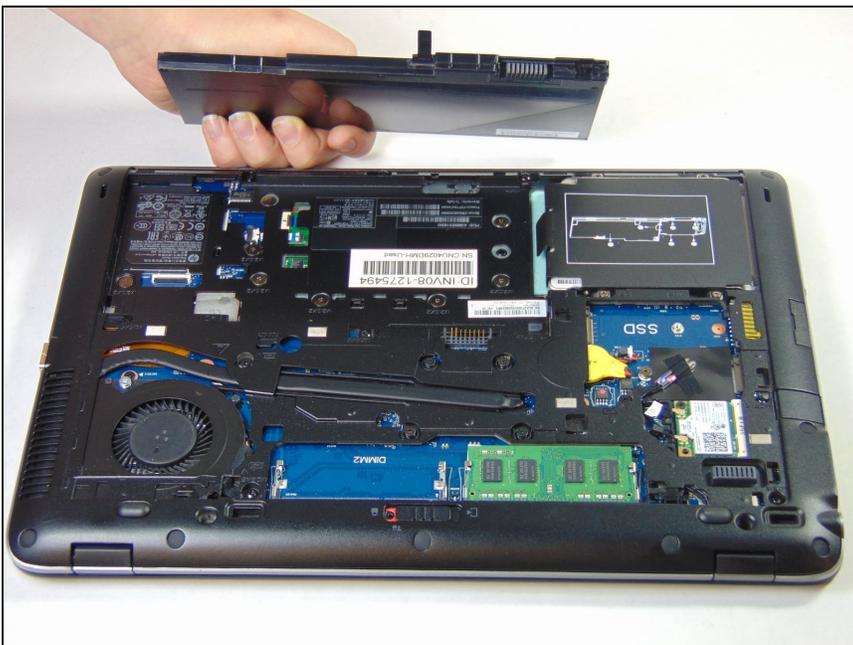

- Battery should easily be lifted up and out.


Step 4 — RAM

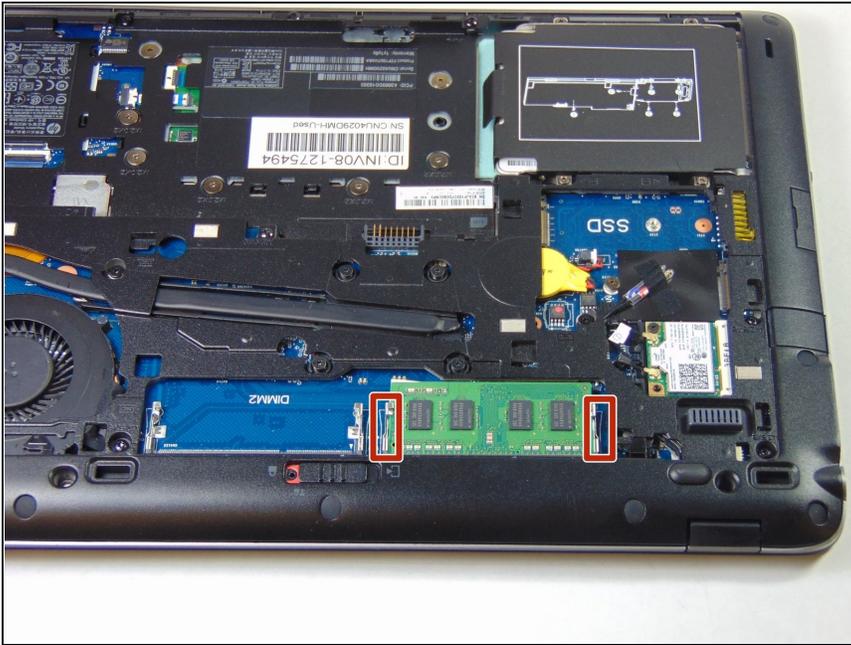

- Identify the RAM and the pull tabs that will be used in the next step.

⚠ Always use an [anti-static wrist strap](#) when working on a computer.


Step 5

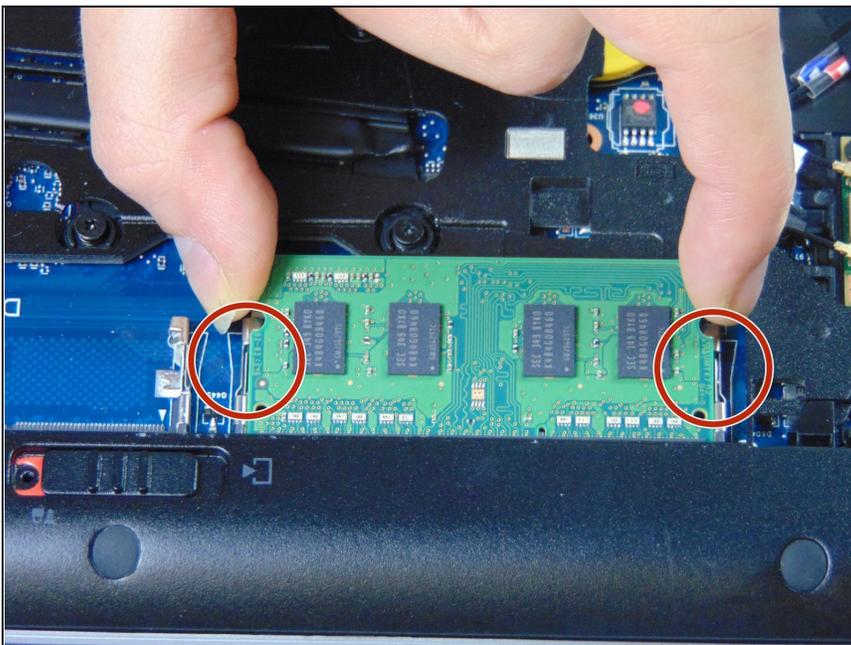

- Pull back the two tabs on either side of the RAM this will allow the RAM to be removed.

⚠ When handling a memory module, use care to prevent touching the memory chips on the board. Touching the memory chips could damage or destroy the memory.

Step 6

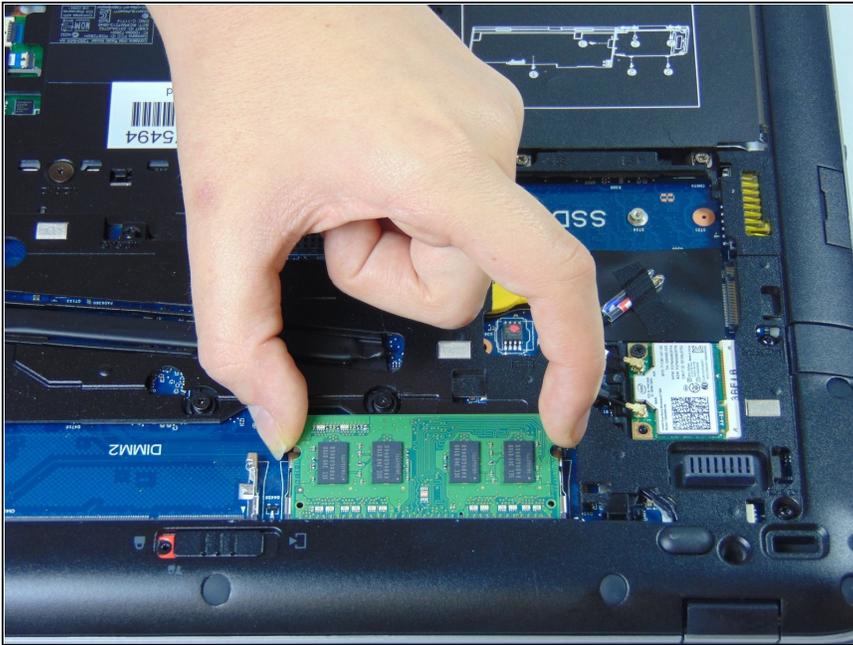

- Pull the RAM stick gently out and up once the tabs have been pulled to the side.

To reassemble your device, follow these instructions in reverse order.