 




IBM ThinkPad R40 Battery Replacement

Replace the battery in an IBM Thinkpad R40


Written By: Alec M

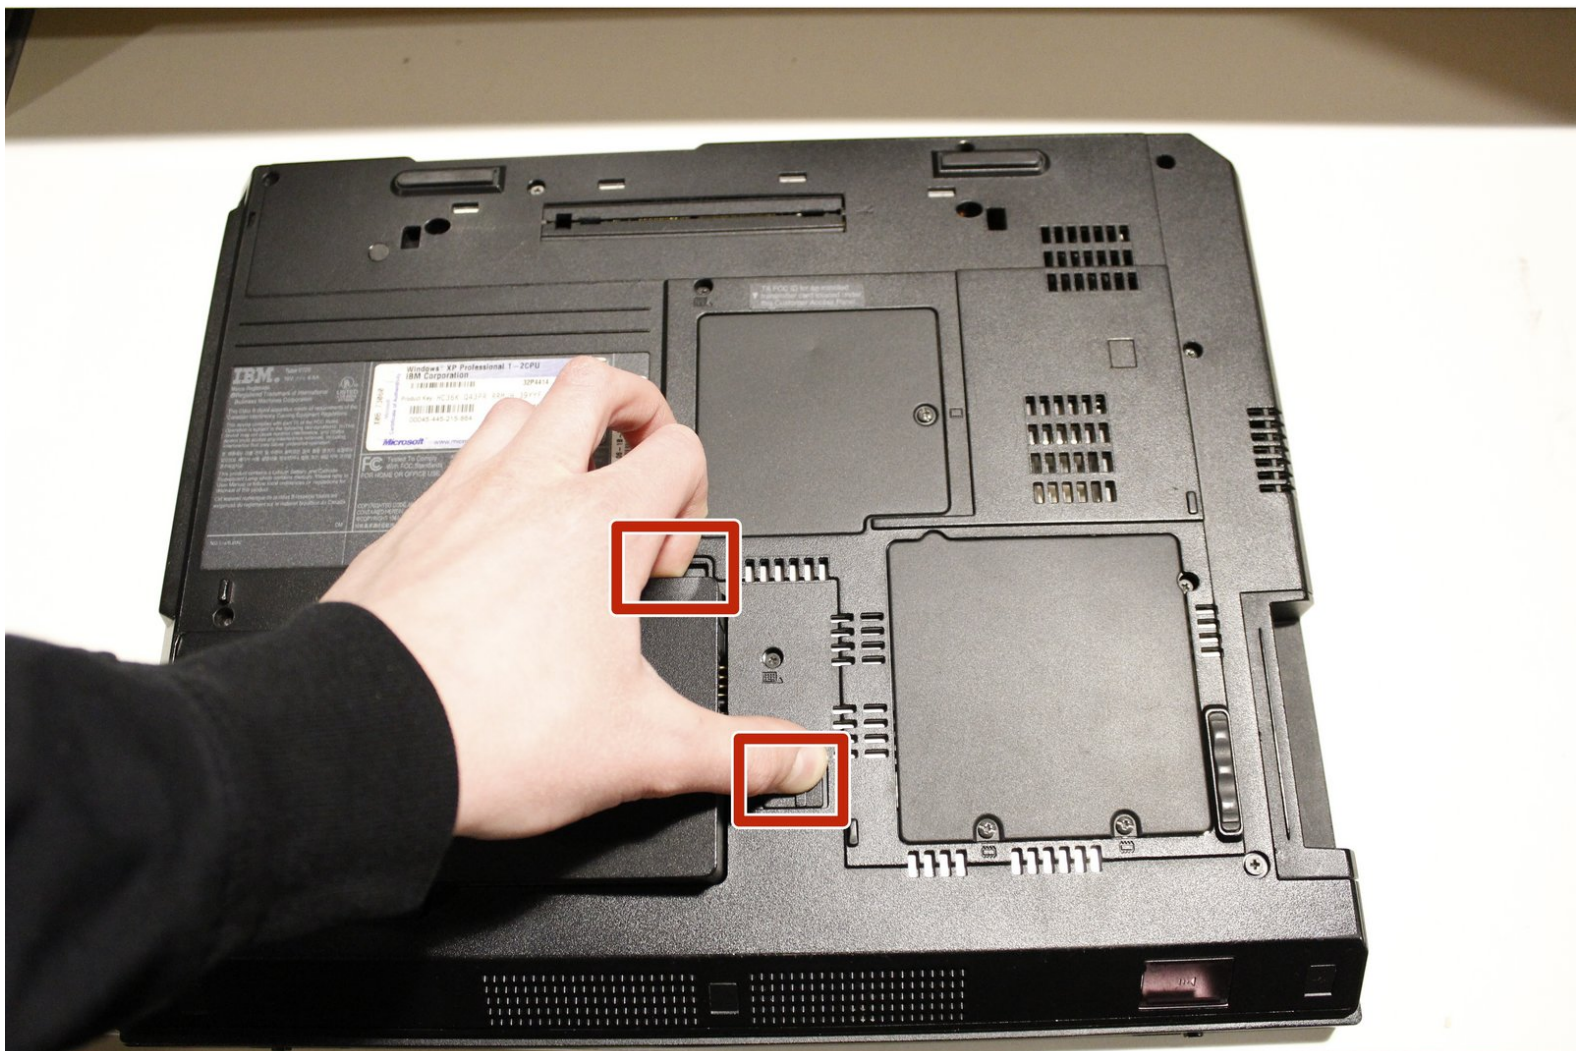

INTRODUCTION

Replace the battery in an IBM Thinkpad R40

Step 1 — Remove the battery

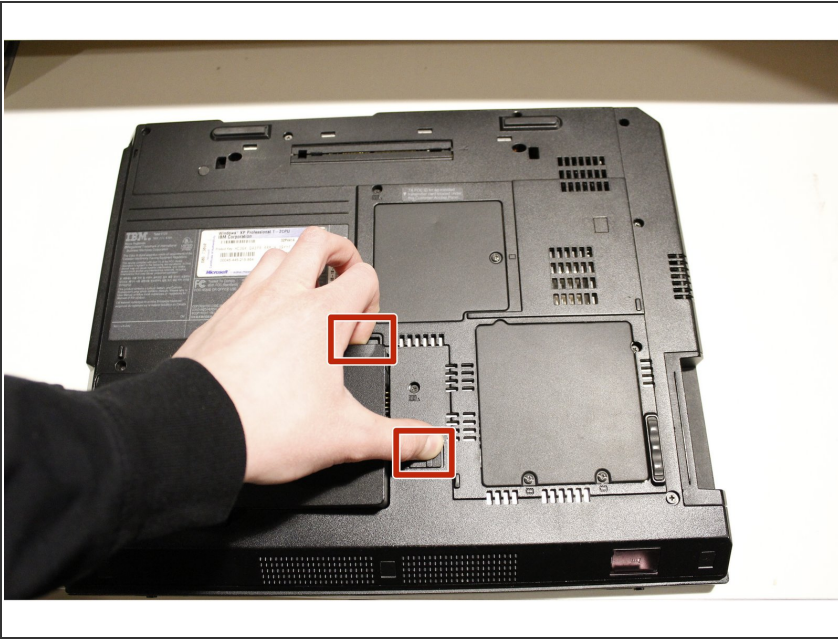

- To remove the battery, slide the battery lock lever right, while pulling on the battery tab.

To reassemble your device, follow these instructions in reverse order.