



# iPhone 6s Pentalobe Screws Replacement

Follow this guide to remove or replace the...

Written By: Evan Noronha



# INTRODUCTION

Follow this guide to remove or replace the Pentalobe screws in an iPhone 6s.



## TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)



## PARTS:

- [iPhone 6s/6s Plus/7/7 Plus Bottom Screws](#) (1)

## Step 1 — Pentalobe Screws



- ⚠ Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- ⓘ Power off your iPhone before beginning disassembly.
- Remove the two 3.4 mm P2 Pentalobe screws on the bottom edge of the iPhone, on either side of the Lightning connector.

To reassemble your device, follow these instructions in reverse order.