


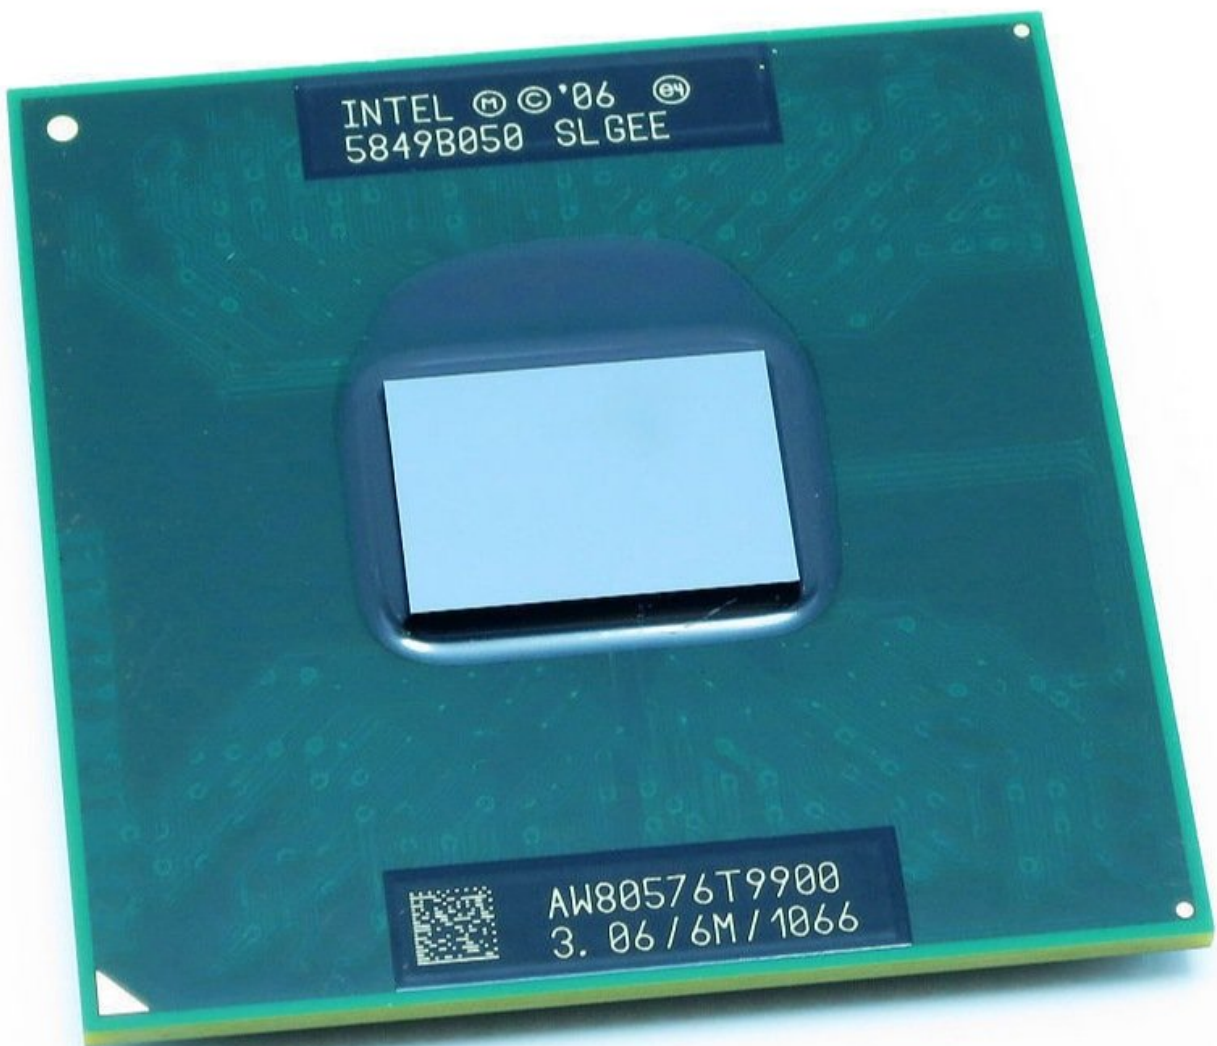

# HP Elitebook 6930p CPU Replacement

Before starting, remove the battery and keyboard.

Written By: Lowell



# INTRODUCTION

Before starting, remove the battery and keyboard.



## TOOLS:

Phillips #1 Screwdriver (1)

6-in-1 Screwdriver (1)




## PARTS:

Socket 479 Core 2 Duo (1)


CPU

## Step 1 — Take off the Heatsink

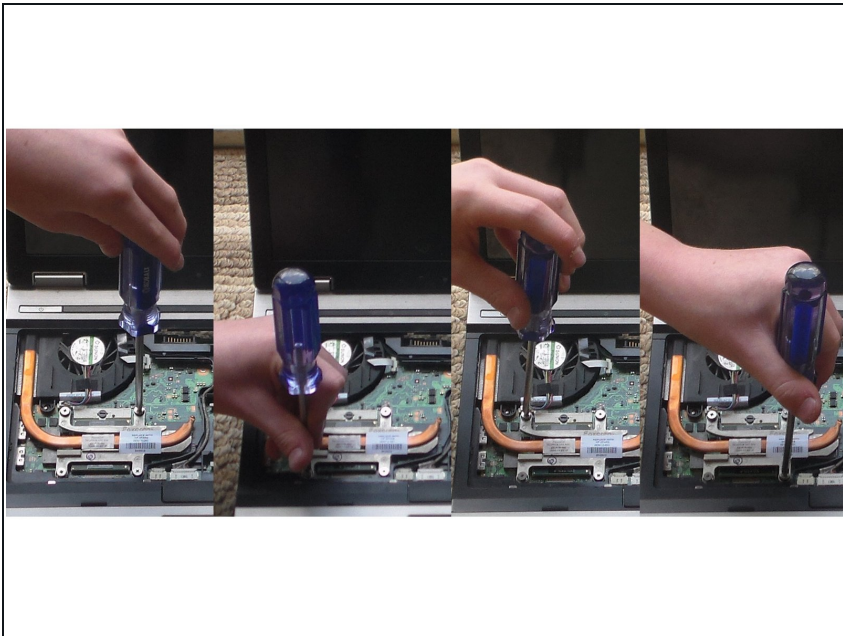


**i** Unscrew the screws in order from left to right in the picture.

## Step 2 — Unlock the CPU Socket

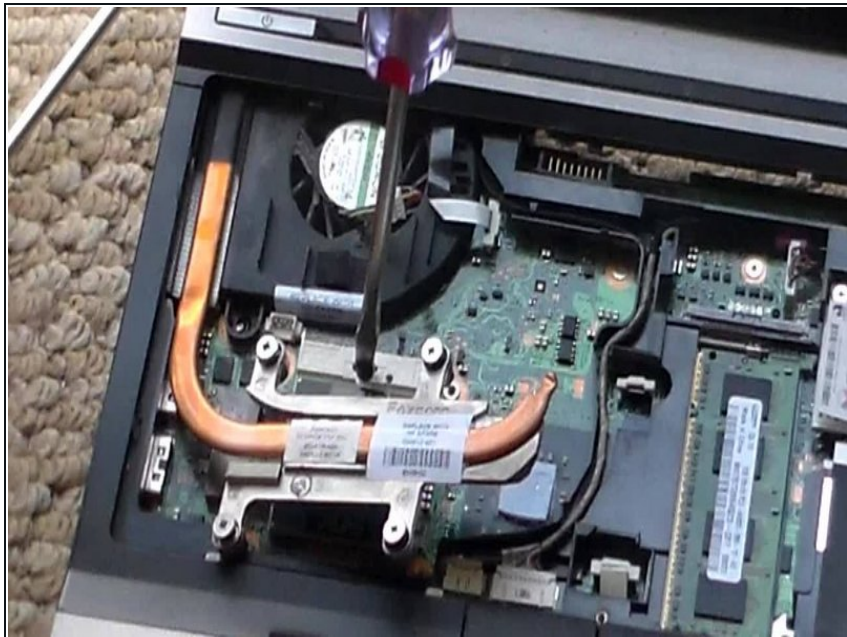

- Insert wisdom here.

## Step 3 — Unplug the fan

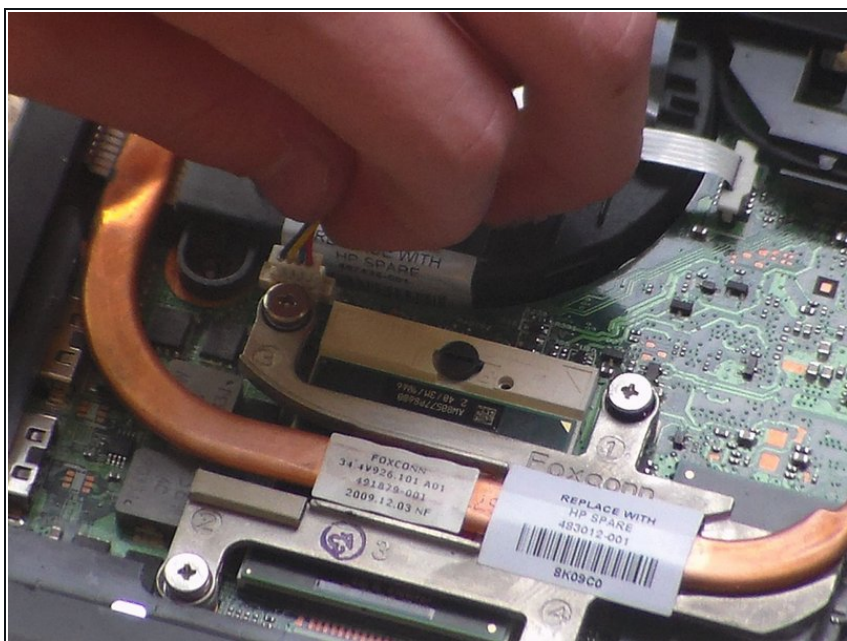

- Do this step if the cord of the fan is in the way of the CPU.



## Step 4 — Remove the CPU



- Insert wisdom here.

## Step 5 — Put the New CPU In



- ⚠ Make sure the new CPU works or is better than the old one if you are upgrading the CPU.

To reassemble your device, follow steps 1-4 in reverse order.