



Dell Venue 8 7840 Screen Replacement

Replacing the screen on your Dell Venue 8 7840.

Written By: Donnelle January



INTRODUCTION

Is your screen cracked or damaged? Replacing your screen might help solve these issues.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Screen



- ⚠ Make sure your device is turned off. Leaving it turned on may cause an electric shock.
- Face the device with the screen towards you.

Step 2



- With a plastic opening tool, pry open the bottom left corner of the screen.
- ⓘ The screen is tightly attached to the tablet, so you may have to use a metal spudger to pry it open if the plastic spudger does not do the task.

Step 3



- Next, pry open the top left corner of the screen.

Step 4



- Then, pry open the top right corner of the screen.

Step 5




- Lastly, pry open the bottom right corner of the screen.

Step 6




- Once you have pried open all the corners of the tablet, carefully open the screen from the right side of the tablet.
- ⚠ Do not try and open the screen from the left side of the tablet, because the screen is attached on the left side of the tablet; doing this can damage the tablet.

Step 7

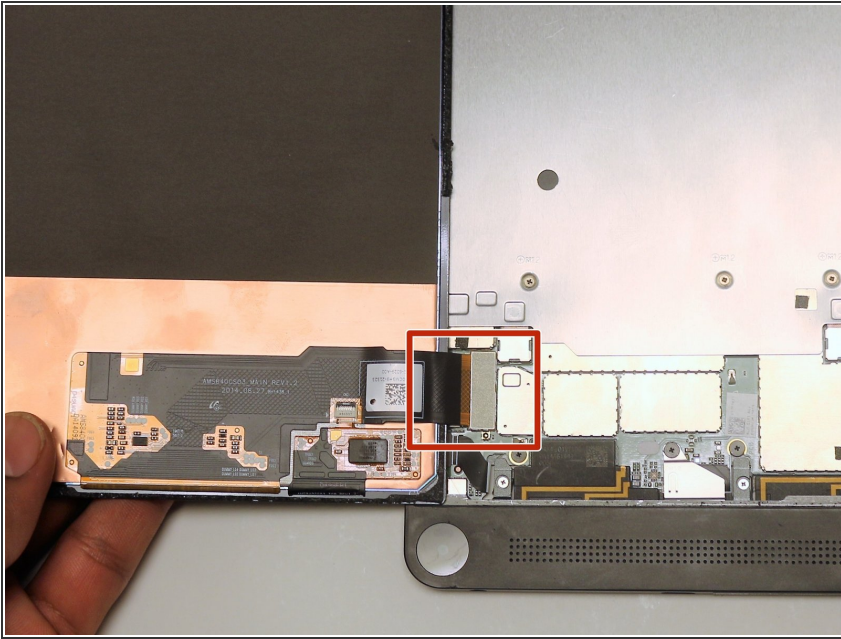

- Once the tablet is opened, locate the connector.

Step 8

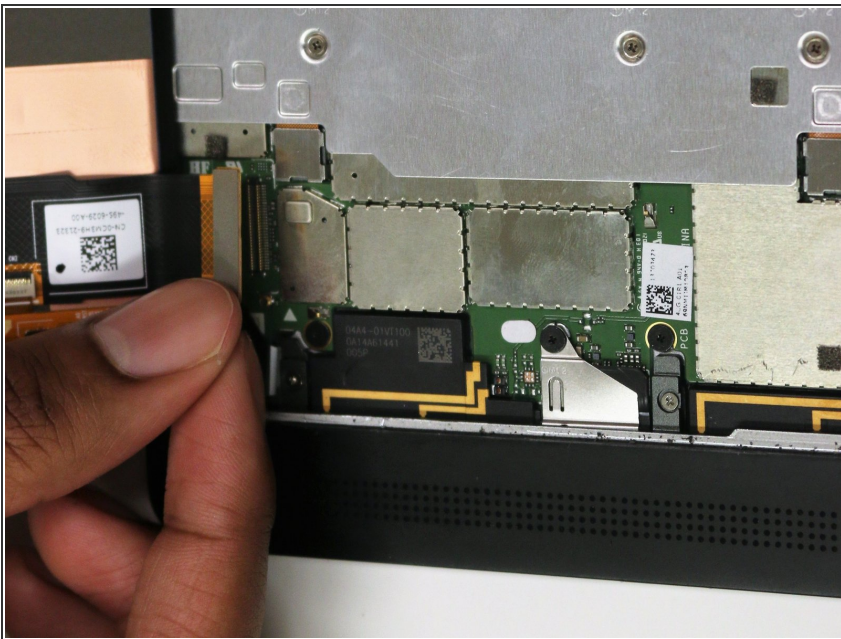

- Disconnect the connector from the tablet.

To reassemble your device, follow these instructions in reverse order.