



HP Compaq C700 RAM Replacement

This guide will detail how to remove a RAM.

Written By: Khang Nguyen



INTRODUCTION

This guide will teach how to remove the necessary components to gain access to and remove/replace the RAM module(s).



TOOLS:


- [Anti-Static Wrist Strap](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [IFIXIT screwdriver with a PH0 bit](#) (1)
-

Step 1 — RAM




- ⚠ It is recommended that the computer be powered off while working to avoid risk of electrocution.
- Turn off the computer by pressing and hold the power button located above the keyboard.

Step 2

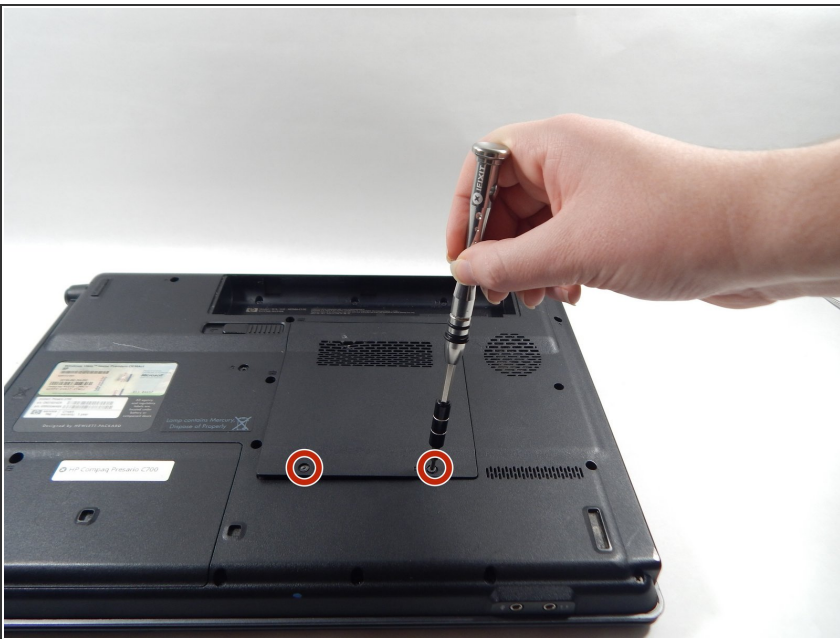


- Locate two phillips head 3 mm length screws on the hatch.
- Using the PH0 screwdriver, remove the screws.

Step 3

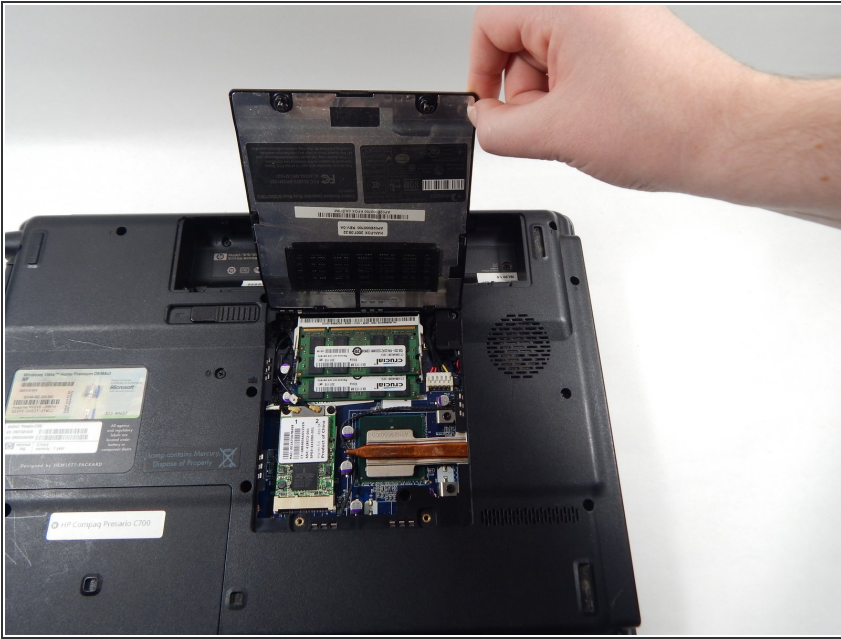

- Lift up the hatch.

Step 4

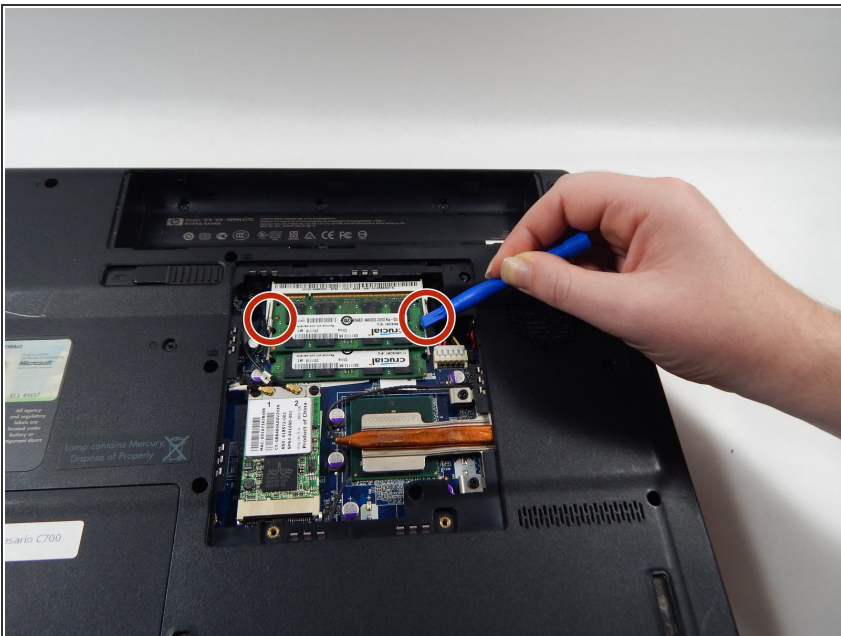

- Using the plastic opening tool, open the locks by inserting the tool on the side of the beige locks to release the RAM.

Step 5



- Gently pull out the RAM.

To reassemble your device, follow these instructions in reverse order.