




Dell Venue 8 7840 Power and Volume Button Replacement

Replacing the power and volume buttons on your Dell Venue 8 7840.

Written By: Donnelle January

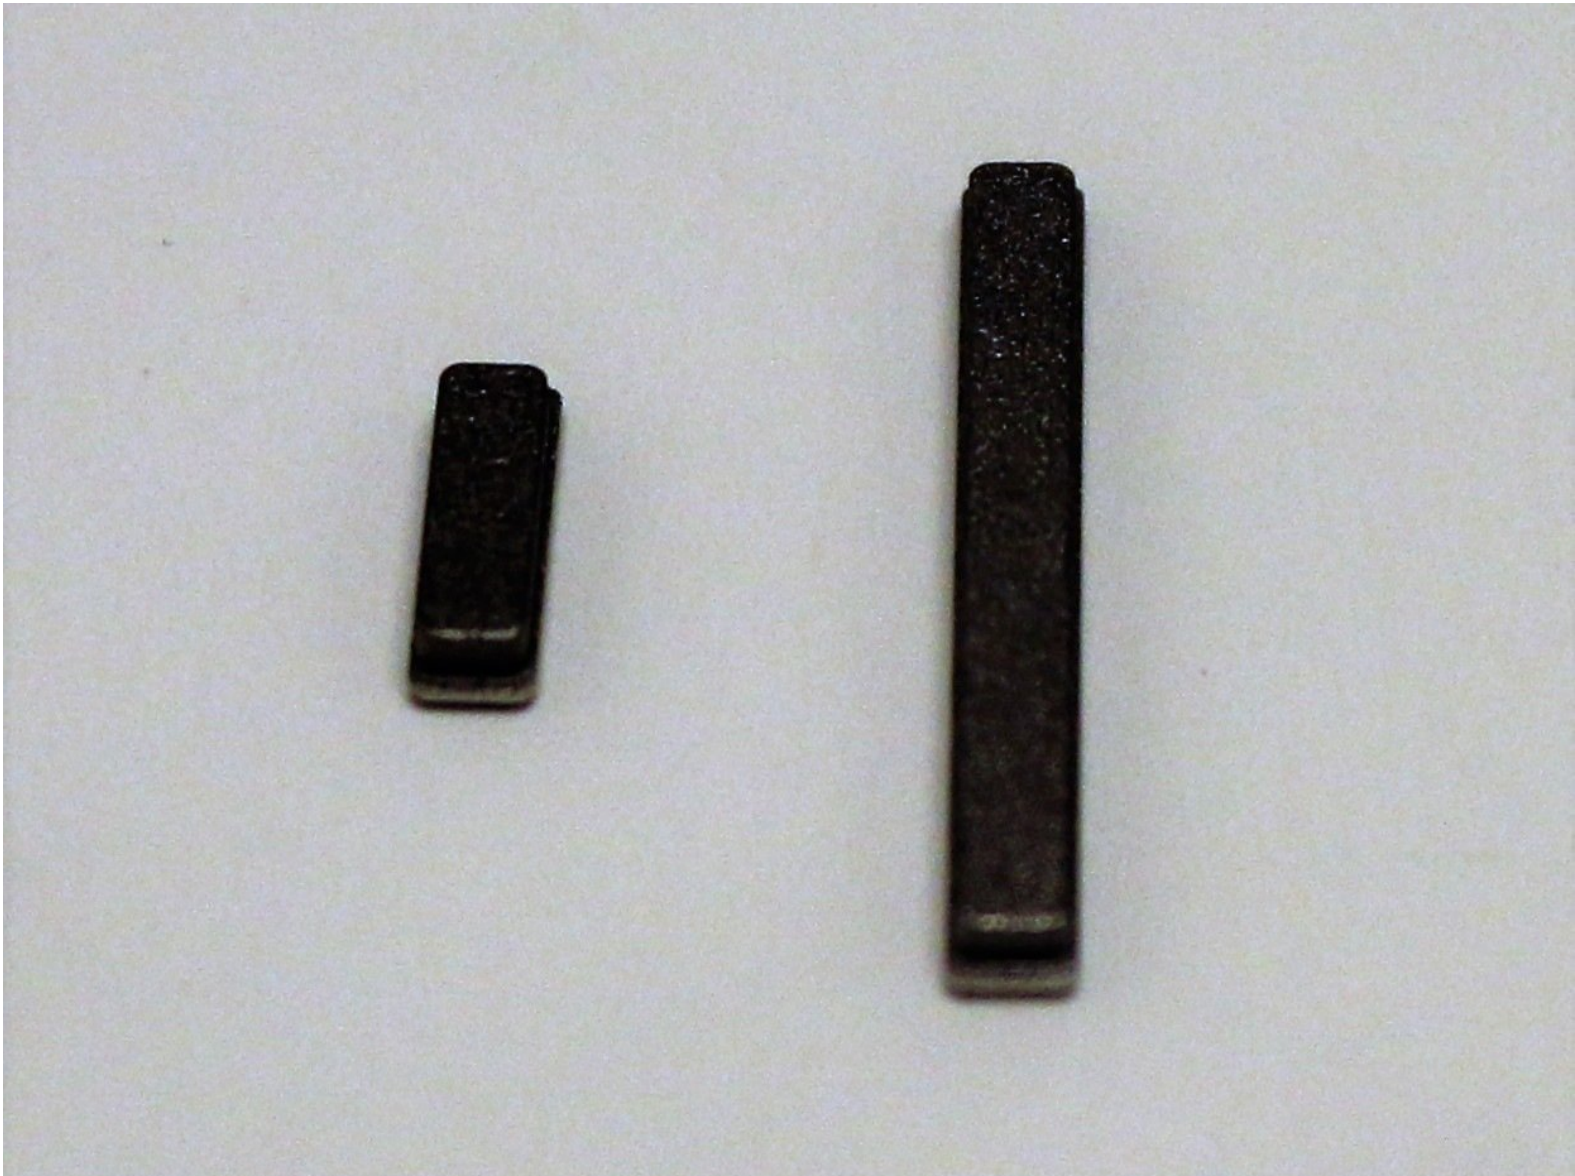

INTRODUCTION

Use this guide if the power and volume buttons on your Dell Venue 8 7840 aren't working.



TOOLS:


- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Screen



- ⚠ Make sure your device is turned off. Leaving it turned on may cause an electric shock.
- Face the device with the screen towards you.

Step 2

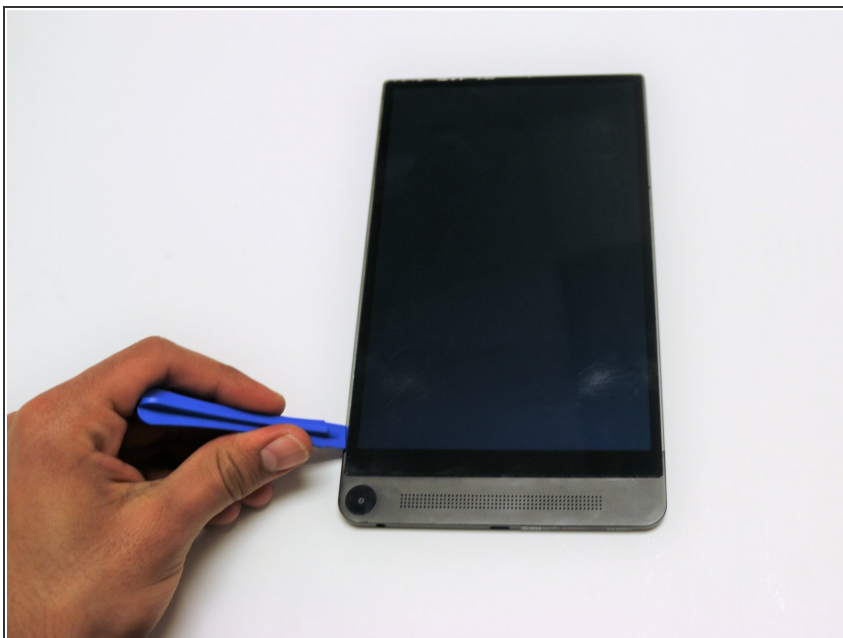

- With a plastic opening tool, pry open the bottom left corner of the screen.
- ⓘ The screen is tightly attached to the tablet, so you may have to use a metal spudger to pry it open if the plastic spudger does not do the task.

Step 3



- Next, pry open the top left corner of the screen.

Step 4



- Then, pry open the top right corner of the screen.

Step 5




- Lastly, pry open the bottom right corner of the screen.

Step 6




- Once you have pried open all the corners of the tablet, carefully open the screen from the right side of the tablet.
- ⚠ Do not try and open the screen from the left side of the tablet, because the screen is attached on the left side of the tablet; doing this can damage the tablet.

Step 7

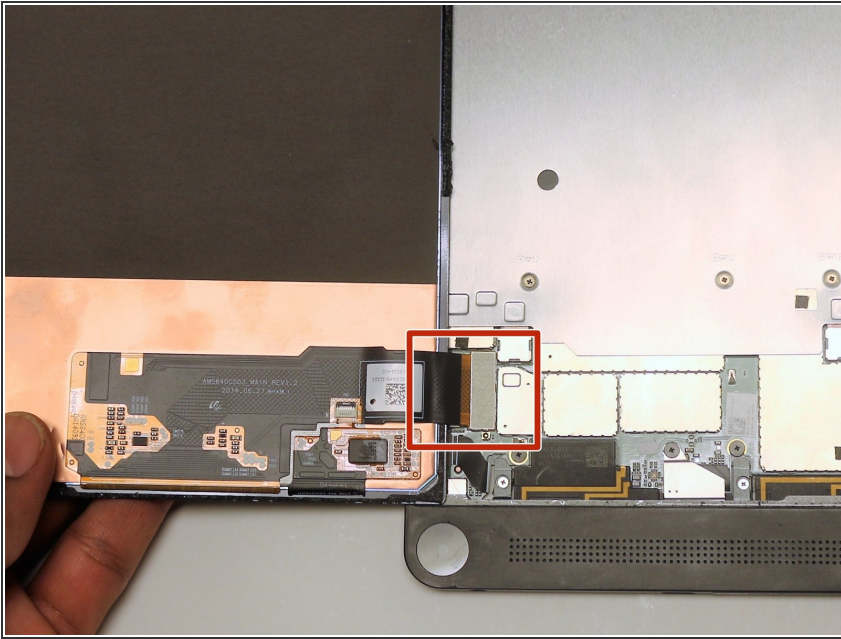


- Once the tablet is opened, locate the connector.

Step 8

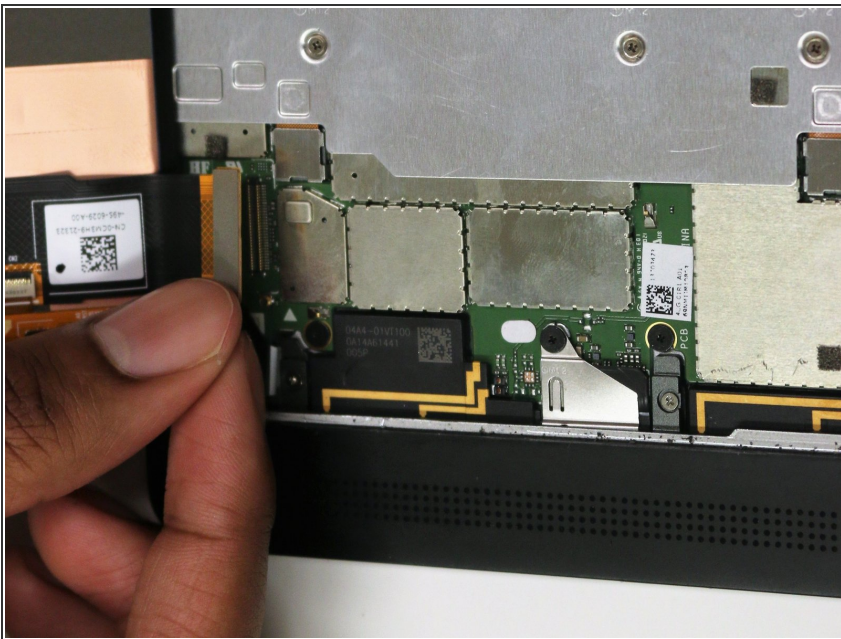

- Disconnect the connector from the tablet.


Step 9 — Battery

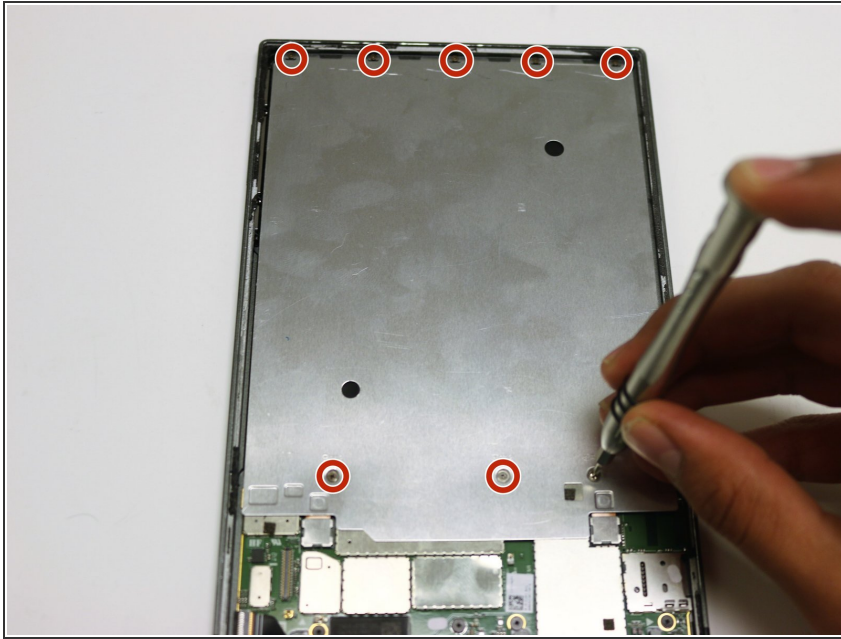

- Unscrew the eight 7 mm Philips #1 screws.

ⓘ After the screws are unscrewed, you can take off the silver cover.



Step 10

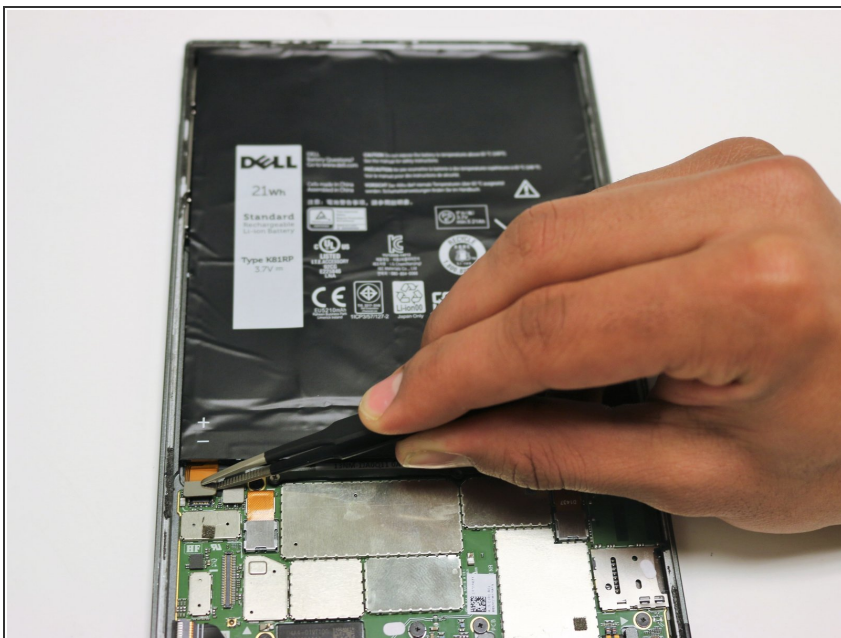

- Using tweezers, disconnect the battery from the tablet.


ⓘ After disconnecting the battery, you can remove the battery from the tablet.

Step 11 — Power and Volume Button

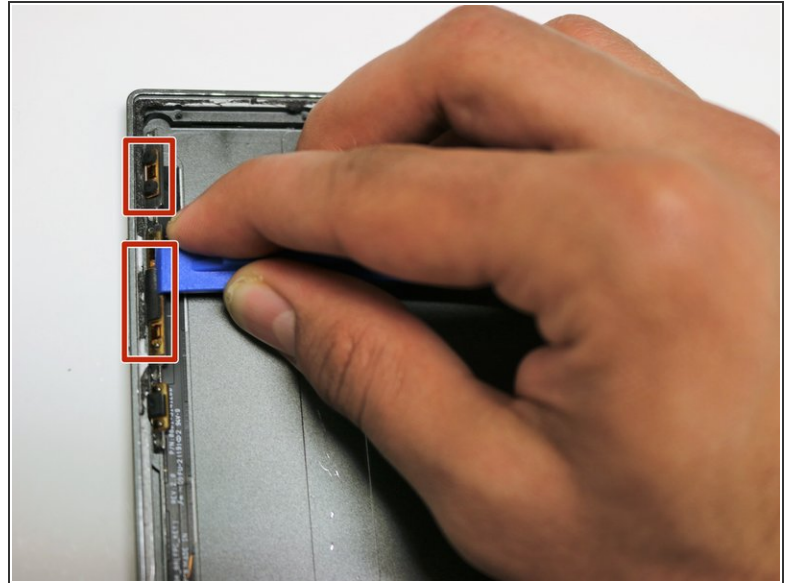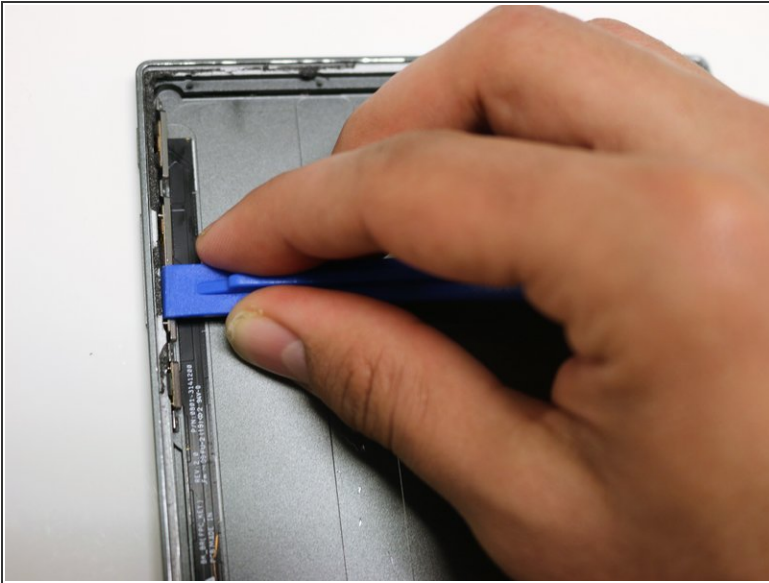


- Using a plastic opening tool, pry open the left side of the tablet.
- Locate the power and volume buttons.

Step 12

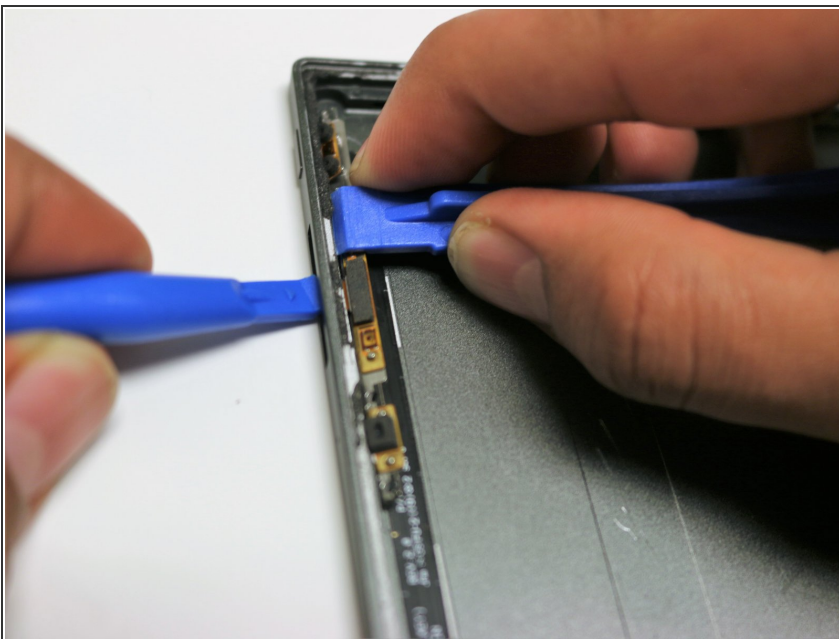


- Using a plastic opening tool, push out the volume button from the left side of the tablet.

Step 13

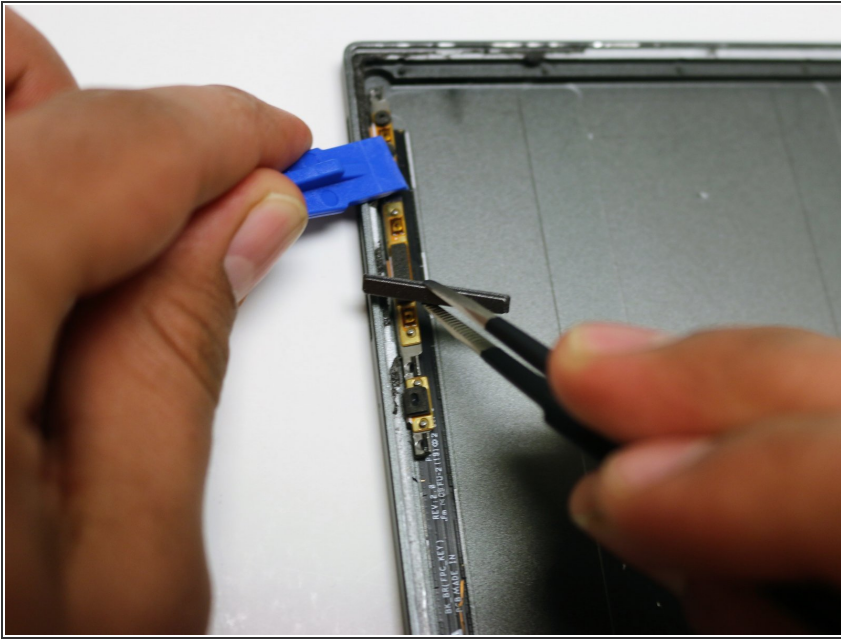


- ① Make sure that you hold the left side of the tablet open with a plastic opening tool so that you will be able to take out the volume button.
- With tweezers, pull out the volume button.

Step 14

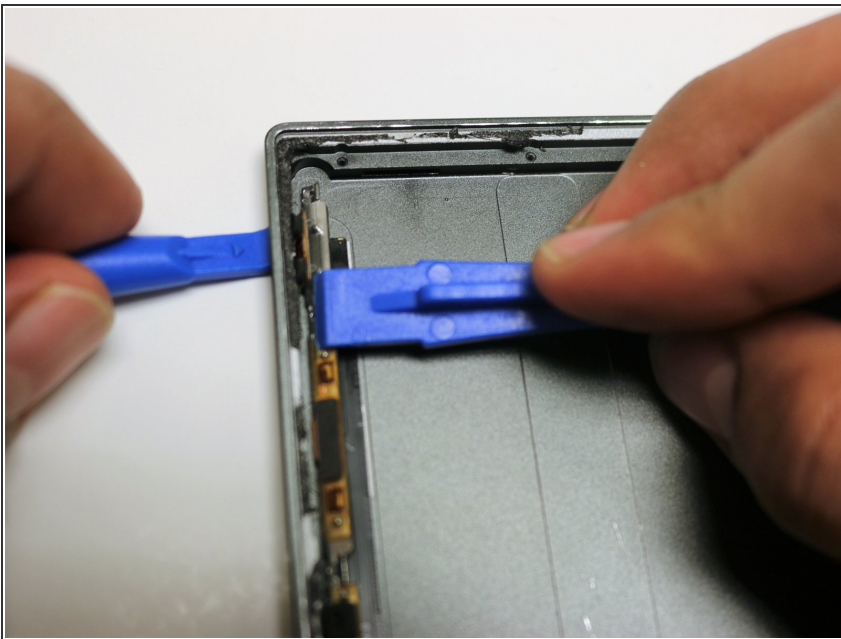

- With a plastic opening tool, push out the power button from the left side of the tablet.

Step 15

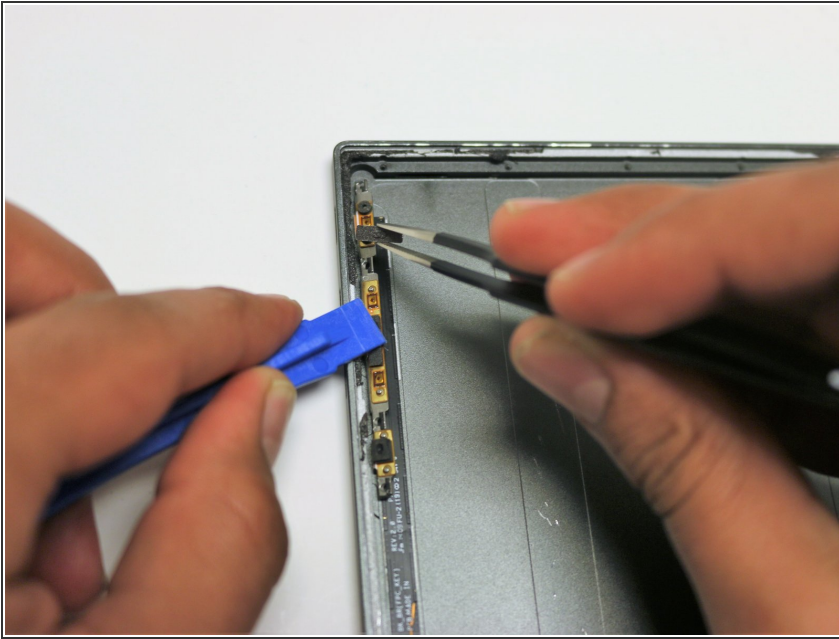

- ① Just like the volume button, you want to make sure that you hold the left side of the tablet open with a plastic opening tool so that you will be able to take out the power button.
- With tweezers, pull out the power button.

To reassemble your device, follow these instructions in reverse order.