



Monster Soundstage S2 Speaker Grille Replacement

This guide gives instructions for the removal of the front speaker grille.

Written By: Shaw Hughes



INTRODUCTION

Use this guide to replace the front speaker grille



TOOLS:


- [64 Bit Driver Kit](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker Grille



- Use a spudger or your fingers to pry off and remove the rubber pad on the bottom of the speaker.

Step 2

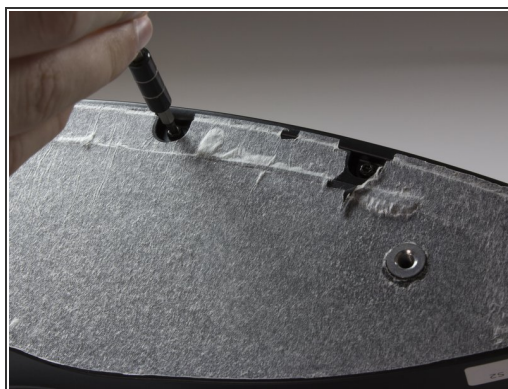

- Remove the five 10mm screws with a TR 10 screwdriver.
- Use a spudger to break the remaining adhesive holding the grille to the speaker body.

⚠ Be sure you don't bend the grille; it is not free from the speaker yet.

Step 3



- Flip speaker around and use a plastic opening tool to remove the top panel from the speaker.

Step 4



- Use a plastic opening tool to remove the foam and uncover four more screws.
- Use a TR 10 screwdriver to remove the five 10mm screws on the top of the speaker.

Step 5



- Carefully remove the top cover.

⚠ Be careful not to tear or stress the cable that provides power to the power LED.

Step 6




- Use a TR 10 screwdriver to remove two of the 10mm screws that secure the speaker grille.

⚠ Do not attempt to remove the grille just yet.

Step 7



- With the top panel removed, use a spudger to remove the display panel.

 The clips on the display panel are quite fragile. Pry up both edges of the display before attempting removal.

- Use a TR 10 screwdriver to remove the four final 10mm screws securing the speaker grille.

Step 8



- Remove the front speaker grille.

To reassemble your device, follow these instructions in reverse order.