


# Shark Rotator Powered Lift-Away Roller Brush Replacement

When the Shark Rotator Powered Lift-Away is...

Written By: Cameron Ngai

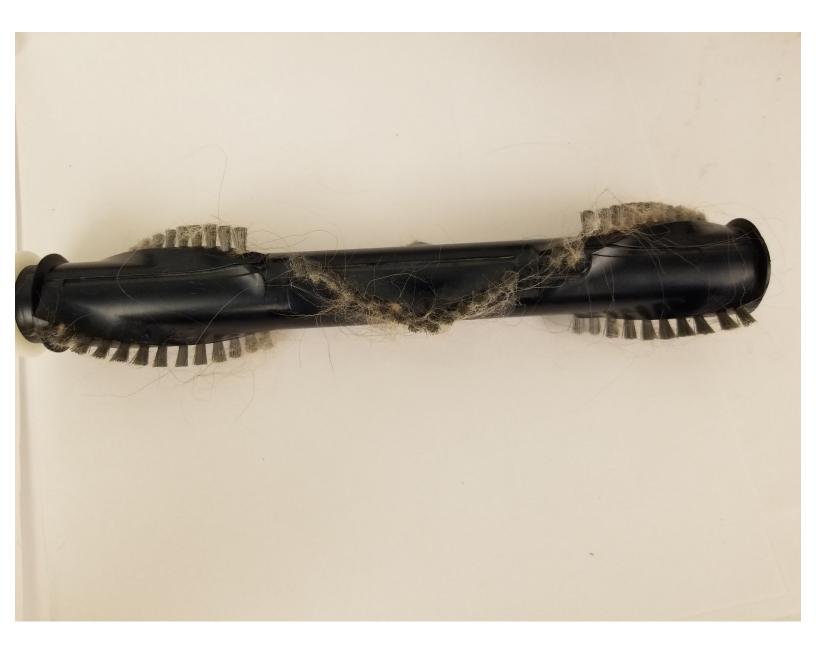

# INTRODUCTION


When the Shark Rotator Powered Lift-Away is difficult to maneuver or fails to pick up dirt, inspect the roller brush for clogs or damage. Excessive obstructions will cause the vacuum to not operate as intended.

# **TOOLS:**

• 64 Bit Driver Kit (1)

you will need the Phillips, Flathead, and Torx drivers for the disassembly.

#### Step 1 — Shark Rotator Powered Lift-Away Head Nozzle Disassembly

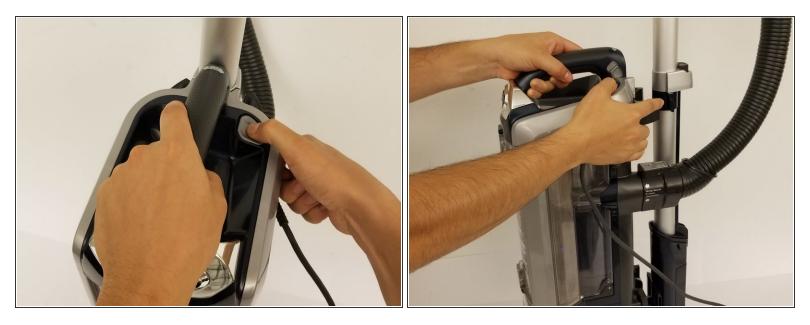

• Push the lift away button and pull the handle up to separate the body from the wand section.

#### Step 2



 Push lift away button on the wand then lift up on the top section to separate.



• Tilt the wand shaft backwards for convenient.


## Step 4



- Lay the head nozzle piece upside down.
- Rotate the three gray taps to the unlock position.



• With your fingers, pry and pull the brush cage open.

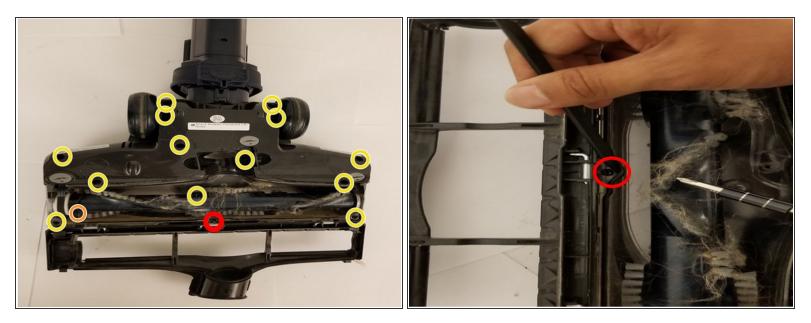

• Remove the 13 screws (circled in yellow) using a phillips screwdriver.


A Be sure to keep track of which screws go into which hole.

- Remove the one screw (circled in red) that has a Torx head (might be Phillips head on some models).
- The Torx screw is hidden under a rubber gasket. Carefully, lift up the gasket without damaging it to access this screw.
- Remove the horizontal screw (circled in orange) that attaches the gray side panel (necessary to remove the white cap on the roller brush in step 8)



• Lift up the top cover now that all of the screws have been removed.

#### Step 8 — Roller Brush

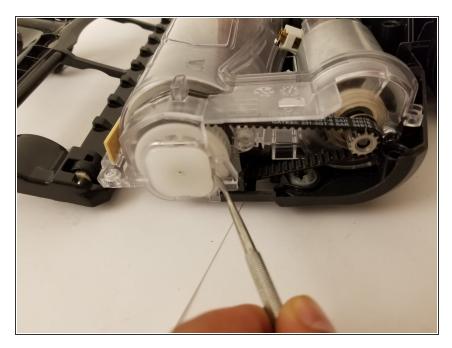


 Remove white cap with a Flathead screwdriver or any other wedge-like tool.



- Gently push piece in.
- Pull piece down and out of the container.

# Step 10

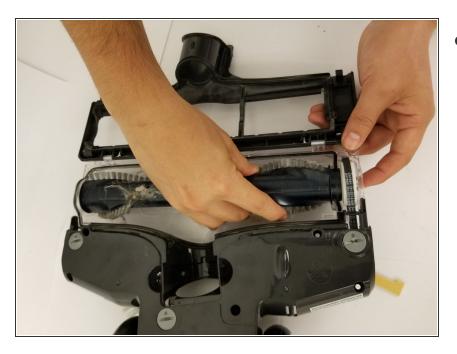

 Turn vacuum head over to remove brush.

To reassemble your device, follow these instructions in reverse order.