


# Acer Aspire One Cloudbook 11 AO1-131-C7DW Battery Replacement

If the life of your battery is significantly...

Written By: Luz Villegas

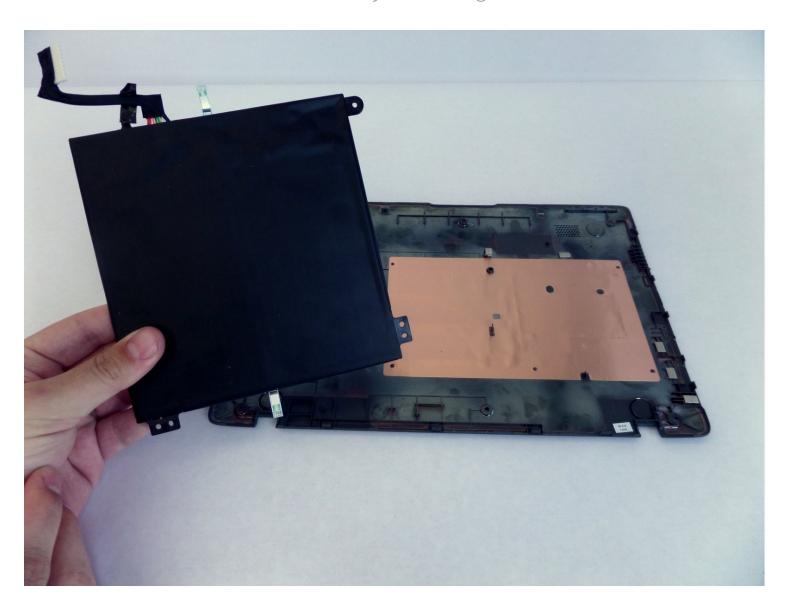

#### **INTRODUCTION**

If the life of your battery is significantly shortened, it may be damaged or old. This guide can help you replace the battery by yourself!

# TOOLS:

54 Bit Driver Kit (1) nylon pry tool (1) Tweezers (1)

### Step 1 — Back Panel







- Power the laptop off.
- Flip the laptop over and position it so the opening faces you.
- Remove the rubber foot located near the opening side of the device using tweezers.



Unscrew the five 5-mm screws using the PH0 screwdriver.

### Step 3




- Identify the HDMI port located in the side of the laptop opposite to the power button.
- Insert the plastic opening tool into the divet of the back panel located above the HDMI port.
- Pry along the laptop frame until the back panel comes loose.

⚠ Do not pull the back panel too hard as the battery is still connected to the back panel and the motherboard. This can damage your device.





- Rotate the device so the opening faces you again.
- Hold the back panel away from the laptop and remove the 4-mm screw using the PH0 screwdriver.
  - *i* This screw is fastening the battery to the laptop.
- Lift the back panel gently.

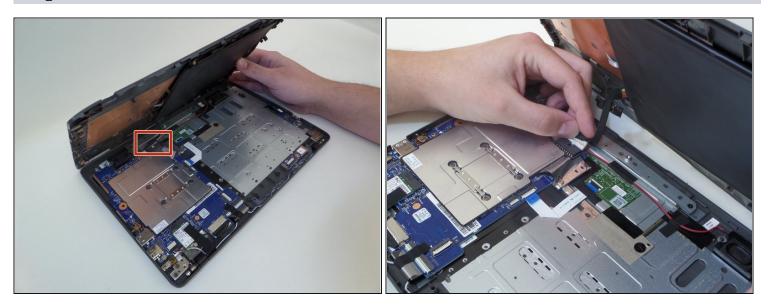

- Unplug the cable that connects the battery to the motherboard.
- Detach the back panel, which still includes the battery.

# Step 6 — Battery



- Flip the back panel so the battery faces down.
- Remove the rubber foot with tweezers.





- Remove the 5-mm screw that is located underneath the rubber foot using the PH0 screwdriver.
- Lift the battery and detach it from the back panel.

To reassemble your device, follow these instructions in reverse order.