



# Samsung Chromebook XE500C21-A03US

## Speakers Replacement

Replace faulty speakers in a Samsung Chromebook XE500C21-A03US.

Written By: huy



---

## INTRODUCTION

This guide will help you replace your speakers in your Chromebook by showing you step-by-step on how to remove it.


---


### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Precision Tweezers Set](#) (1)
-


## Step 1 — Back Cover



 Turn the power off before beginning this step.

-  Most Chromebooks contain rubber circle pads on each of the four corners to cover the screws. In order to remove the rubber pads, simply use any opening tool.
- Lay the Chromebook down so that the bottom cover is facing upward.
- Using a Phillips #00 screwdriver, remove all seven 5.5 mm screws from the back cover.

## Step 2

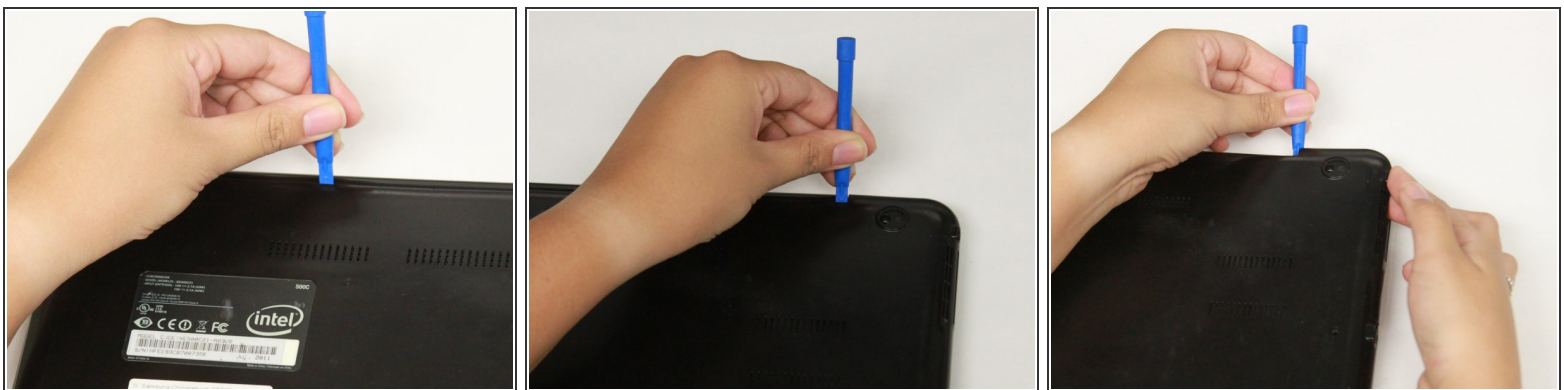

- Place the opening tool in the divot between the spine of the Chromebook and the back cover.
- Slowly glide and push down the end of the opening tool along all sides of the Chromebook to detach the brackets. You will hear the brackets detach.





## Step 3



- Using the opening tool, pry off the back cover of the Chromebook


⚠ Be gentle while prying to avoid breaking the back cover.

## Step 4 — Speakers

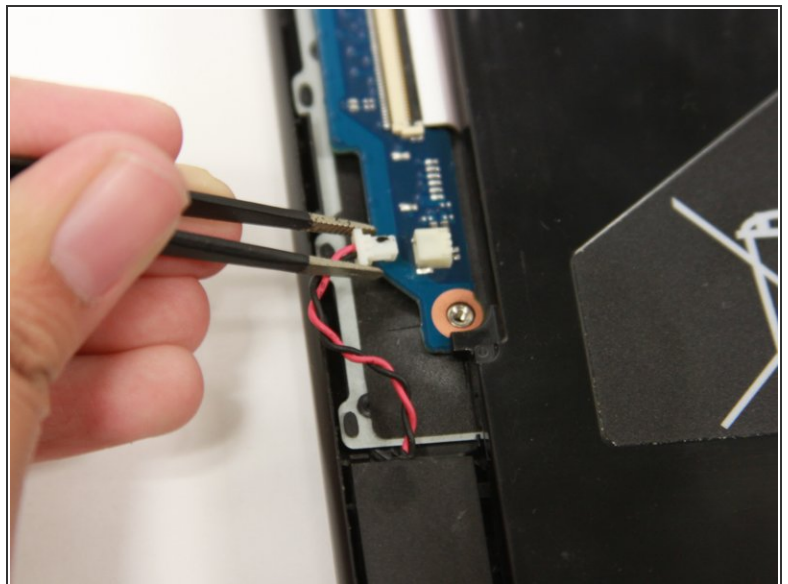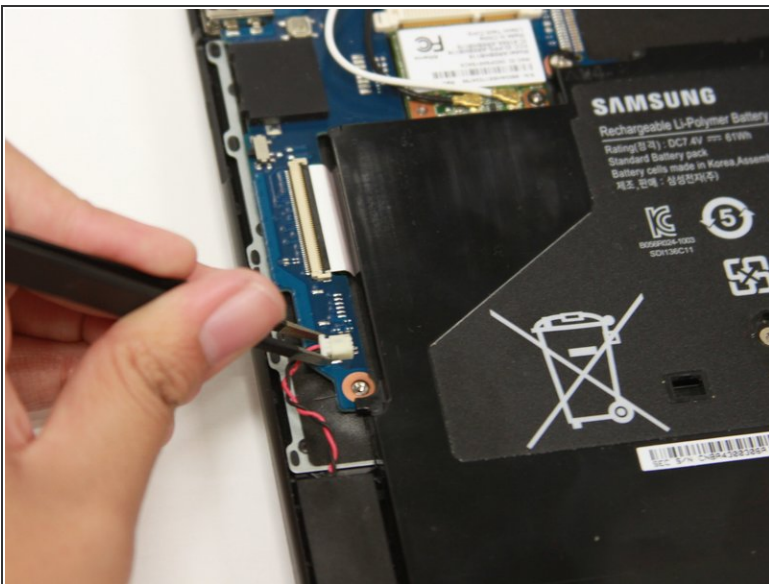

- Use a blunt precision tweezer to remove the speaker cord from the R.A.M.

## Step 5

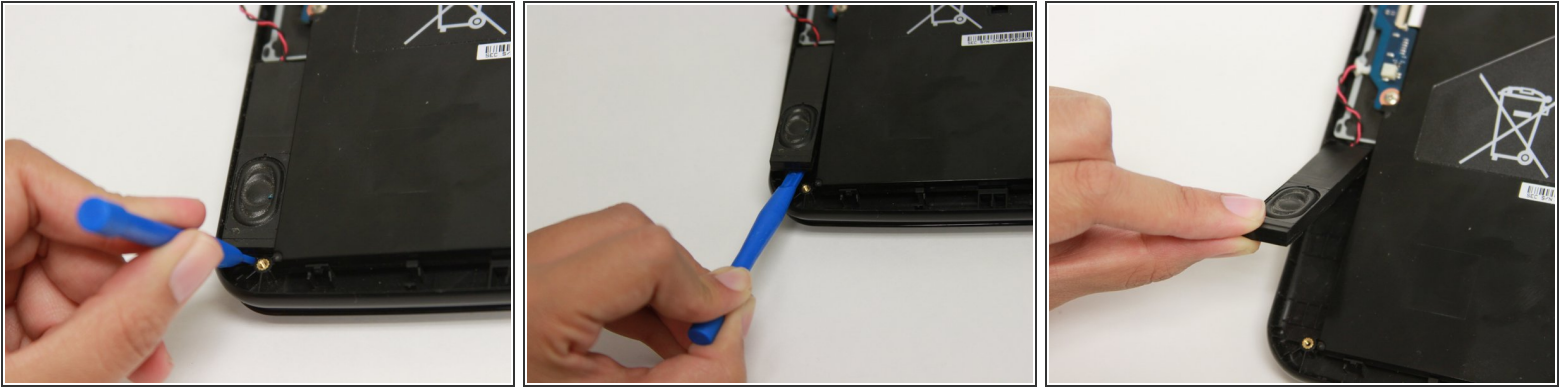

- Use the prying tool to find the divot then slowly add pressure until the speaker pops out.
- Gently lift and remove the speaker from the Chromebook.

To reassemble your device, follow these instructions in reverse order.