



# Dell Inspiron 15-7569 Display Replacement

This guide will help you remove your device's display.

Written By: Matthew Clements



# INTRODUCTION

If your display has stopped working or has been cracked, follow this guide to replace it.



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Metal Spudger](#) (1)



## PARTS:


- [Dell Inspiron 15 \(7569\) 15.6" TouchScreen LCD Display](#) (1)

## Step 1 — Back Cover



- Remove the (10) P58F black screws on the back cover using the Phillips #0 screwdriver.
- After removing the screws, remove the back cover using a plastic or metal spudger.

## Step 2 — Display

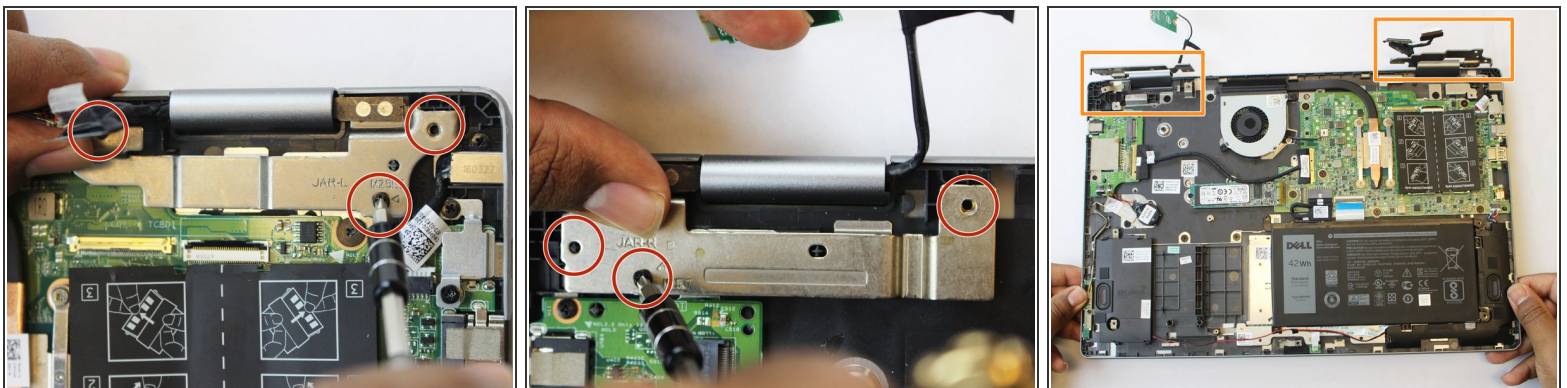

- Unscrew screws on gray clamps. One screw is located near the fan, one is located near the RAM.
- Remove all parts connected to the hinges.
- Snap off the hinges.

To reassemble your device, follow these instructions in reverse order.