

iPhone X SIM Card Replacement

Use this guide to remove or replace the SIM card in an iPhone X.

Written By: nicolay.94



INTRODUCTION

Use this guide to remove or replace the SIM card or SIM card tray in your iPhone X.



TOOLS:


• SIM Card Eject Tool (1)



PARTS:

• iPhone X SIM Card Tray (1)

Step 1 — SIM Card

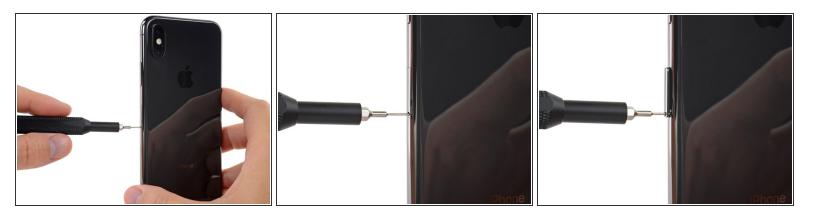

- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray, located near the side button on the edge of the iPhone.
- Press firmly to eject the tray.

Step 2





- Remove the SIM card tray from the iPhone.
 - (i) The SIM card will fall out of the tray easily.
- ₩ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.
- A thin rubber gasket around the SIM tray provides water and dust protection. If this gasket is damaged or missing, replace the gasket or the entire SIM tray to protect your iPhone's internal components.

To re-assemble, just reinsert the SIM card.