

Google Pixel 3a XL Screen Replacement

This repair guide was authored by the iFixit...

Written By: Taylor Dixon





INTRODUCTION

Google Pixel 3a XL Screen Replacement

This repair guide was authored by the iFixit staff and hasn't been endorsed by Google. Learn more about our repair guides here.

Follow this guide to replace a cracked or broken Pixel 3a XL screen, or to get inside the phone and replace a different component.

The OLED display under the glass of the 3a XL screen is fragile—if you plan to re-use your screen after you remove it from your phone, take extra care and follow the directions of this guide closely.



TOOLS:

- iOpener (1)
- Suction Handle (1)
- iFixit Opening Picks (Set of 6) (1)
- Tweezers (1)
- Spudger (1)
- T3 Torx Screwdriver (1)



PARTS:

- Google Pixel 3a XL Screen Genuine (1)
- Google Pixel 3a XL Display Adhesive -Genuine (1)
- Google Pixel 3a XL Display Cable Tape -Genuine (1)

Step 1 — Screen








- in the following steps, you will be removing the Pixel 3a's screen by cutting through the adhesive holding it in place.
- For reference, the backside of the screen is shown in this step.
 - Note the narrow clearance between the edge of the screen and the OLED panel under the glass. If you plan to re-use your screen, be sure to follow the instructions below closely.
- Also note the two different seams between the body of the phone and the screen:
 - The *screen seam*: where the screen meets the rest of the phone. This is where the screen will separate, and where you should pry.
 - The midframe seam: where the midframe meets the body of the phone. This part is held down by screws. Do not pry at this seam.





Place a suction cup on the right edge of the screen, just below the volume button.

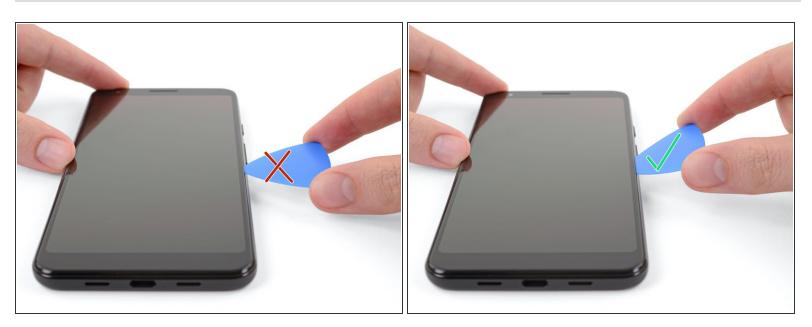

- in the next step you will insert an opening pick between the screen and the plastic body of the phone.
- If you aren't careful, the plastic opening tool can damage the fragile OLED display panel underneath the glass.
- If you want to re-use your phone's screen, make sure you insert your pick at a downward angle, as shown in the second photo of this step.
 - This will ensure the opening pick slides *under* the OLED panel rather than *between* the glass and the panel, which will ruin the screen.







- Pull up on the suction cup with a strong, steady force to create a gap between the screen and the phone.
- Insert your opening pick into the gap.
 - Stop if you feel the tip of the pick hitting against something. The pick may be pressing against the edge of the OLED panel. Angle the pick downward and try again.
- (i) Once you have inserted an opening pick, you can remove the suction cup.

Step 5







 Once the pick is inserted, slide it up and down along the right edge of the phone to cut though the adhesive holding the screen in place.



- i The adhesive holding the top and bottom edges of the screen in place is thicker, and considerably stronger than the thin strips holding the sides in place.
- If you plan to reuse your screen, heat up the top edge of the phone with an <u>iOpener</u>, a heat gun, or a hair dryer to loosen the adhesive there before you begin slicing.








- Carefully slide your opening pick around the upper-right-hand corner of the screen.
- (i) As shown in <u>step one</u>, the gap between the display and the edge of the glass screen is larger here than on the sides.
 - If you plan to reuse your screen, take special care in this step to either keep your pick deep in the phone under the OLED display (as shown in this step's photos), or only insert it 5 mm into the device to avoid coming into contact with the display under the glass.



- Continue to separate the adhesive along the top edge of the display.
- (i) As you slice along this edge, you may bump into the <u>camera and proximity sensor</u> housed here. Don't pry aggressively, just work around them.

Step 9

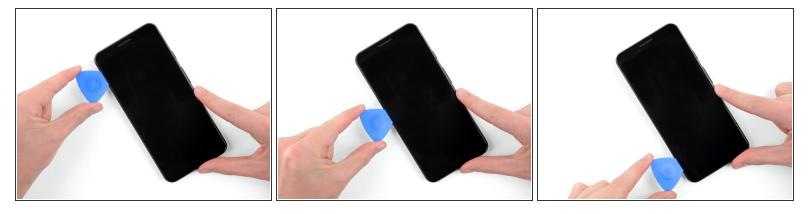

Slide your opening pick down the left side of the phone to separate the adhesive there.



- i The adhesive holding the bottom edge of the screen in place is thicker, and considerably stronger than the thin strips holding the sides in place.
- If you plan to reuse your screen, heat up the bottom edge of the phone with an <u>iOpener</u>, a heat gun, or a hair dryer to loosen the adhesive there before you begin slicing.









- Slide your opening pick along the bottom edge of the phone to separate the last of the adhesive holding the screen in place.
- (i) As shown in <u>step one</u>, the gap between the display and the edge of the screen is larger here than on the sides.
 - If you plan to reuse your screen, take special care in this step to either keep your pick deep in the phone under the OLED display (as shown in this step's photos), or only insert it 5 mm into the device to avoid coming into contact with the display under the glass.
- Don't try to remove the screen yet! It is still connected to the phone by a display cable.






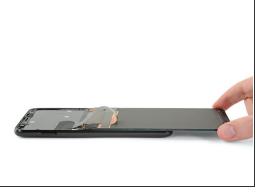

- Lift the screen by its top edge (where the front-facing camera is) and carefully flip it 180° so that the screen is resting face-down on the phone.
- (i) If you plan to reuse your screen, be careful not to stress the display cable during this step.

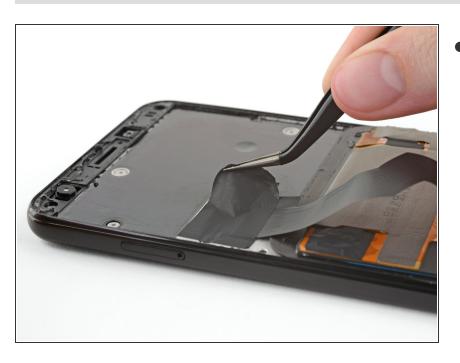

- Use tweezers to remove the black sticker covering the display cable bracket.
- If the sticker is in good condition, you can reuse it during reassembly. Otherwise, you can replace it with a piece of electrical tape.

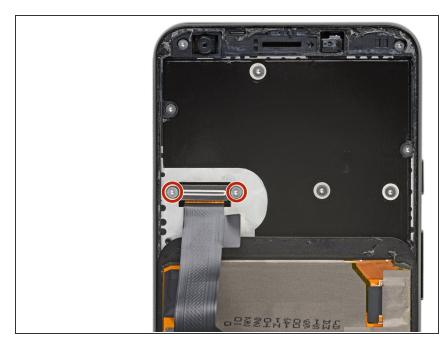

- Remove the two 4.3mm T3 screws holding the display cable bracket in place.
 - Due to manufacturing tolerances, a T4 Torx driver may fit better into these T3 screws.
- Throughout this repair, keep track of each screw and make sure it goes back exactly where it came from.








- Remove the display cable bracket.
- Pry up on the cable connector with the pointy end of a spudger to disconnect the screen from the phone.
 - (i) When you disconnect connectors like these, be careful not to dislodge the small surfacemounted components surrounding the socket.
- To re-attach <u>press connectors</u> like this one, carefully align and press down on one side until it clicks into place, then repeat on the other side. Do not press down on the middle. If the connector is misaligned, the pins can bend, causing permanent damage.



- Remove the screen from the phone.
- Compare your new replacement part to the original part. You may need to transfer remaining components such as the speaker grille and the camera bracket to the new part.





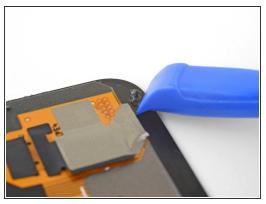

- To reinstall the screen:
 - Use tweezers or an opening tool to remove all traces of adhesive from the phone frame. You
 can use high concentration isopropyl alcohol to help with the cleaning.
 - If you plan to re-use the screen, be sure to remove all adhesive residue from the screen. Be careful with metal tools to avoid scratching the screen.
 - Apply pre-cut adhesive or double-sided tape (such as <u>Tesa tape</u>) to re-attach the screen to the frame.
- During the boot-up process after reassembly, the screen will go through a calibration sequence. Do not touch the screen during this process, as it could result in improper touch calibration and create touch issues.

If your Pixel won't turn on after replacing the screen, there is a chance that the phone has silently turned on when the battery is re-connected. Hold the power button for a few seconds until the phone vibrates off. Afterwards, re-connect the screen, and try again.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an R2 or e-Stewards certified recycler.

Repair didn't go as planned? Check out our <u>Google Pixel 3a XL Answers community</u> for troubleshooting help.