



# How to Force Restart a Pixel 4 XL

Follow this simple step to restart an unresponsive Pixel 4 XL.


Written By: Arthur Shi



## INTRODUCTION

If your Pixel 4 XL has become unresponsive, the first thing you can do is to try a force restart. Doing so does not reset the phone to factory defaults, and will not delete user data.

## Step 1 — How to Force Restart a Pixel 4 XL

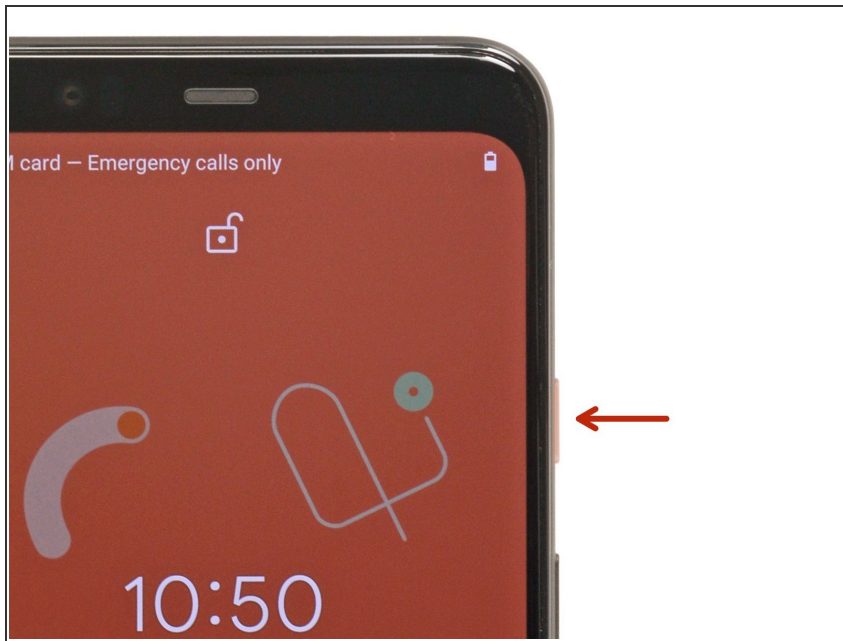

- Press and hold the power button until the phone turns off and restarts.