




# iPhone SE 2020 SIM Card Replacement

Eject the SIM card tray to replace the network SIM card in your iPhone SE 2020.

Written By: Adam O'Camb

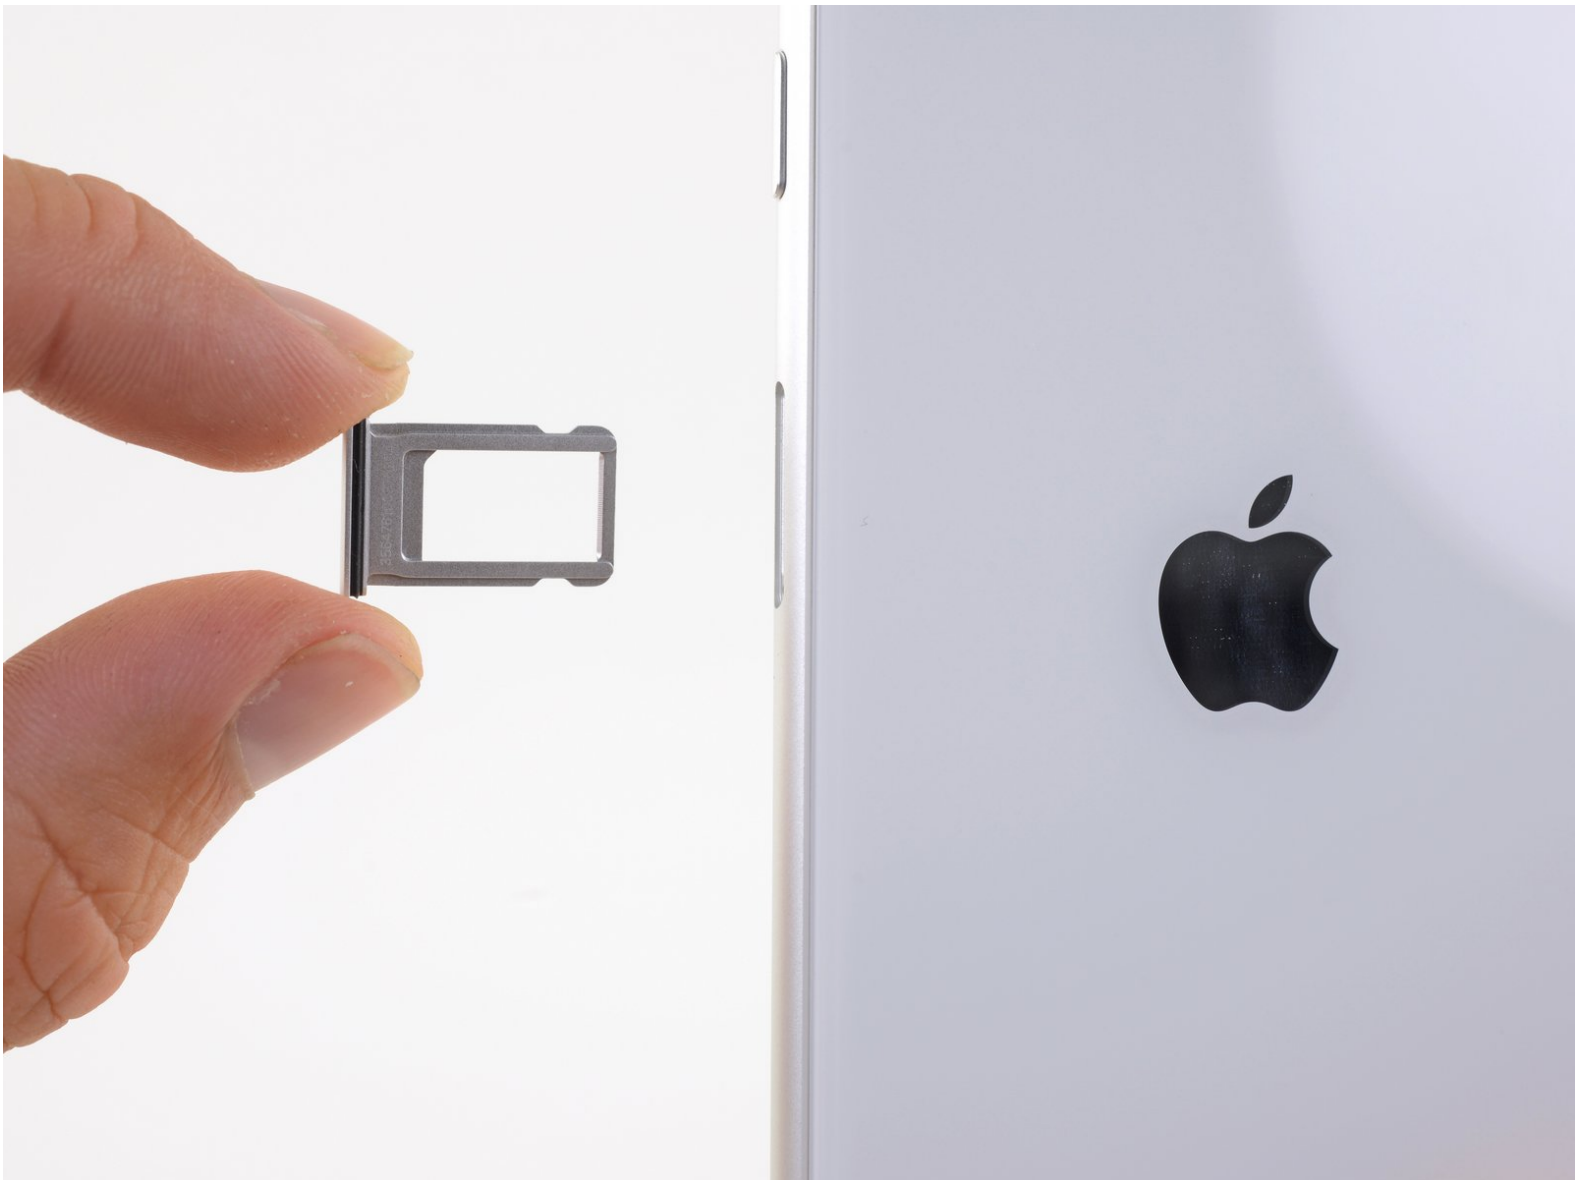

---

## INTRODUCTION

This guide shows how to remove the SIM card tray to replace the network SIM card in the iPhone SE 2020.



### TOOLS:


- [SIM Card Eject Tool](#) (1)
-

## Step 1 — Remove the SIM card tray



- Insert a SIM card eject tool, bit, or a straightened paperclip into the small hole in the SIM card tray.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

## Step 2

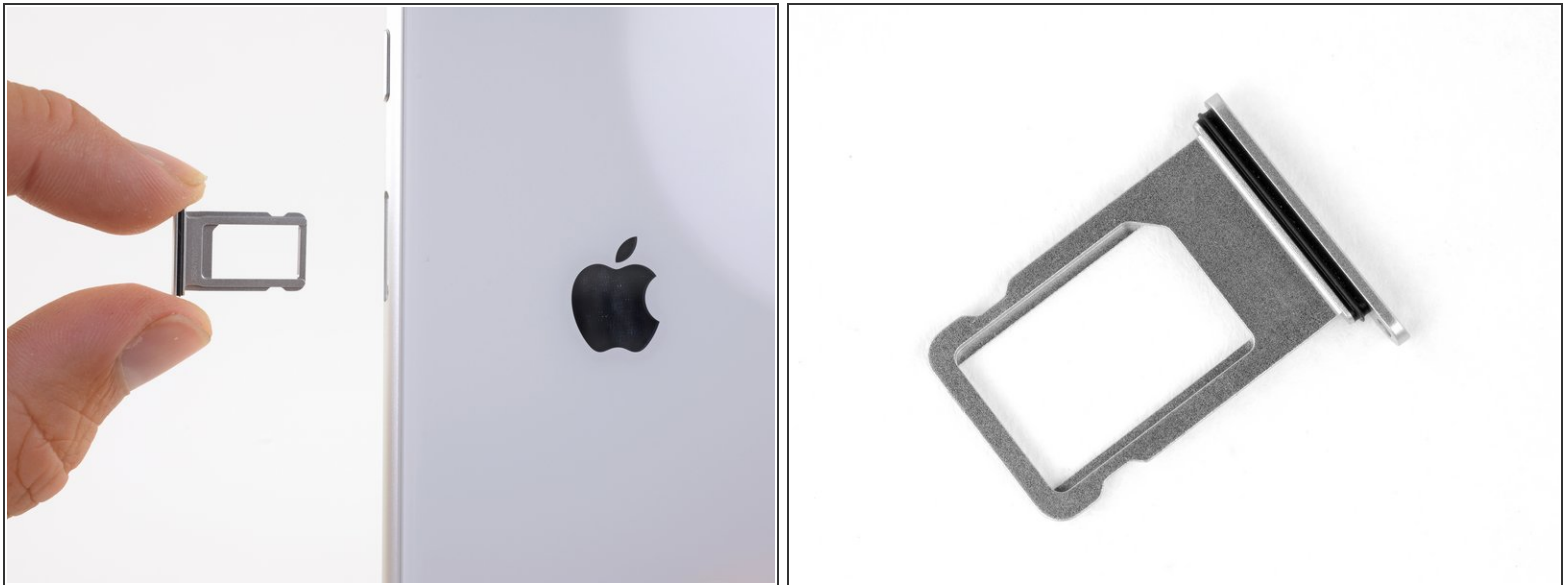

- Remove the SIM card tray from the iPhone.
  - ⓘ The SIM card will fall out of the tray easily.
- ✦ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.
- ✦ A thin rubber gasket around the SIM card tray provides water and dust protection. If this gasket is damaged or missing, replace the gasket or the entire SIM card tray to protect your iPhone's internal components.

To reassemble your device, follow these instructions in reverse order.