


Lenovo ThinkPad Yoga Screen Replacement

Written By: Michael Nessralla



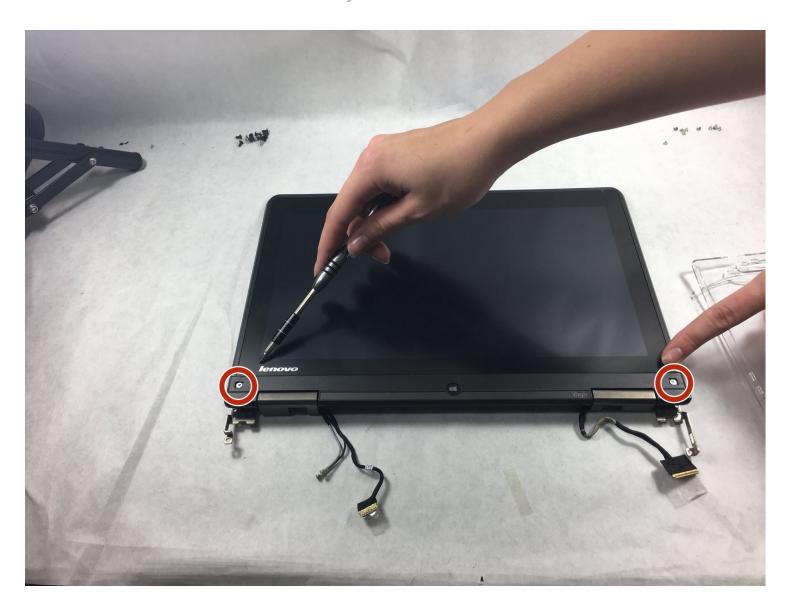

iFixit Opening Tool (1) Phillips #0 Screwdriver (1) Phillips #1 Screwdriver (1) Spudger (1)

PARTS:

5D10N24290 - Lenovo Laptop LCD Touch Screen Digitizer Assembly -Genuine (1) 00UP940 - Lenovo Laptop LCD Screen -Genuine (1)

Step 1 — Battery








- Flip the laptop over so the bottom is facing you.
- Remove the ten screws using a Phillips #1 screwdriver.
- Using the plastic opening tool, pry the bottom cover off the laptop.

Step 2

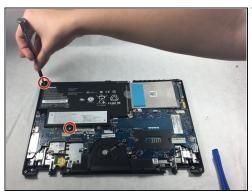





- Remove two screws from the battery using a Phillips #1 screwdriver.
- Disconnect the battery connector from the motherboard.
- Remove the battery from the laptop.

Step 3 — Screen







- Remove two screws under the plastic covers on the front of the screen using a Phillips #0 screwdriver.
- Pry the plastic cover off with a spudger.
- Remove the two screws from underneath the cover using a Phillips #0 screwdriver.
- Detach the screen connector from the rest of the laptop.

Step 4



• Remove the screen from the rest of the laptop.

To reassemble your device, follow these instructions in reverse order.