



# How to Install an HID Conversion Kit

This is an installation guide to demonstrate how to install an HID Conversion Kit to convert your headlights or fog lights to HID.

Written By: Eric Wu



---

## INTRODUCTION

If you're tired of your halogen headlights or fog lights and want to upgrade to something with a better output, try installing an HID Conversion Kit.


---



### PARTS:


- [HID Conversion Kit in 6000K or 8000K](#) (1)
  - [HID Conversion Kit from 4300K](#) (1)
-

## Step 1 — Headlights

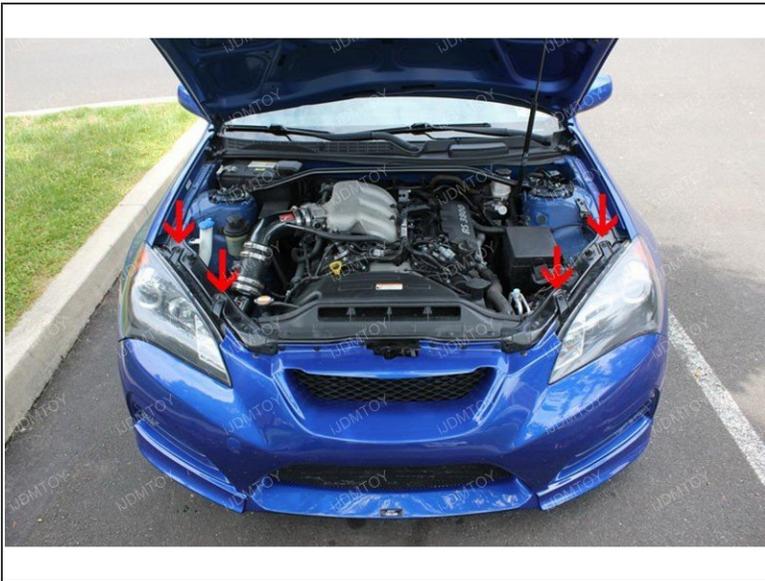

- Open the hood.
- Locate the back of the headlights and remove the bolts holding the headlight housing.

## Step 2

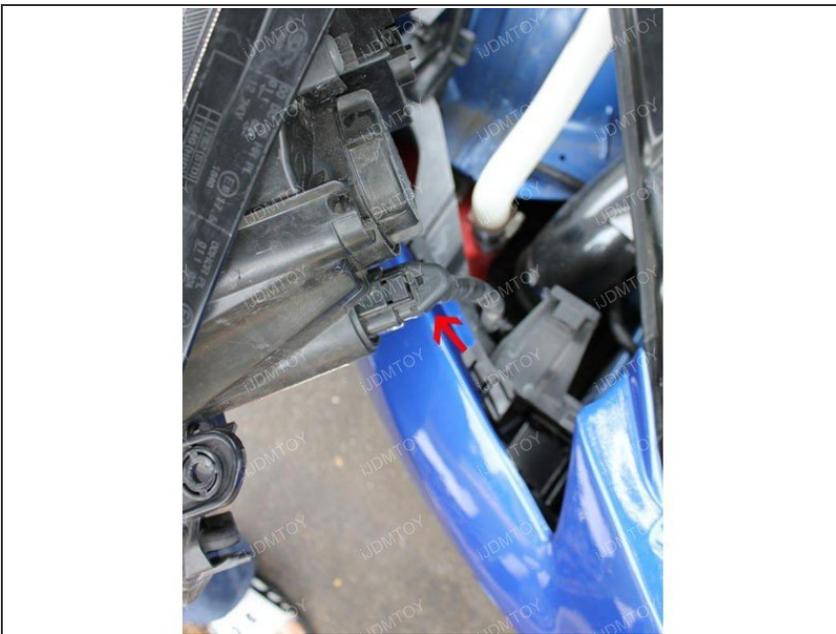

- Unplug the stock harness and remove the headlights.

### Step 3




- Remove battery negative terminal.
- Remove headlight cover and remove factory halogen bulb.

### Step 4




- Take out the HID bulb from the plastic shell and remove the circular plastic piece.
- Remember not to touch the HID bulb glass!
- If you accidentally touch it, you can clean it with some rubbing alcohol.

## Step 5

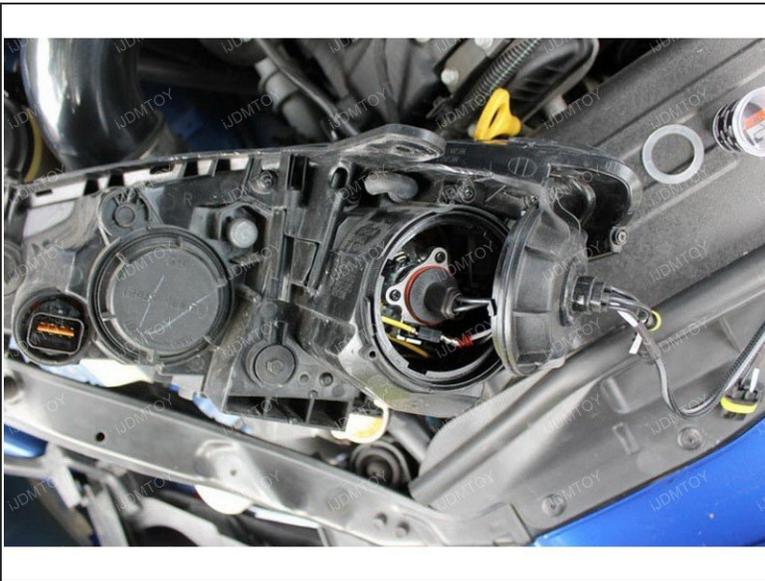

- Screw in the HID bulb back into the headlight housing.
- Connect the wires of the HID bulb to the ballast and then connect the HID ballast back to the stock harness.

## Step 6

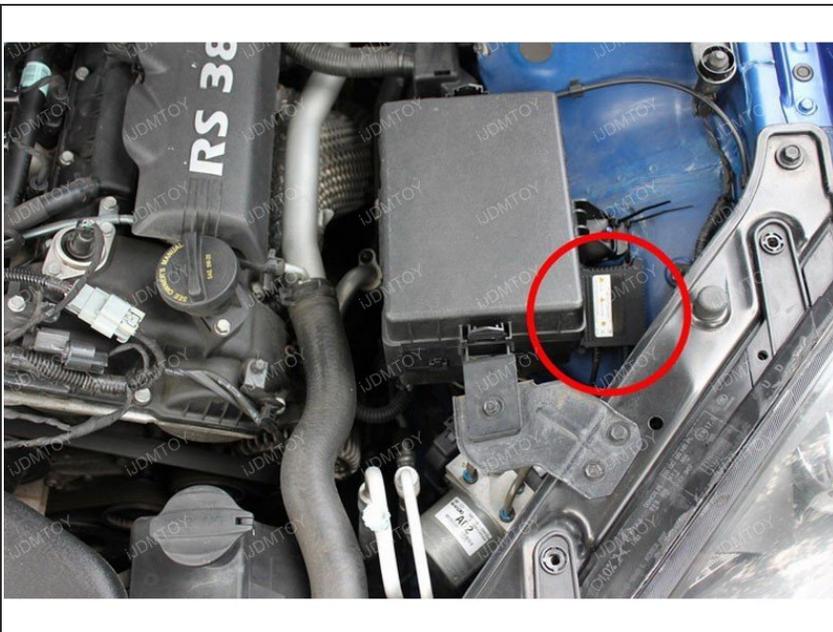

- Before you mount the ballast, test the HID light to make sure it lights up.
- If not, turn the adapter wire 180 degrees.
- Mount the HID ballast with zip ties.

## Step 7



- Put everything (like the headlight housing) back.
- Enjoy!

Enjoy your new HID Conversion Kit and upgraded headlights or fog lights.