



Huawei Ascend G610 Ear speaker Replacement

A guide to replace your ear speaker for your Huawei Ascend G610.

Written By: Smilzo



INTRODUCTION


If your ear speaker on your Huawei Ascend G610 is broken, follow this guide.

Step 1 — Ear speaker



- Remove the back cover.

Step 2

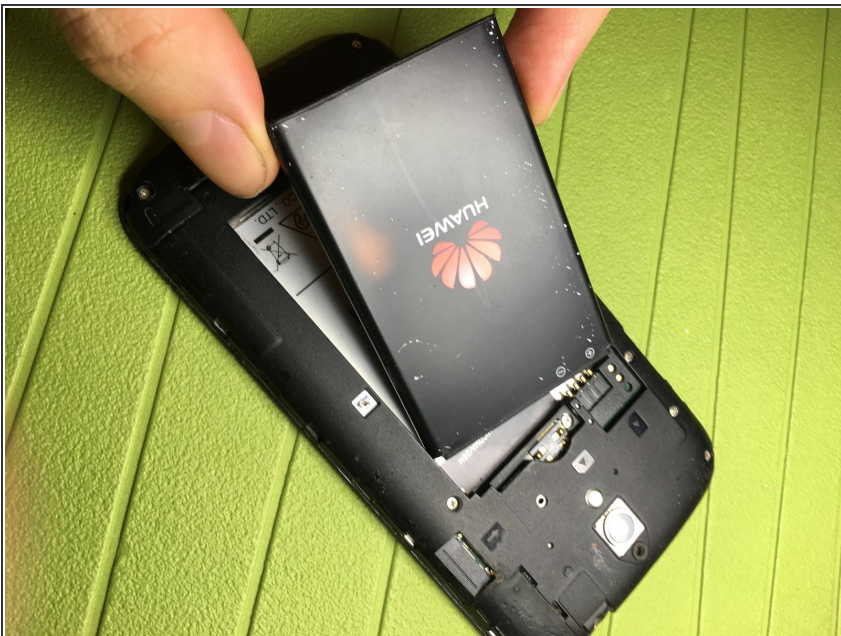

- Remove the battery.

Step 3




- With a cross-head screwdriver remove 9 side screws that secure the back case.
- Remove the adhesive to find the underlying screw.
- Remove the shortest central screw near the SIM card slot.
- With the help of a thin tool, pry open the back case.

Step 4



- Remove the display connector.

Step 5

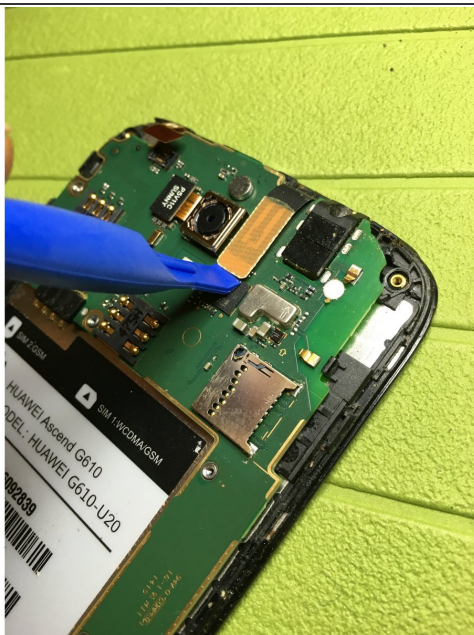

- Remove the touch screen digitizer connector.

Step 6




- Remove the ambient light sensor connector.

Step 7




- Unplug the connector that joins the main motherboard with the dock.

Step 8

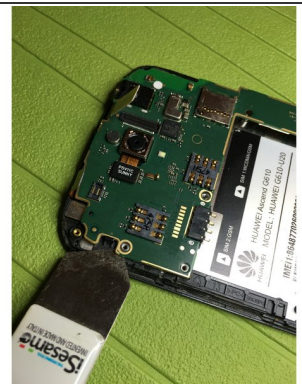

- Unplug the motherboard securely fastened at 3 points and remove it.

Step 9

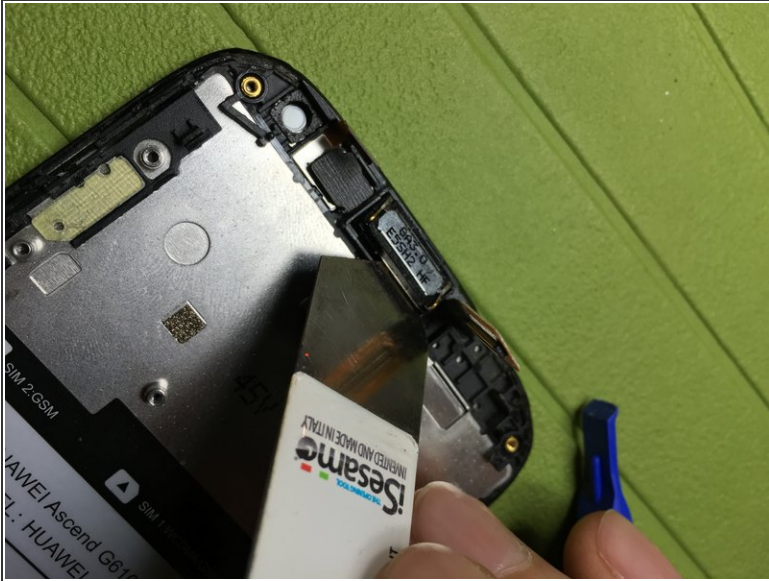

- With the help of a heat source to loosen the adhesive, remove the broken ear speaker and replace it with the new one.

To reassemble the device, follow these instructions in reverse order.