

MacBook Air 11" Mid 2011 Battery Replacement

Written By: Walter Galan



This document was generated on 2020-11-28 02:19:43 AM (MST).


INTRODUCTION

Internal Prerequisite.



This document was generated on 2020-11-28 02:19:43 AM (MST).

Step 1 — Battery

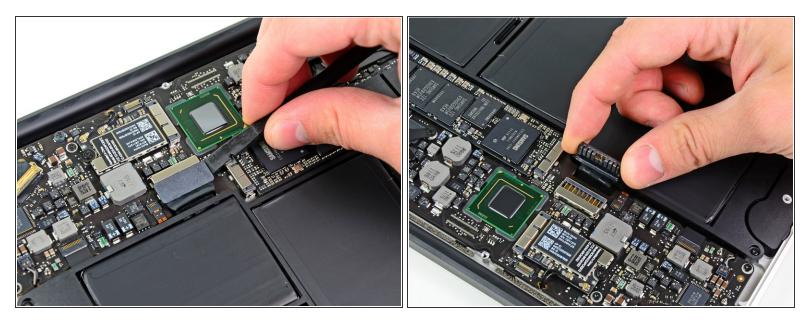

- In this step you will disconnect the battery to help avoid shorting out any components during service.
- Use the flat end of a spudger to pry both short sides of the battery connector upward to disconnect it from its socket on the logic board.
- Bend the battery cable slightly away from the logic board so the connector will not accidentally contact its socket.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 02:19:43 AM (MST).