



iPhone 4S Battery Replacement

This guide consists of instructions on how to...

Written By: Cole Anello



INTRODUCTION

This guide consists of instructions on how to replace the battery in an iPhone 4S.


TOOLS:


[Pro Tech Toolkit](#) (1)

PARTS:

[iPhone 4S Battery](#) (1)

Step 1 — Pentalobe Screws

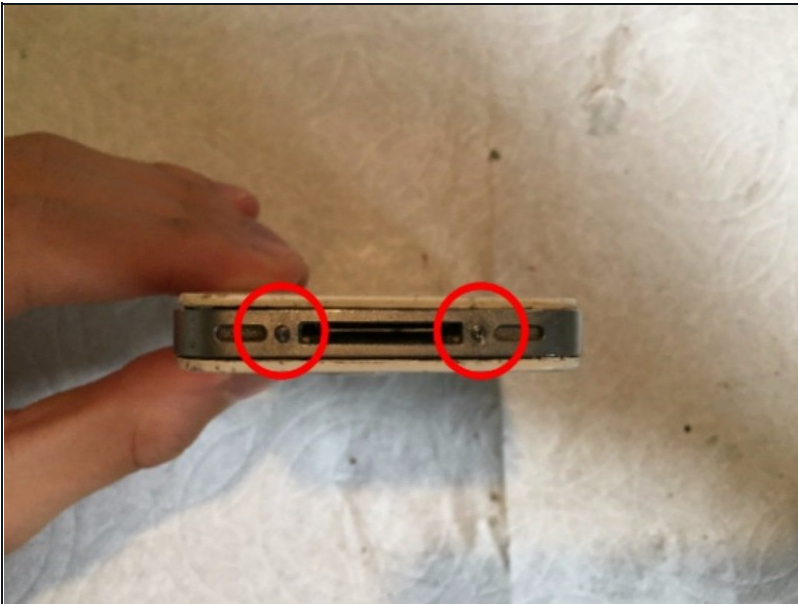

- Remove the Bottom Pentalobe Screws next to the charger connector.
- ☒ It is recommended that you use a small 5-Point screwdriver.
-  Remember to make sure your iPhone is fully turned off before tearing it down, to prevent serious injury.

Step 2 — Back Panel Removal




- Push the back panel towards the top edges of the iPhone. Doing this should allow the back to slide off.

⚠ Do NOT apply so much pressure. Especially if your iPhone is cracked.

☑ Do not rush it! Time is key.

Step 3 — Battery Screws

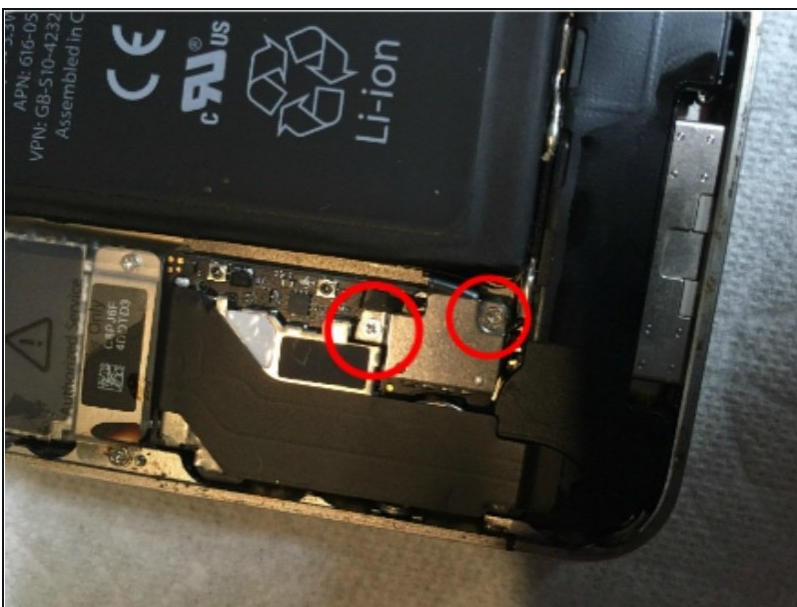

- Remove these two screws that are securing the battery connector to the Logic Board.

⚠ Remember to focus and pay attention. So you don't accidentally slip and pierce the Battery!

ⓘ For the bottom screw, it is recommended that you use a 1.5 mm Screwdriver, and a 1.7 mm for the top screw.

Step 4 — Battery Strip



- Locate and pull the Plastic tab to pull out battery. Make sure to pry up outsides of battery on other sides as well.

⚠ Do not pull the plastic tab too hard, as it can easily rip!

Step 5 — Battery Removal



- Carefully remove the battery.

✦ Remember, if you are replacing your battery, remember to perform a hard reset on your iPhone once it's all finished.

To reassemble your device, follow these instructions in reverse order.