

MacBook Air 13" Late 2020 USB-C Board Replacement

Use this guide to remove or replace the USB-C...

Written By: Carsten Frauenheim



INTRODUCTION

Use this guide to remove or replace the USB-C board in a Late 2020 MacBook Air (M1).



TOOLS:

P5 Pentalobe Screwdriver Retina MacBook Pro and Air (1)

Spudger (1)

Tweezers (1)

T5 Torx Screwdriver (1)

T3 Torx Screwdriver (1)

T4 Torx Screwdriver (1)



PARTS:

MacBook Air 13" (Late 2018-Late 2020) USB-C Board (1)

Step 1 — Remove the screws securing the lower case



- Before starting this procedure, you should disable your Mac's **Auto**Boot feature. Auto Boot powers on your Mac when you open the lid, and may be accidentally triggered during disassembly. Use this guide to disable Auto Boot.
 - If your MacBook is running Big Sur v11.1 or later, disabling Auto Boot may not work. You can proceed normally, but make sure to disconnect the battery as soon as you're inside.
- ⚠ Completely power off and unplug your MacBook before you start. Close the display and flip the entire laptop upside-down.
- Use a P5 driver to remove the following screws:
 - Two 7.9 mm screws
 - Two 7.3 mm screws
 - Six 2.6 mm screws
- i Throughout this repair, keep track of each screw and make sure it goes back exactly where it came from to avoid damaging your MacBook.

Step 2 — Remove the lower case







- Wedge your fingers between the display and the lower case and pull upward to pop off the lower case.
- Remove the lower case.
- To reinstall the lower case:
 - Set it in place and press firmly to engage the two hidden clips underneath. You should feel and hear them snap into place.

Step 3 — Disconnect the battery








- Use the flat end of a spudger to pry up and unlatch the metal locking arm on the battery connector.
 - Make sure the metal arm is completely free of the locking tab before lifting the battery connector. The metal locking arm should easily unlatch.
- Lift straight up on the metal locking arm to pull the battery connector out of its socket on the logic board.
- During reassembly, press the battery connector straight down into its socket, making sure it sits flush within the socket.
 - If necessary, push the rear, wire side of the connector into place first, then rock the front of the connector into place.

Step 4 — Disconnect the USB-C board

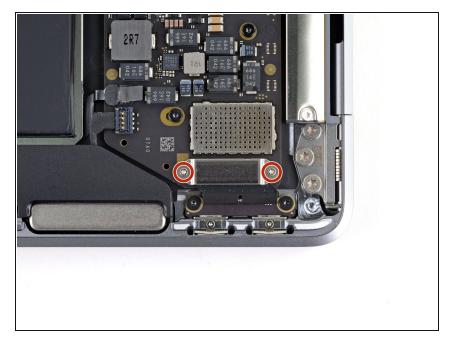


- Use a T3 Torx driver to remove the two 1.4 mm screws securing the USB-C connector cover.
 - if your T3 bit feels a bit too loose, you may need to use a T4.

Step 5




Remove the USB-C connector cover.

Step 6

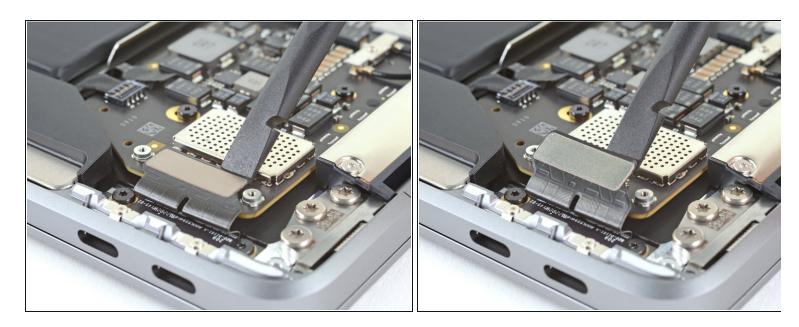


 Use the flat end of a spudger to pry the USB-C cable connector up and out of its socket on the logic board.

Step 7 — Remove the USB-C board

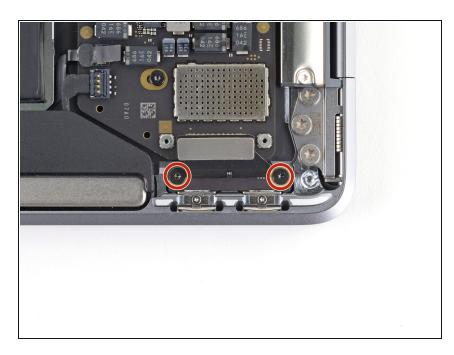

 Use a T5 Torx driver to remove the two 2.9 mm screws securing the USB-C board.

Step 8

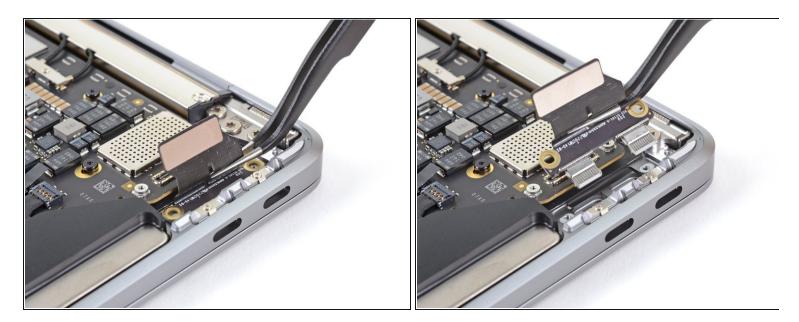

Use a pair of tweezers to remove the USB-C board.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

To reassemble your device, follow the above steps in reverse order.

Once you've completed your repair, your laptop may not power back on until connected to power.

Take your e-waste to an R2 or e-Stewards certified recycler.

Repair didn't go as planned? Check out our **Answers community** for troubleshooting help.